

# Everglide 940V6

## Mode Setting & Pairing

Bluetooth Pairing: Turn the toggle to “BT”, long press FN+1/2/3 (connected up to 3 devices) for 3 seconds to enter pairing mode.

Wireless Pairing: Turn the toggle to wireless icon, long press FN+4 for 3 seconds to enter pairing mode.

## Fn Combination

	Combination Key	Function	Description
FN +	ESC	Factory Reset	Hold for 3 seconds
	F1	This PC	
	F2	Search	
	F3	Calculator	
	F4	Media Player	
	F5	Previous Song	
	F6	Next Song	
	F7	Stop	
	F8	Pause/Play	
	F9	Mute	
	F10	Volume -	
	F11	Volume +	
	F12	Email	
	WIN (Left)	Lock Windows Key	Key indicates white LED light
	DEL	ON/OFF Backlight	
	LEFT	Swap RGB Direction	
	RIGHT	Swap RGB Colour	7 colours available
	UP	RGB Brightness +	NUM CAPS flicker
	DOWN	RGB Brightness -	NUM CAPS flicker
	1!	Bluetooth Device 1	

	2@	Bluetooth Device 2	
	3#	Bluetooth Device 3	
	4\$	2.4G (Wireless Mode)	
	=+	RGB Speed +	5 adjustable speed available
	-_	RGB Speed -	5 adjustable speed available
	PGUP	Swap RGB Mode	
	PGDN	Swap RGB Mode	

### **Battery Indicator**

Flashing red indicator on spacebar key: Low Battery.

Green indicator on spacebar key: Fully Charged.