 
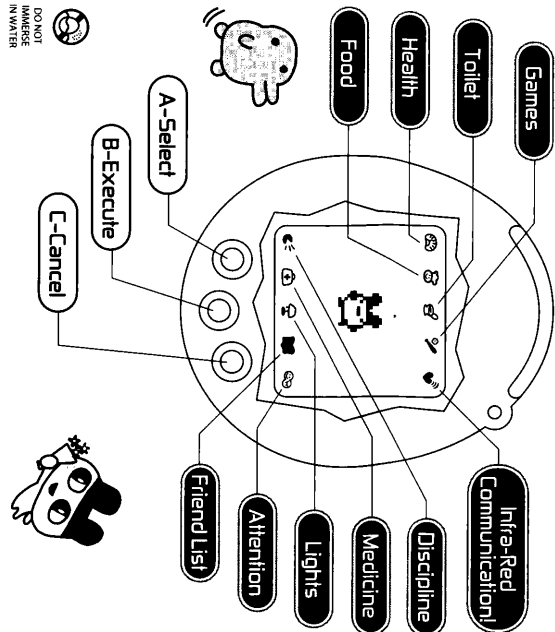 


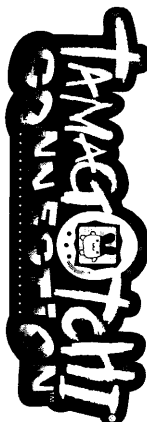

● EXCHANGE PRESENTS:

One of the connected Tamagotchi may drop a present. See Friend List section to use present. If you connect several times with your favorite Tamagotchi, your relationship level will increase.

● PLAYING GAMES:

Your Tamagotchi will automatically play after selection. Playing games improves the happiness of your Tamagotchi, and increases your chances at winning in future games. **Balloon game:** First one that pops the balloon wins the game. **Eating game:** First one that eats everything wins the game.

● DEVELOPING RELATIONSHIPS

Your relationships improve and develop the more connections you make with other Tamagotchi. After several connections, you and your favorite partner may become good companions. The female Tamagotchi will leave two Tamagotchi eggs – one on each screen. One of the eggs will stay with the female and the other moves to the male's screen. Now you are ready to start raising the second generation of Tamagotchi.

● DISCIPLINE

Sometimes your Tamagotchi can be very naughty or may just need a pat on the back! Use button (A) to select the "Discipline" icon and button (B) to choose either time out (when naughty) or praise to cheer up your Tamagotchi.

 
1 TAMAGOTCHI CONNECTION

Tamagotchi Connection has some special functions!
1- It can communicate with other Tamagotchi friends, play games, and exchange gifts.
2- If you find a compatible friend, you can even raise several generations of Tamagotchi.
3- You can store up to 50 friends' names in your Tamagotchi friend list!
4- You can use, play with or wear the gifts it receives.

HOW TO MAKE YOUR TAMAGOTCHI

1- Pull out the tab from the side of the casing and Tamagotchi will appear after a long beep.
2- To reset, press the Reset button on the back of the casing with a pointed object such as a pen.
NOTE: do not apply too much pressure, especially with a sharp object.

3- Set up Time and Date. Press button (B), the time screen will appear. Month, days, hours and minutes will be set up one by one using button (A) to scroll and button (B) to choose/set the correct number.
NOTE: As some special events occur on specific dates, please set up the date carefully.
4- Set up your birthday date/month... Tamagotchi might celebrate your birthday.
5- It will then return to the normal screen. After 1 minute, you will discover if your Tamagotchi is a boy (black) or a girl (white).

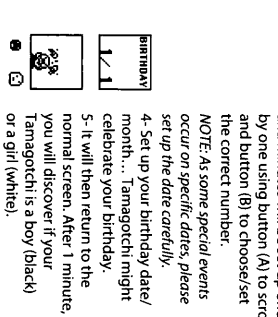

PRESENTS

Sometimes your Tamagotchi will receive a special present from another Tamagotchi. You will get to keep this if you press button (B), your Tamagotchi can play with its present or wear it.
NOTE: Not all presents can be used with all Tamagotchi characters.

THE MATCHMAKER

- When your Tamagotchi grows old without finding a partner, a "matchmaker" may appear to try and find you a partner! If you are unable to find a suitable partner your Tamagotchi will continue to grow old until it passes away.
- You can only raise another generation of Tamagotchi if a suitable partner is found.

- Tamagotchi automatically takes care of the new Tamagotchi, except if it becomes sick. Then you have to nurse it back to health.
- After 24 hours the parent will disappear from the screen, you must then choose a name for the new Tamagotchi. This becomes the second generation of your Tamagotchi. This process will continue as long as you take care of your Tamagotchi and develop good relationships with other Tamagotchi.

2 HOW TO TAKE CARE OF YOUR TAMAGOTCHI

HUNGER METER

Select the Hunger Meter icon with button (A) to check the following information regarding your Tamagotchi: Level of Hunger - Level of Happiness - Level of Discipline - Age - Weight - Name - Gender - Generation.

LEVEL OF HUNGER/LEVEL OF HAPPINESS

The number of hearts you have indicate your Hunger/Happiness (the more the better!).

LEVEL OF DISCIPLINE

Number of dots indicates level of discipline (the higher the better).
● AGE/WEIGHT/NAME
Everyday your Tamagotchi lives it becomes around 1 year older. Keep it healthy and don't allow its weight to increase too much.

GENDER/GENERATION

 
Check the gender of your Tamagotchi, boy or girl. Check your Tamagotchi's generation. If your Tamagotchi receives a Tamagotchi egg on the screen, it will become the next generation of your Tamagotchi.

FEEDING TIME

Press button (A) to select the "Feed" icon. Then press button (B) to choose either meal or snack. Check your Tamagotchi's hunger level before feeding it or it might get sick or become overweight.

HOW TO REPLACE BATTERY

Requires 1 CR-2032 3V battery. Using a small screwdriver, turn the screw counter clockwise to loosen. Remove back as shown, and remove the old battery. Insert the new battery as indicated in illustration.

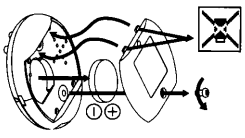

SOUND ON/OFF

Press and hold buttons (A) and (C) together. Select sound ON or OFF.

PAUSE MODE

To place Tamagotchi in PAUSE mode: Press and hold button "A", then press button "B". "PAUSE" will appear onscreen below your Tamagotchi character. The character will remain "frozen" until taken out of "PAUSE" mode.
To take Tamagotchi out of PAUSE mode: Press and hold button "A", then press button "B". "PAUSE" will disappear from the screen and your Tamagotchi character will begin to move again. While in PAUSE mode, the clock will continue to run, but Tamagotchi's growth stops until taken out of PAUSE mode.

TOILET/ETUSH

 
When your Tamagotchi makes a mess, press button (A) to select the "Toilet" icon and use button (B) to clean up.

CLAY TIME

Press button (A) to select the "Game" icon and press button (B) to choose either the dance game or the jumping game.

DANCE GAME


Tamagotchi repeats Press B button to moves in the same sequence.



CONNECTION/COMMUNICATION

(Using IR SENSOR)
1- Press button (A) to select the "IR" icon. Then press button (B). The Tamagotchi screen will indicate whether the connection has succeeded or failed. If the connection fails, you must wait before trying to connect again.
2- "STAND BY" appears on the screen.
3- Position the two Tamagotchi top to top as shown.
4- Press button (B) to start IR communication.

 YOU CAN PLAY GAMES TOGETHER OR EXCHANGE GIFTS AFTER CONNECTION.



CAUTION: PLEASE READ BEFORE PLAYING WITH TOY
• Do not use in any toy at anyone, 2) the anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, 5) step on toy.
• Be careful not to pinch fingers with hinged parts of toy.

WARNING: CHOKING HAZARD - Small parts. Not for Children under 3 years.

CAUTION: Keep batteries away from children. Batteries may be harmful if swallowed. Requires 1 CR-2032 (3V) battery. Batteries included. **NOTE:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.

Conforms to safety standard ASTM F963-10. Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Kaelia Avenue, Cypress, California 90630. TM & © 2004 Bandai. TAMAGOTCHI CONNECTION. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly. All rights reserved.