

QUICK GUIDE

EXT TAP - Requires a standard normally open to GND switch.

EXP/CV - Recommended 10K expression pedal, for CV +5V - GND, ONLY.

MODULATION SPEED/DEPTH CONTROLS.


DELAY TIME/MANUAL/SUBDIVISIONS - Adjust delay time (often called Manual for chorus/vibrato mode). Hold tap button and turn to select subdivision.

CLEAN - Sets the non-delayed signal level. Can completely cut out to give vibrato.

GAIN - Set input level to delay, unity gain at 12 O'Clock.

LEVEL - Set the delayed signal level, should be adjusted with gain control.

TAP TEMPO - Hold down to ramp up regen.

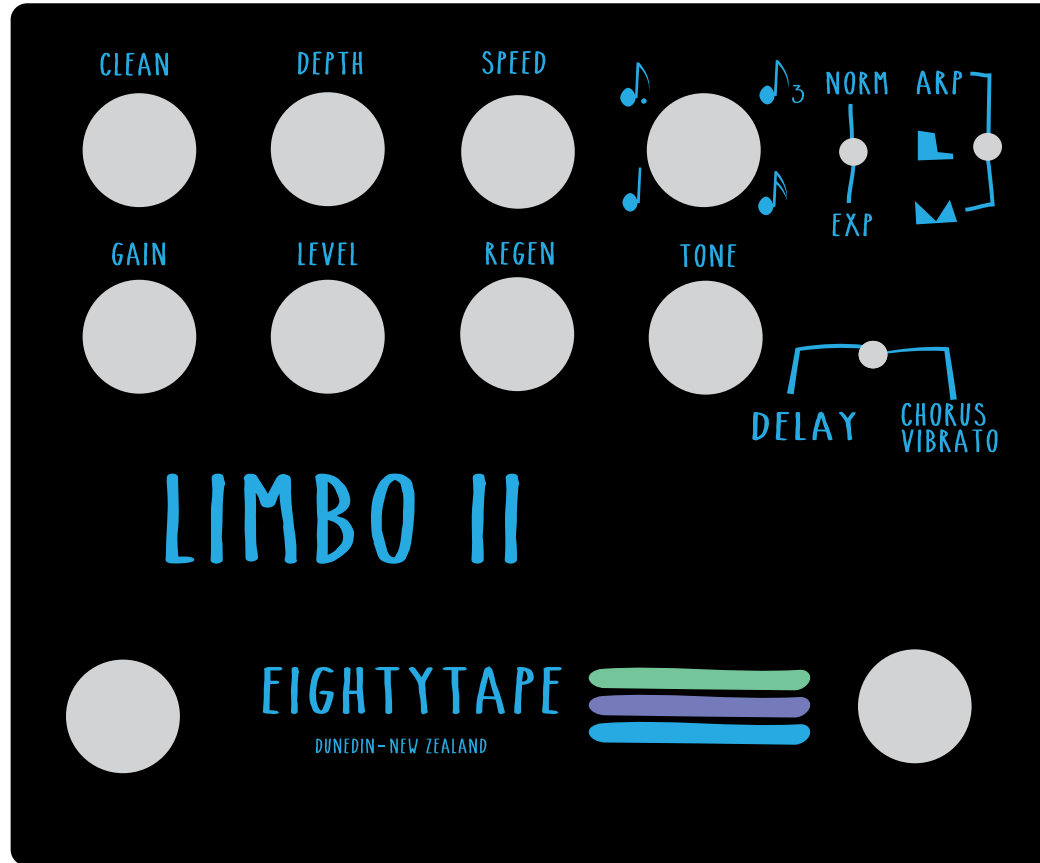

MODULATION SELECTOR - Square/Triangle/ARP mode.

DELAY/CHORUS/VIBRATO SELECTOR - Selects full 13312 stage delay line, or short 1024 delay line.

BYPASS.

SELECTING EXPRESSION MODES: Hold the tap switch then turn the Depth knob onto the desired setting. Where the first quarter rotation (start fully "down" or CCW) is Feedback Gain, next quarter Mod Speed, next quarter Mod Depth and last quarter Delay Time.

Power supply: 9VDC Boss style (2.1mm negative tip), 120ma. Isolated supply recommended.