


BOEING  **747**
OPERATIONS MANUAL

**AIRPLANE GENERAL
COCKPIT PANELS**

**THIS SECTION SHOWS COCKPIT PANELS
FOR THE FOLLOWING AIRPLANE
SERIAL NUMBERS:**

23221
23392
23534
23709
23920
24215


COCKPIT PANEL LOCATION MAY VARY.

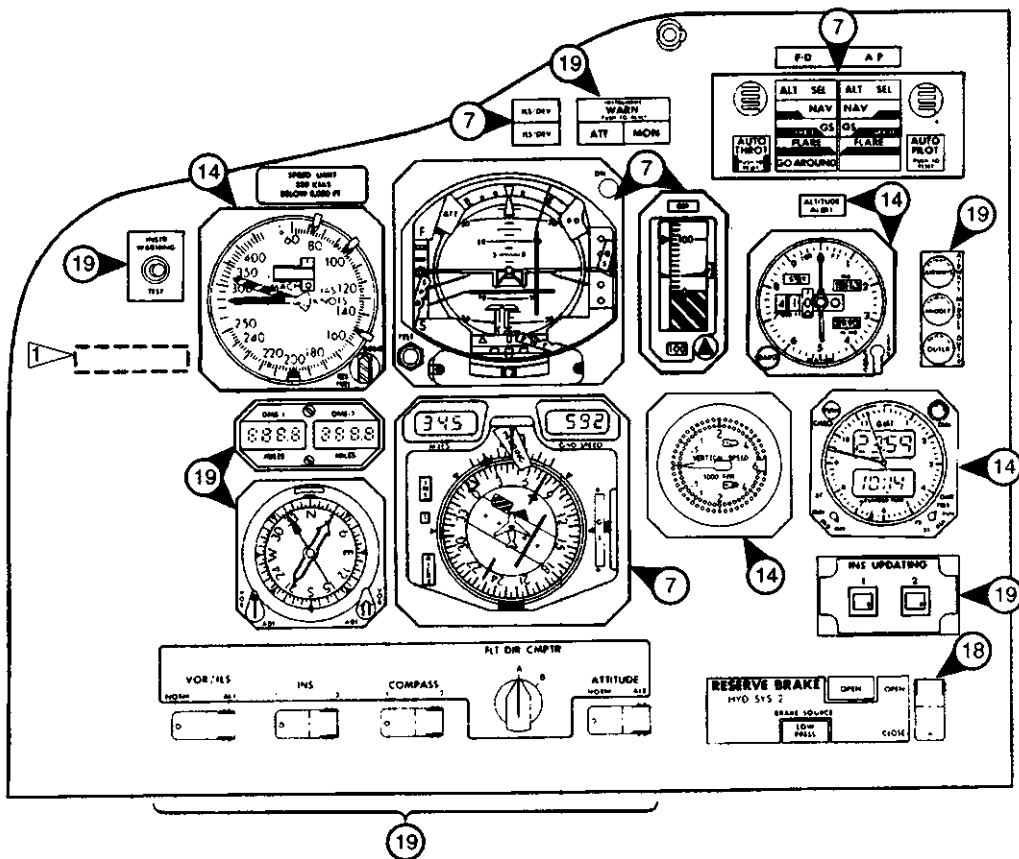

FLAPS LIMIT (IAS)	
1-275KIN	20-231KIN
5-250KIN	25-205KIN
10-238KIN	30-180KIN
	130-140KIN ALT DR

1 ▸ *As installed*

**CAPTAIN'S INSTRUMENT PANEL
(-367B)**

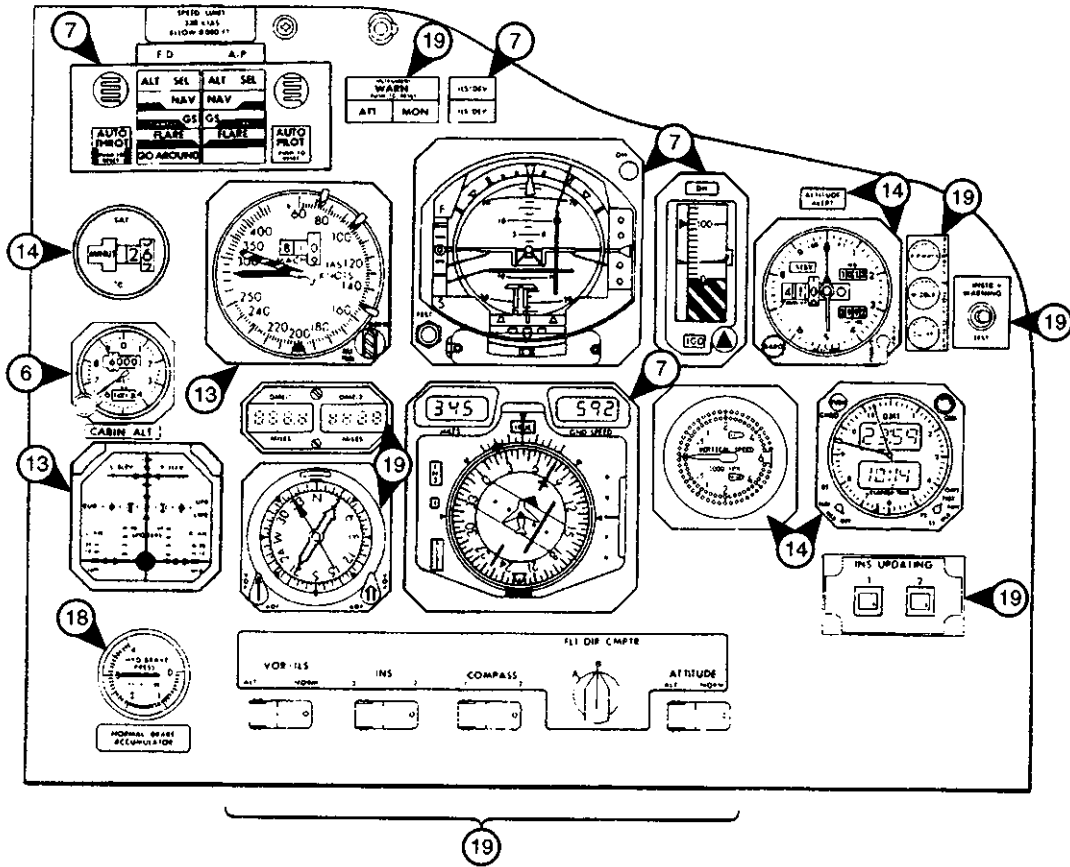


**FIRST OFFICER'S INSTRUMENT PANEL
 (-367B)**

J95170


PA
 Jun 01/07

Copyright © The Boeing Company. See title page for details.


05.20.15

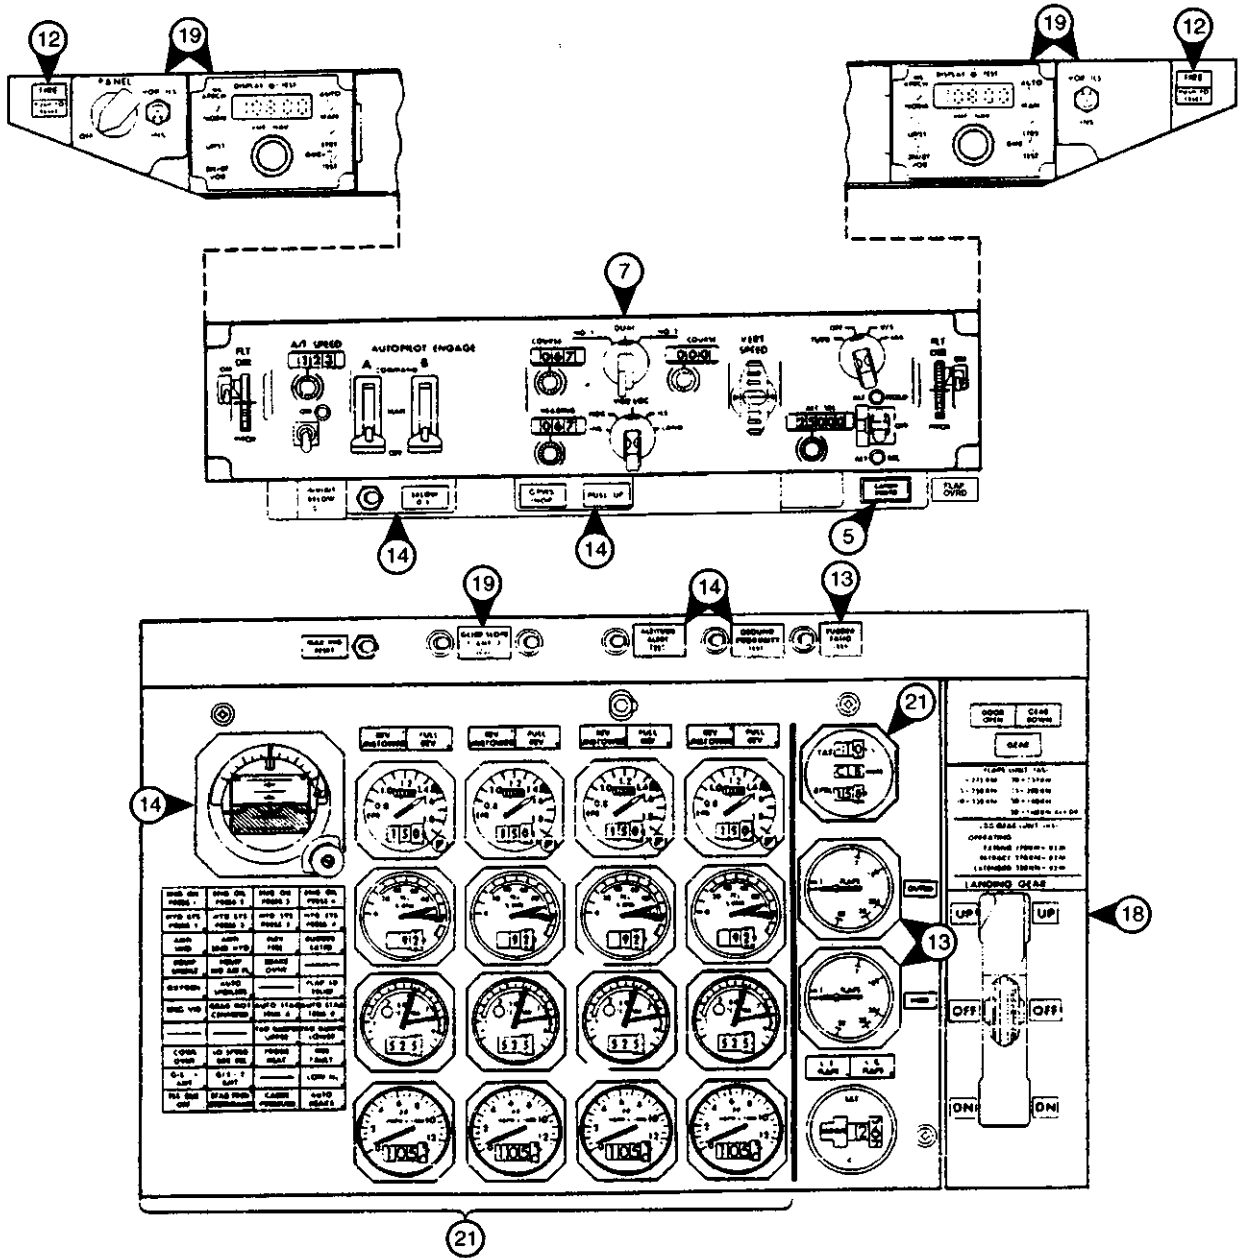


**PILOTS' CENTER INSTRUMENT PANEL & LIGHT SHIELD
(-367B)**

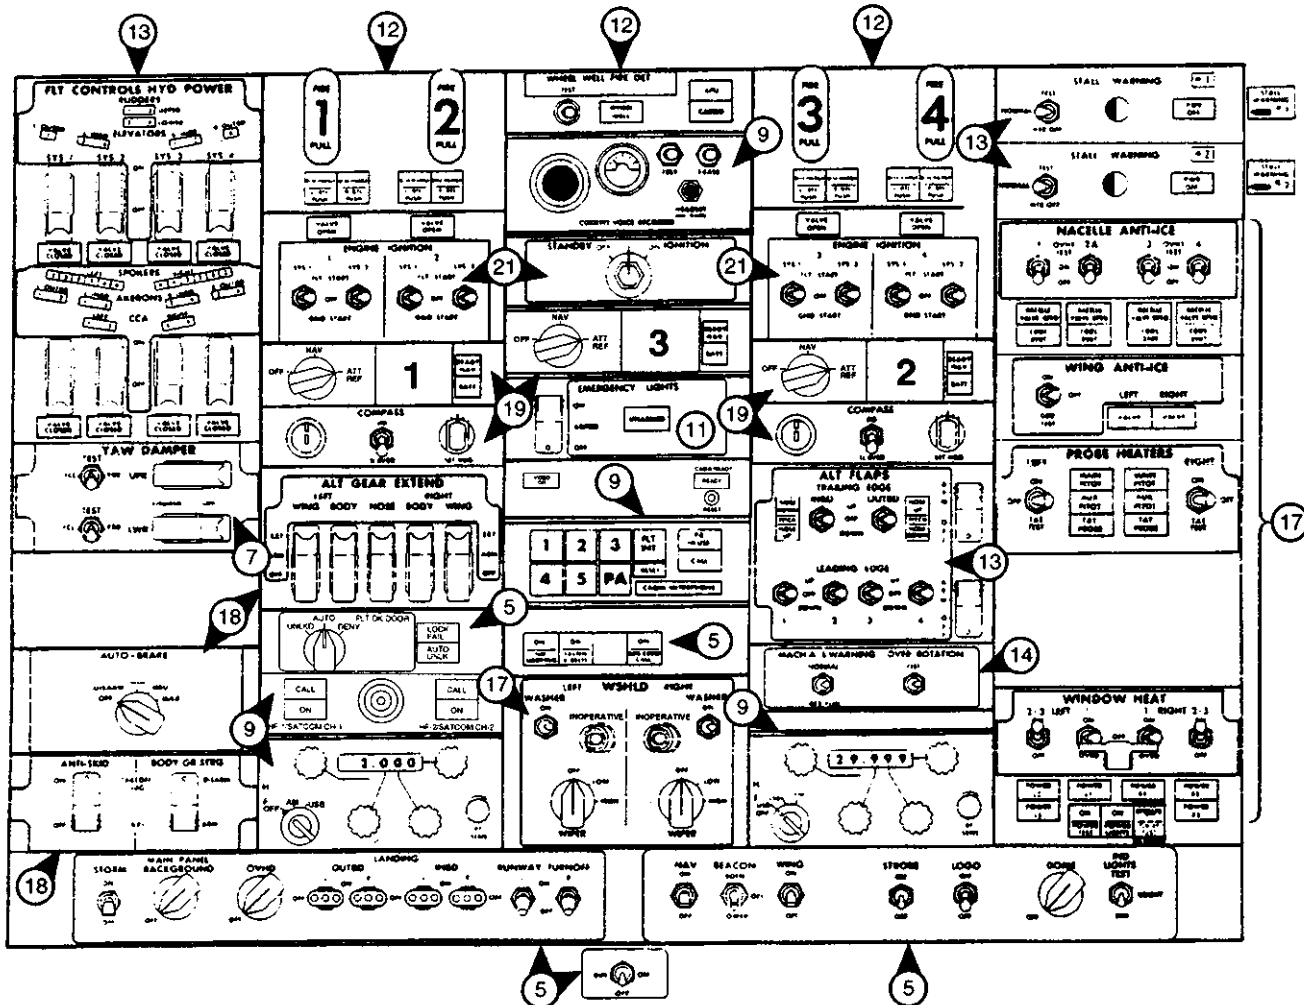

**PILOTS' OVERHEAD PANEL
 (-367B)**

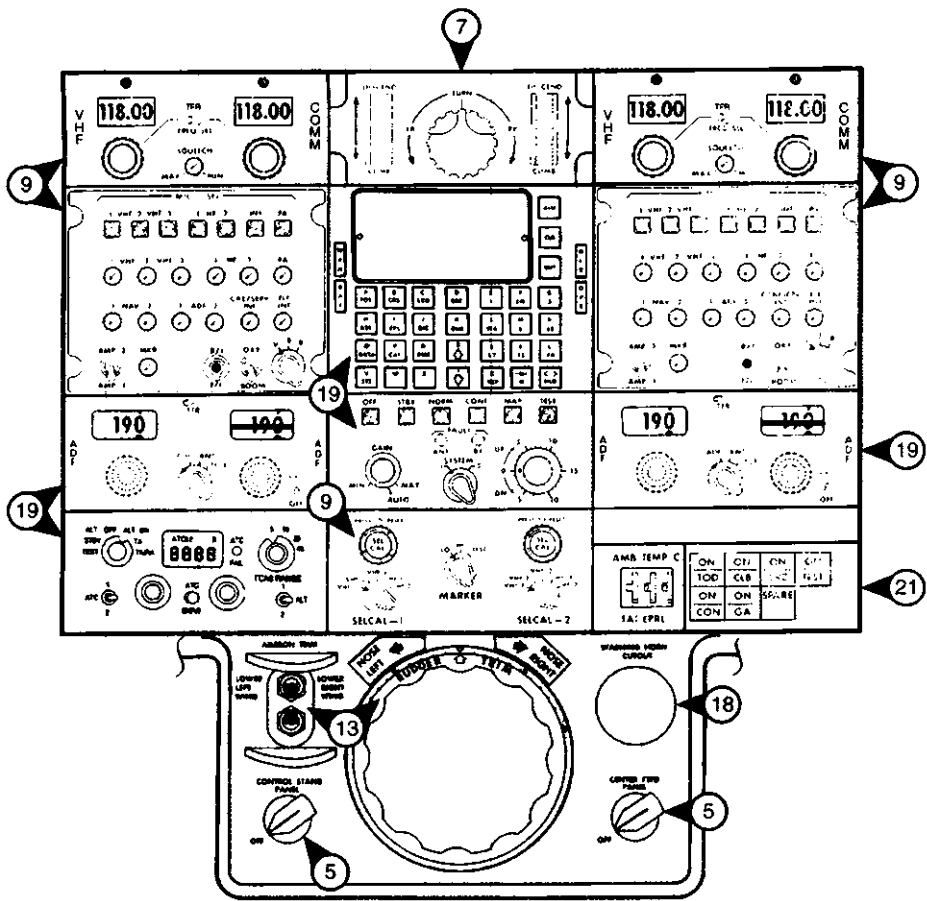


PILOTS' CONTROL STAND (LOWER HALF)
(-367B)


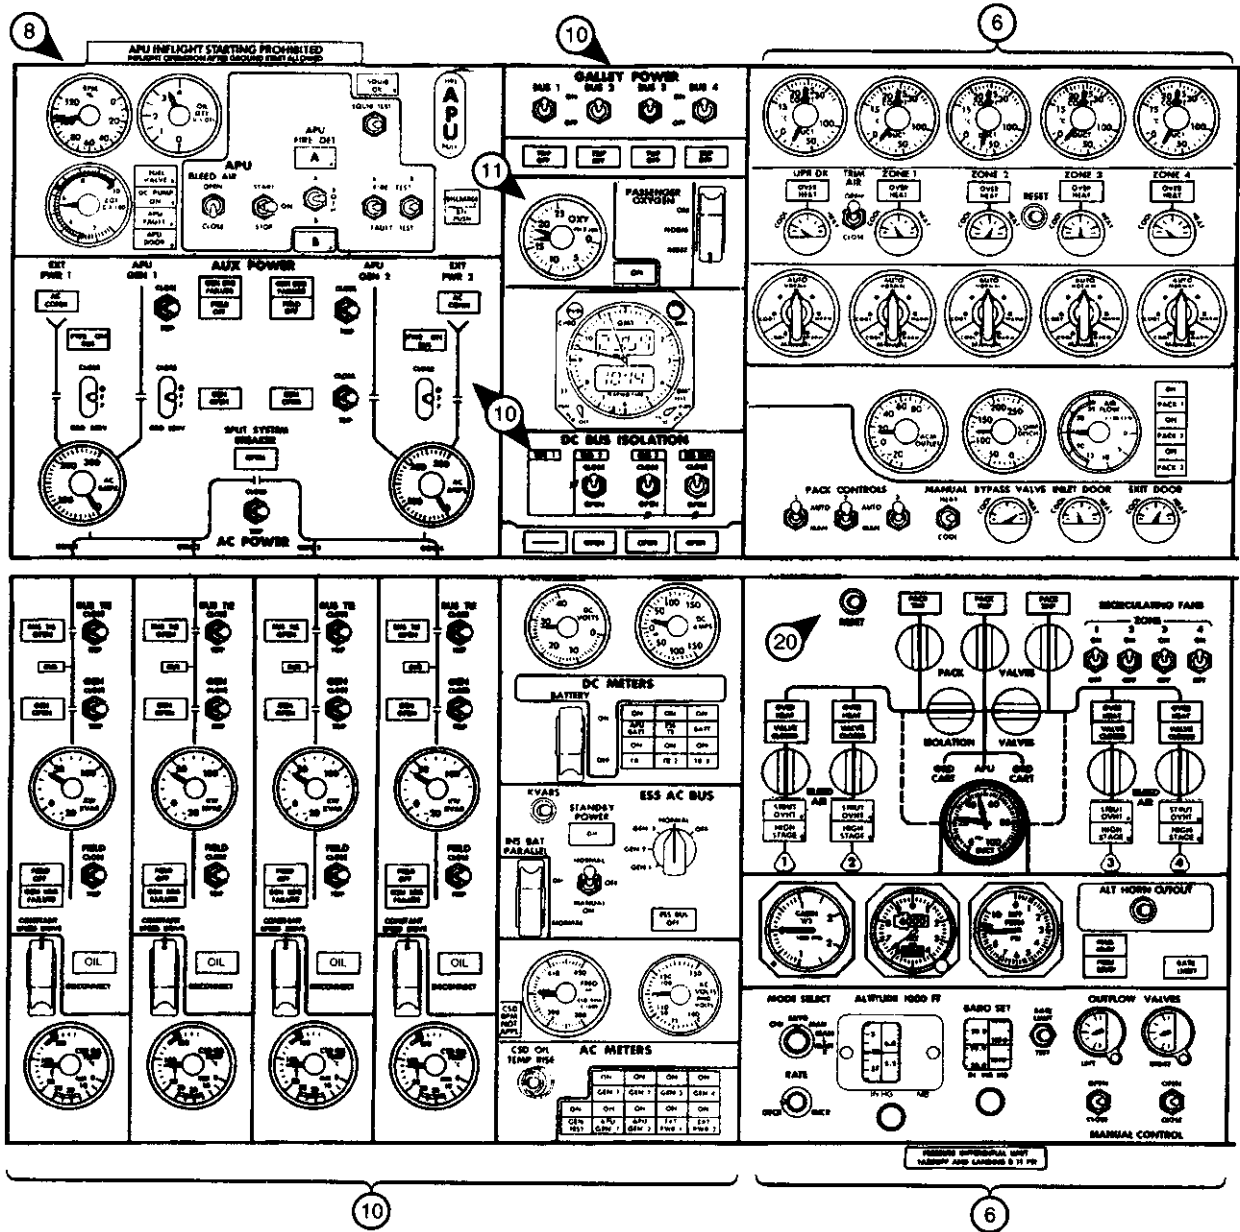


FLIGHT ENGINEER'S INSTRUMENT PANEL-UPPER PANEL-LEFT (-367B)

395444



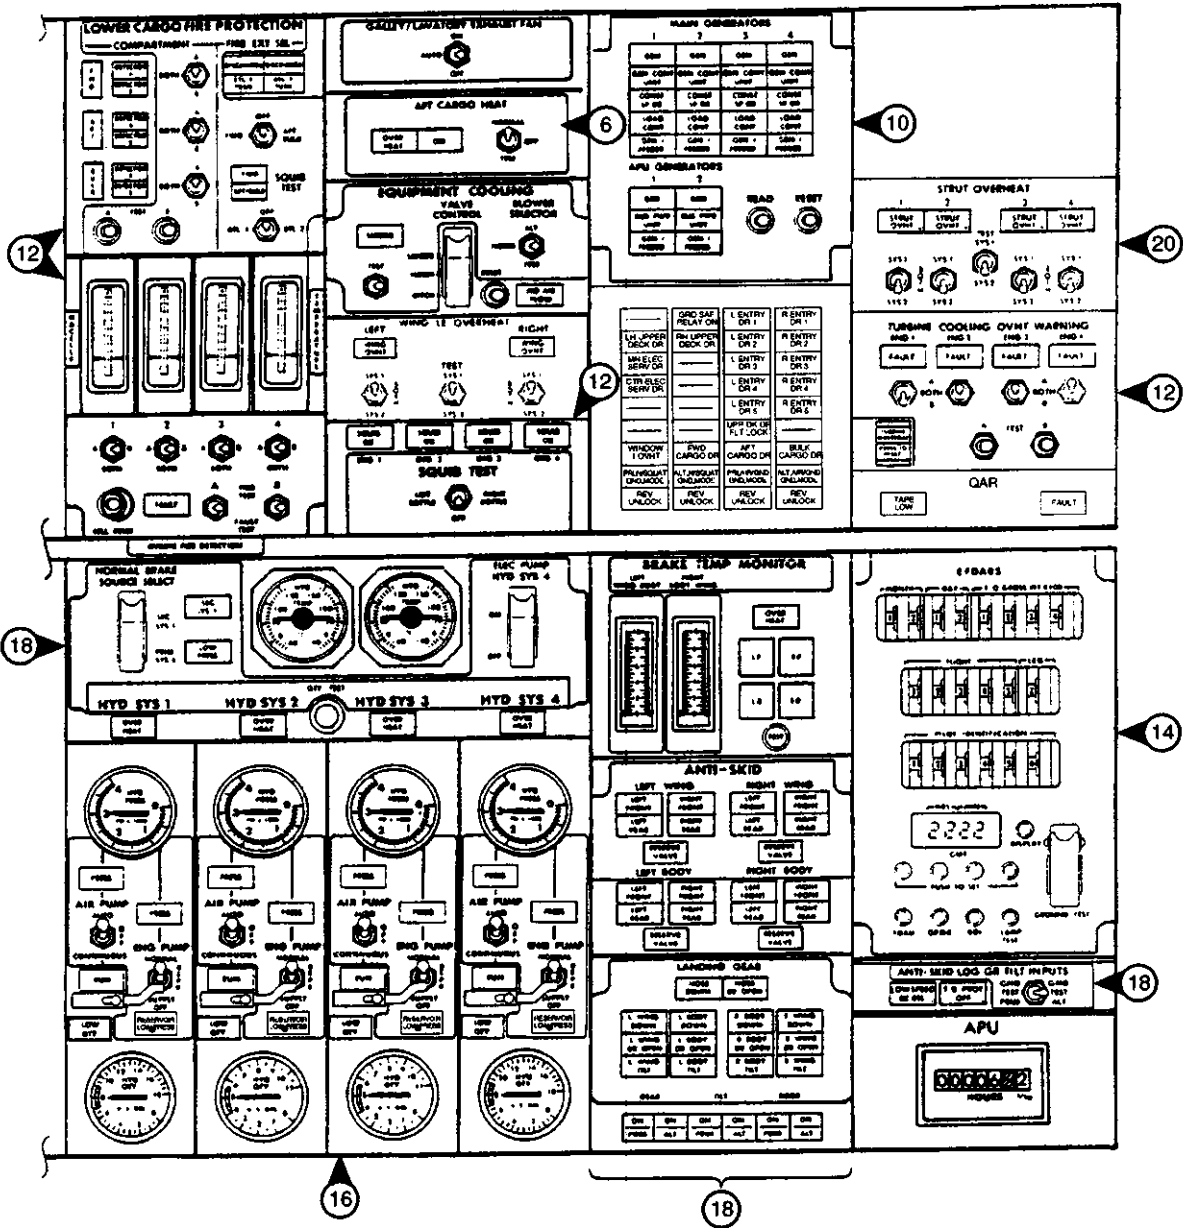


FLIGHT ENGINEER'S INSTRUMENT PANEL-UPPER PANEL-RIGHT (-367B)

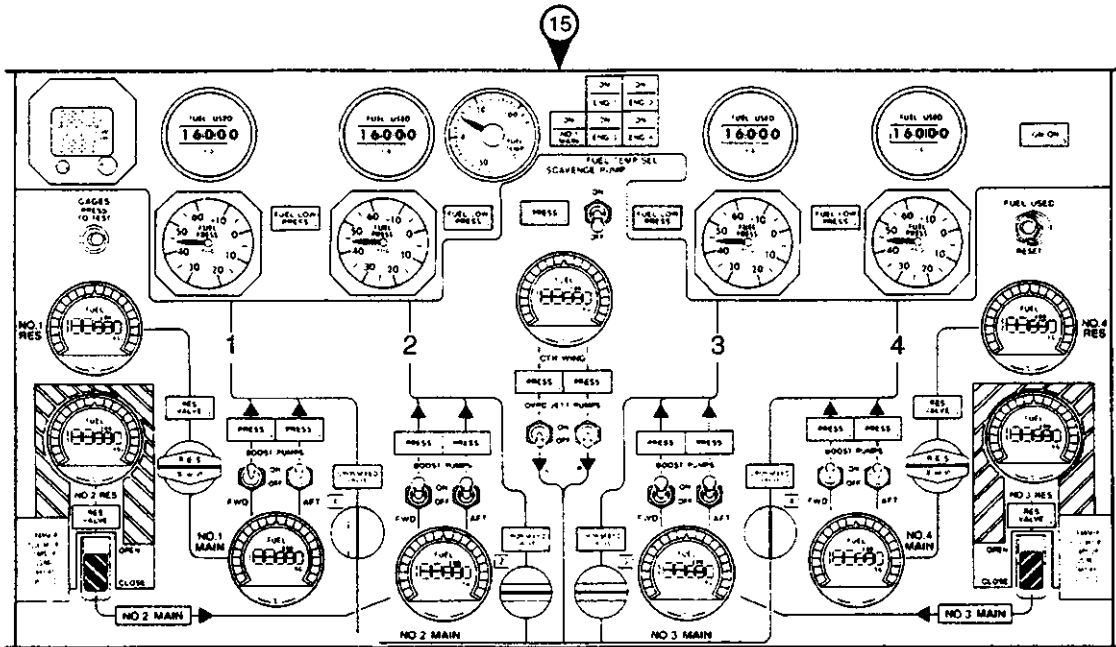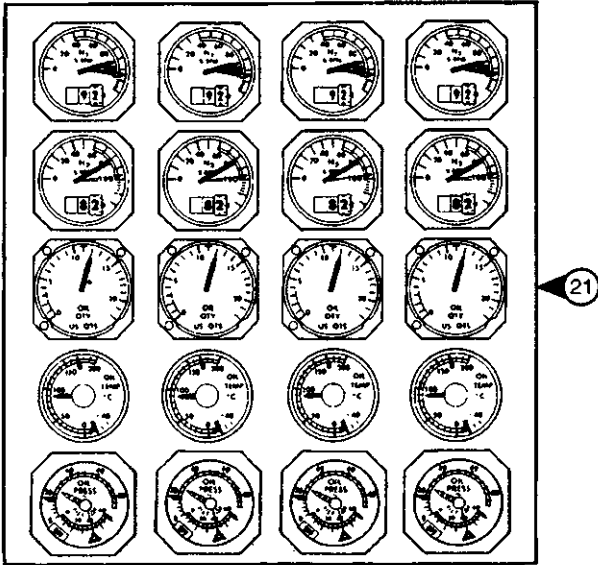

**FLIGHT ENGINEER'S LOWER INSTRUMENT PANELS
 (-367B)**

J95481

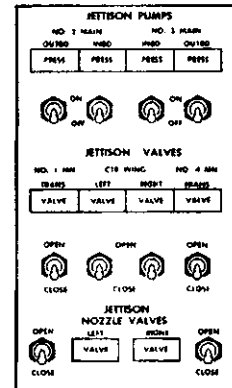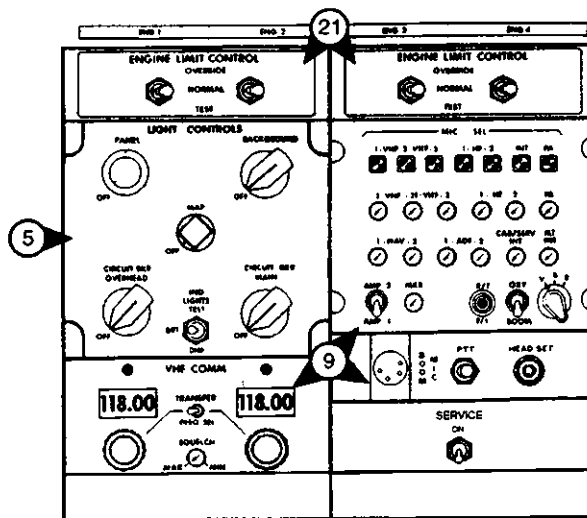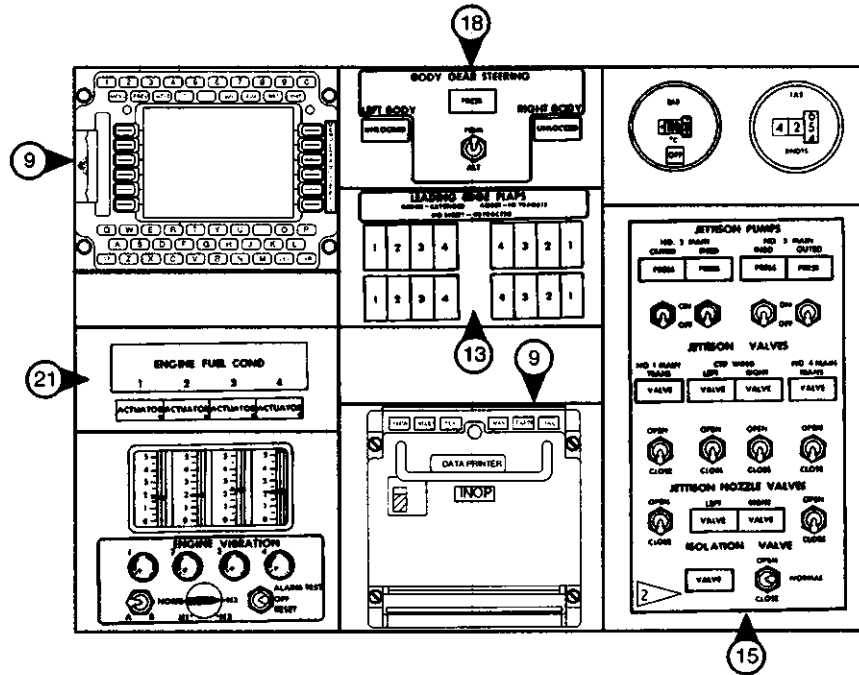

**FLIGHT ENGINEER'S LOWER INSTRUMENT PANELS
(-367B)**