

Trilogy-850 Quick Reference Guide



Antenna / Rubber duck antenna, is a sma jack (pin) the radio is a female sma socket hole.

Torch light, let there be light

Power / volume, use to switch on and off, keep turning clockwise to increase the volume

Analogue / Digital, press for 7 seconds to swap between modes

Channel up and down, use this key to move between talk groups or simplex channels

Zone / Repeater change, press and hold for 7 seconds to change between repeaters

Menu access, All other features can be accessed from here

Power level, press and hold for 7 seconds to swap between high 5W and low 1W

Torch on / off, does what it says on the tin light on light off 7 second press

PTT / transmit, the all-important talk button, please key for 1-3 seconds before talking