


EURONICS

User Manual & Instruction

ESM4 Shoe Shining Machine

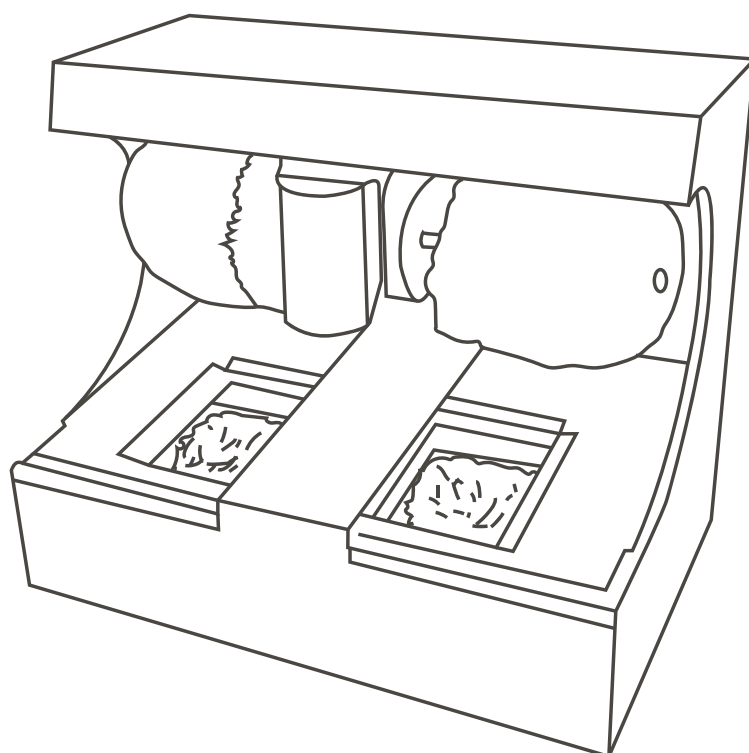

User Manual

Dear Customer,

Thank you for purchasing Auto Electric Shoe Polisher designed and manufactured for home use, while this machine will support light commercial use. Please familiarize yourself with the proper usage of the device by reading and following the manual.

Safety Notes:

- Make sure the voltage corresponds to the type label on the machine.
- Keep the machine out of reach of children or persons in need of supervision.
- Use the shoe polisher only for polishing shoes.
- The shoe polisher is not intended to be used in wet rooms. Do not expose the machine to extreme weather conditions such as excessive sunlight.
- Do not operate the shoe polisher for more than 20 minutes continuously in order to avoid overheating the motor.

Operating:

1. We recommend clear polish suitable for both dark and light-coloured shoes. Use liquid shoe polish only. Fill the polish cup in the middle of the machine about half full. If the remaining polish dries up in there, it is recommended that the ball valve on the bottom of the cup be unscrewed and cleaned up for normal use afterward.
2. Plug in the shoe polisher and the machine is simply ready for work. The brushes will be automatically switched on by breaking the light beam detected by the sensors fixed on both the inner sides of the box left and right, right above the floor rug.
3. Put the shoe below the dust removing brushes first, then below the polishing brushes. Rub the shoes up and down and side to side to polish the shoe. If necessary, push the shoe on the ball valve on the bottom of the cup in the middle to release the polish in appropriate amounts onto the shoe (3-5 seconds recommended).
4. The brushes will switch off automatically after about 15 seconds. If necessary, turn on the shoe polisher to finish shoe polishing.

DO'S

- Make sure the voltage corresponds to the type label on the machine.
- Keep the machine out of reach of children or persons in need of supervision.
- Use the shoe polisher only for polishing shoes.

DON'TS

- The shoe polisher is not intended to be used in wet rooms. Do not expose the machine to extreme weather conditions such as excessive sunlight.
- Do not operate the shoe polisher for more than 20 minutes continuously in order to avoid overheating the motor.

