

Controls and Indicators



NOTE: System serial numbers must match for Remote to activate NightHawk unit.

External System Check: Check system prior to taking unit on patrol – **depress** External Check Button located near carry handle. **Check LED color** reading.



External Check Button
Status LED

- **STEADY GREEN:** Battery level good. **System ready to go.**
- - - - **BLINKING RED:** Battery level marginal; **Charge** at earliest opportunity. **Unit will FIRE.**
- **SOLID RED:** System **NOT** ready. Either battery charge too low or system has not been reset following reload.

NOTE: System Check Button on outside case does **NOT** indicate Remote battery level.

Remote batteries charge level:
Press and hold "ARM" button.

STEADY GREEN – Good to go.
Blinking RED – Marginal but will work.
Steady RED or **NO LED** – Replace batteries.





Internal System Status Check: Inside the case, flip red switch guard and flip toggle power switch.

STEADY GREEN – Good to go.
Blink RED/STEADY GREEN – Marginal to deploy.
STEADY RED – Reset System / recharge battery.



Batteries: NightHawk **main receiver unit** in Pelican case is powered by a BOSCH power tool battery (BAT612 18V Lithium-Ion Battery). BOSCH battery **slides into** the Battery Retainer inside the case and **clicks** into place.

To **remove** battery, press red button and slide battery out of retainer.

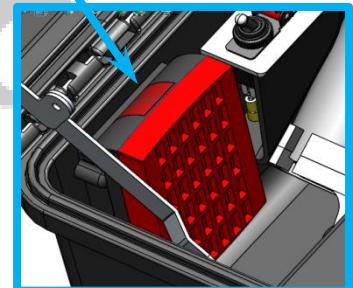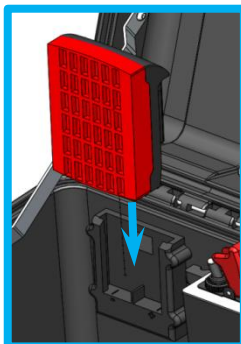

Batteries: Depending on model, NightHawk Remote is powered by two AAA (older model) or AA (newer model) batteries.


The newer model Remote has a rear AA battery access panel.



Deployment



1 – Place Unit 4 paces (12 ft) from Roadway.
Ensure **RED ARROW** points toward road.

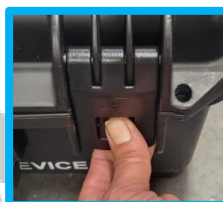

2 – Release Latches and Fully Open Case Lid.



3 – Remove Hand-Held Remote.



4 – Lift Switch Red Guard and ARM Toggle Switch.
Verify LED turns **GREEN**.



5 – Remove Hand-Held Remote
Move to a safe location, ensure **Line of Sight** between Remote and NightHawk unit.

- 6 – Fire**
- Press and hold the **ARM Button**, check the remote LED illuminates **GREEN**.
 - Continue to **hold down** the **ARM Button** then press the **FIRE** button to launch the spikes.
 - Release** pressure off **BOTH** Buttons.
 - After** spiking target vehicle, retract the spikes by repeating the button sequence (**ARM/FIRE**).