 


EURONICS




User Manual & Instruction

EA66S

Digital Perfume Dispenser

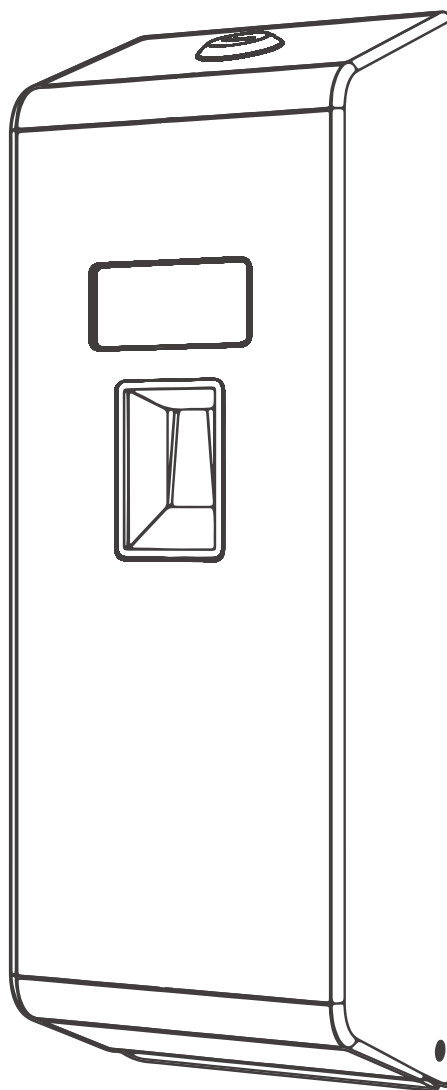

   Operation Instruction

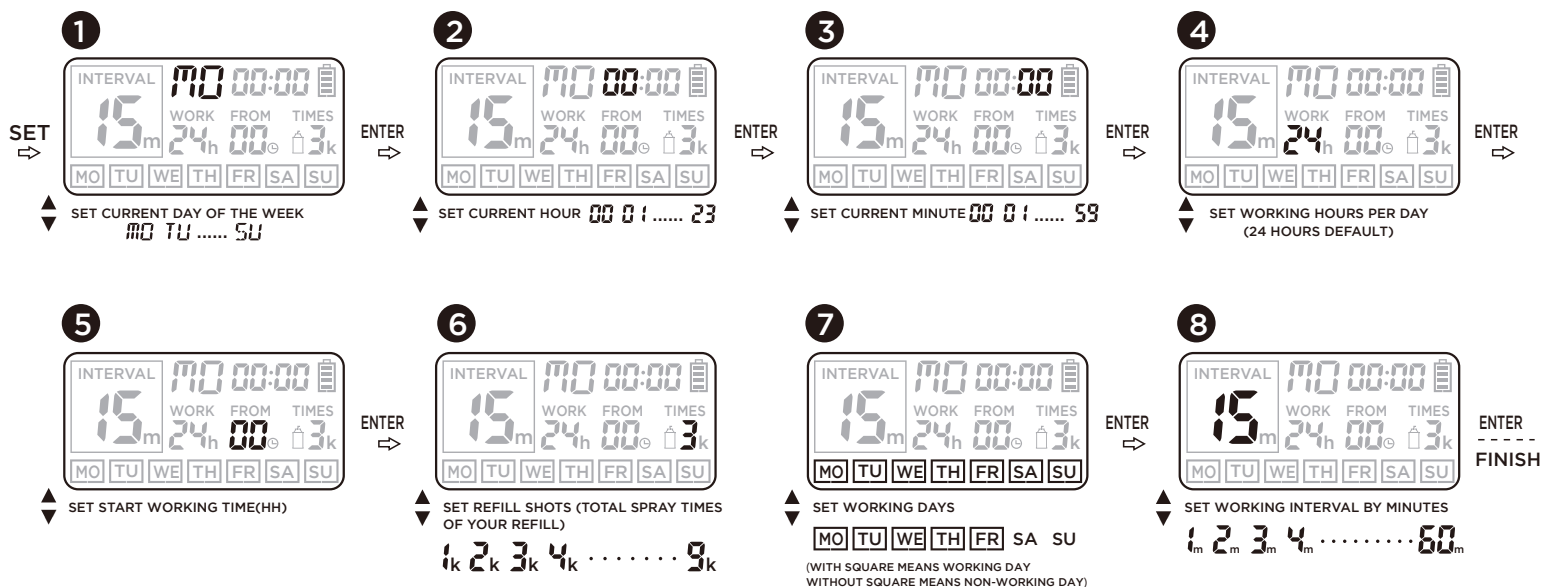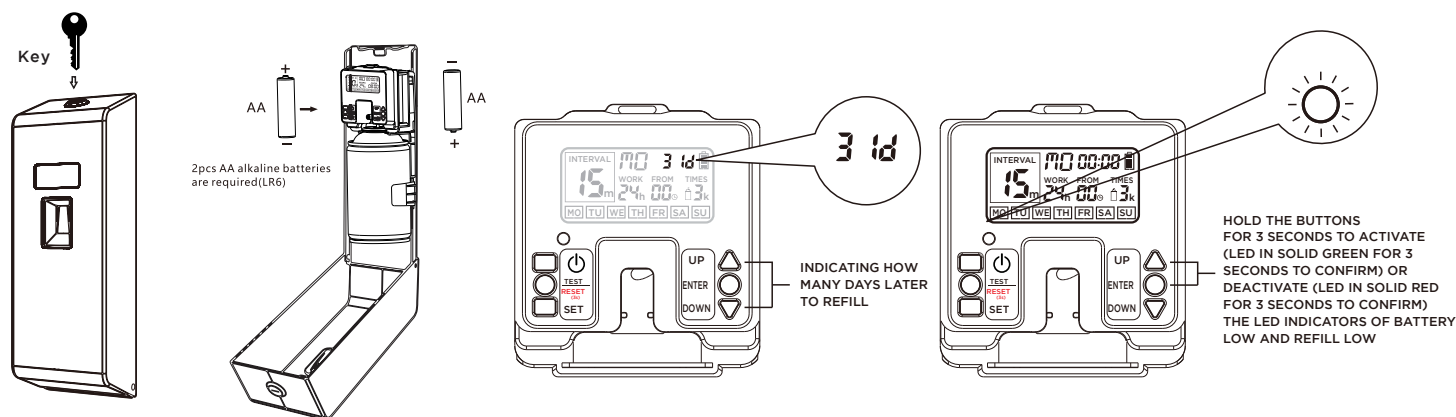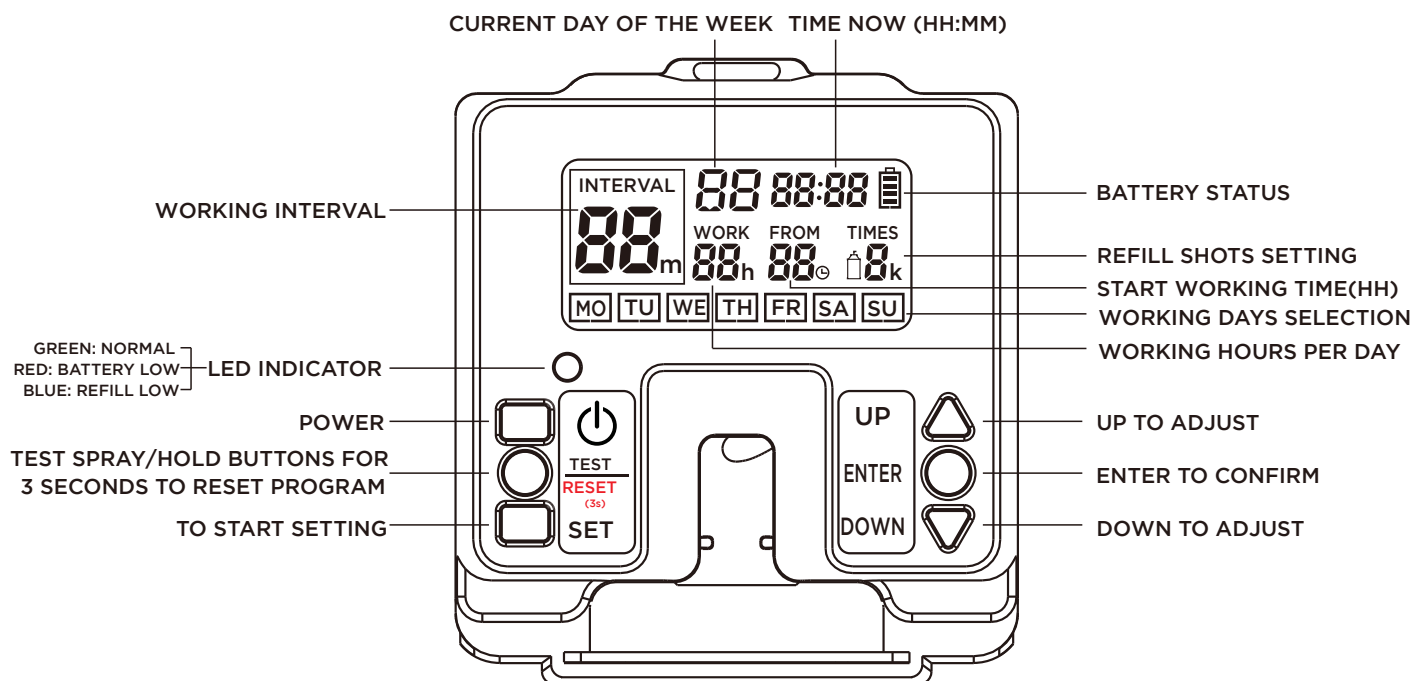

Methods for Dealing with Malfunction

Abnormal Scenario	Potential Reason	How to fix
LCD is not Displaying	The batteries are installed incorrect (positive and negative)	Follow the prompt in the battery compartment to install the battery correctly
	The batteries are dead	Replace with new batteries, do not mix the old battery with the new one
Refill cannot be loaded into the Dispenser	The actuator in use is too big	Replace with appropriate size of actuator
	The hammer does not return to top position, interfering with the actuator.	Press "TEST" or use a pen to push the hammer return to the top position
The Dispenser is not Activating	It's not under the working time according to the programs	Please check the program and ensure it is programmed correctly
LED Blinking in red	Battery low	Replace with new batteries, do not mix the old battery with the new one
LED Blinking in blue	Refill low	Replace with new refill, and then hold the TEST/RESET Button for 3 seconds, the LED will be in blue for one second to confirm the dispenser is reset, and restart the Counting Cycle
Blue and Red LEDs are not Blinking at all	The Red/Blue LED is deactivated on purpose	Hold UP and ENTER button together for 3 seconds, the LED will be in green for one second to confirm that it's activated; and if you want to deactivate it again, follow the same process, the LED will be in red to deactivate the blue/red LED prompt.