






How To Measure Guide

Your measurements will only be used to prepare an initial quote. Once you decide which window covering expert to contact, they will provide a free in-home consultation to measure all your windows, show you samples, and advise you the best solution for your home. Your measurements will always be checked by a professional.



HORIZONTAL BLINDS

INSIDE MOUNT

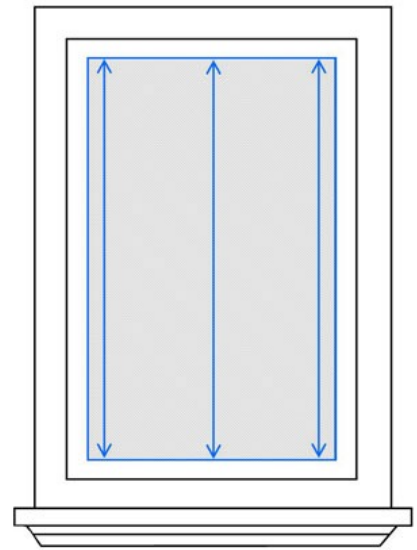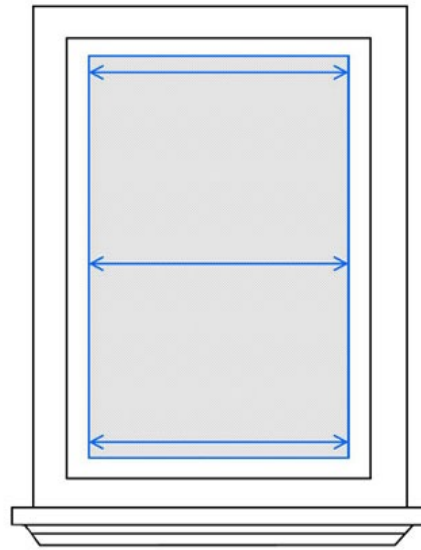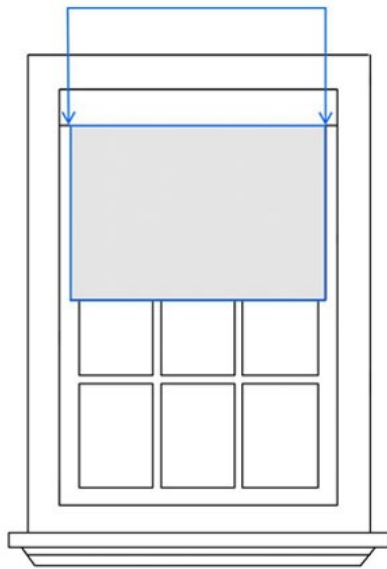

Choose Mount Type

Window treatments are installed inside the window casing.


Measure

Measure the inside of the window frame in 3 places for width and height.

Record

Record the narrowest width and longest height. Vertical blinds: deduct 1/2" from the height measurement.

HORIZONTAL BLINDS OUTSIDE MOUNT

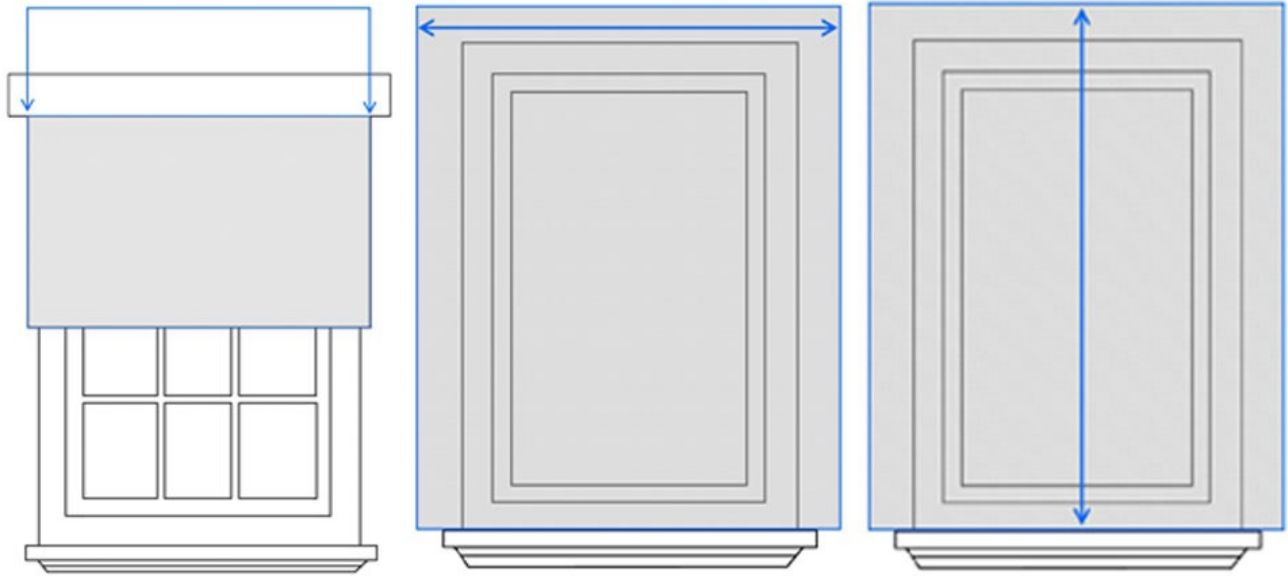

Choose Mount Type

Window treatments are mounted outside the window casing and provide better privacy.

Measure

Measure the overall area to be covered.

Record

Add extra inches (approximately 3") to the width and height for optimum light control and privacy.

Why Choose an Inside Mount?

Clean look: Allows for showcasing attractive window or door molding.

THINGS TO CONSIDER:

- **Deductions and Light Gaps:** A small deduction in width and/or length is taken to ensure proper operating clearance. This gap may affect the treatment's ability to darken a room.
- **Obstructed Views:** When fully opened, the stack (compressed portion of the window treatment) will obstruct part of the view from your window. Stack heights will vary by product.
- **Architectural Obstacles:** Obstacles such as handles and cranks can interfere with the operation of the inside-mount treatments.
- **Depth Considerations:** Be sure your window meets the minimum depth requirements for installation. Varies by product.

Why Choose an Outside Mount?

- **Improve Privacy and Light Control:** Light gaps on the side of window treatments can be substantially diminished or eliminated.
- **Fewer Installation Limitations:** Ideal for covering non-square windows or if you want an unobstructed view when fully opened.
- **Fewer Architectural Obstacles:** Clears obstacles like handles and cranks.

THINGS TO CONSIDER:

- **Mounting Surface:** Requires at least 2" of flat surface above window or door frame for mounting brackets. Projection brackets can be ordered, if needed, to clear frame molding.
- **Deductions:** The manufacturer does not take deductions on outside mount installations, so measure accurately.

QUOTE TEMPLATE
