



TOOLS REQUIRED FOR INSTALLATION:


- Phillips head screwdriver
- Drill with bits




HARDWARE INCLUDED:

- (2) end caps
- (7) hole plugs
- (7) wall anchors
- (7) screws

NOTE: Wall anchors provided are for standard sheetrock walls, and may not be ideal for all wall materials. Consider wall material and use anchors suited for wall type.

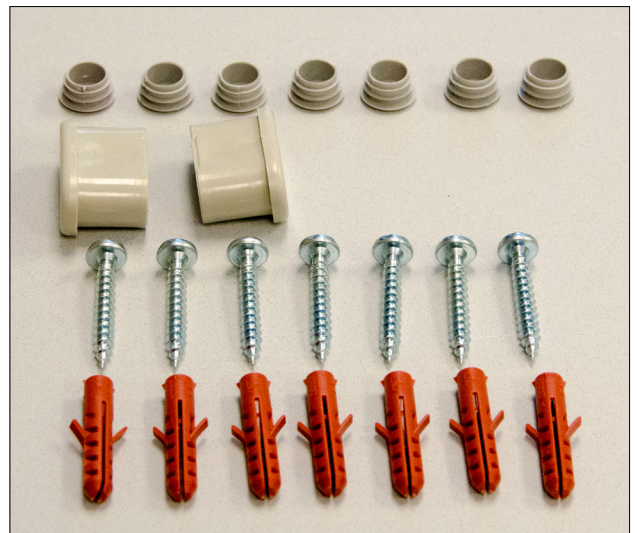

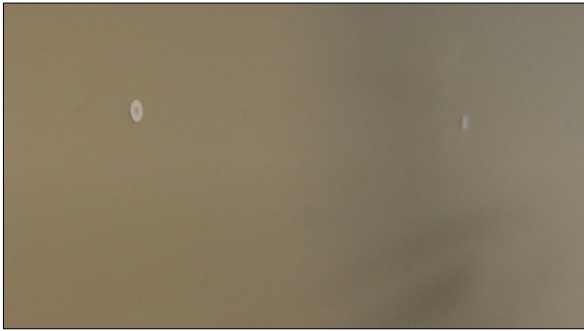

STEP ONE: Using the oval horizontal rail as a guide, drill pilot holes into wall for mounting horizontal rail. Insert heavy-duty wall mounting anchors.



STEP TWO: Attach horizontal rail to wall with provided bolts. Be sure to mount horizontal rail with smaller bolt holes touching the wall and large holes facing out. The oval horizontal support rail has mounting holes spaced 8" on center to allow the rail to be attached to the wall structure of the building. It is recommended that the rail be attached to the wall structure in at least two places per every 48".



STEP THREE: Hang vertical slotted tube to the mounted oval support rail by inserting the top portion of the oval cutout to the top of the oval rail. Rotating the vertical rail to the wall to secure the rail to the horizontal oval support. To adjust, tilt the vertical rail away from the wall and slide to the desired position. No additional attachment is necessary to mount the vertical rail.



STEP FOUR: Insert end caps and hole plugs for a clean finish.

STEP FIVE: Attach select Treston slotted upright accessories for a complete shelving system. Compatible accessories include: shelves, overhead cabinets, bin rails, and more!

