




MANHATTAN COMFORT

DR-502

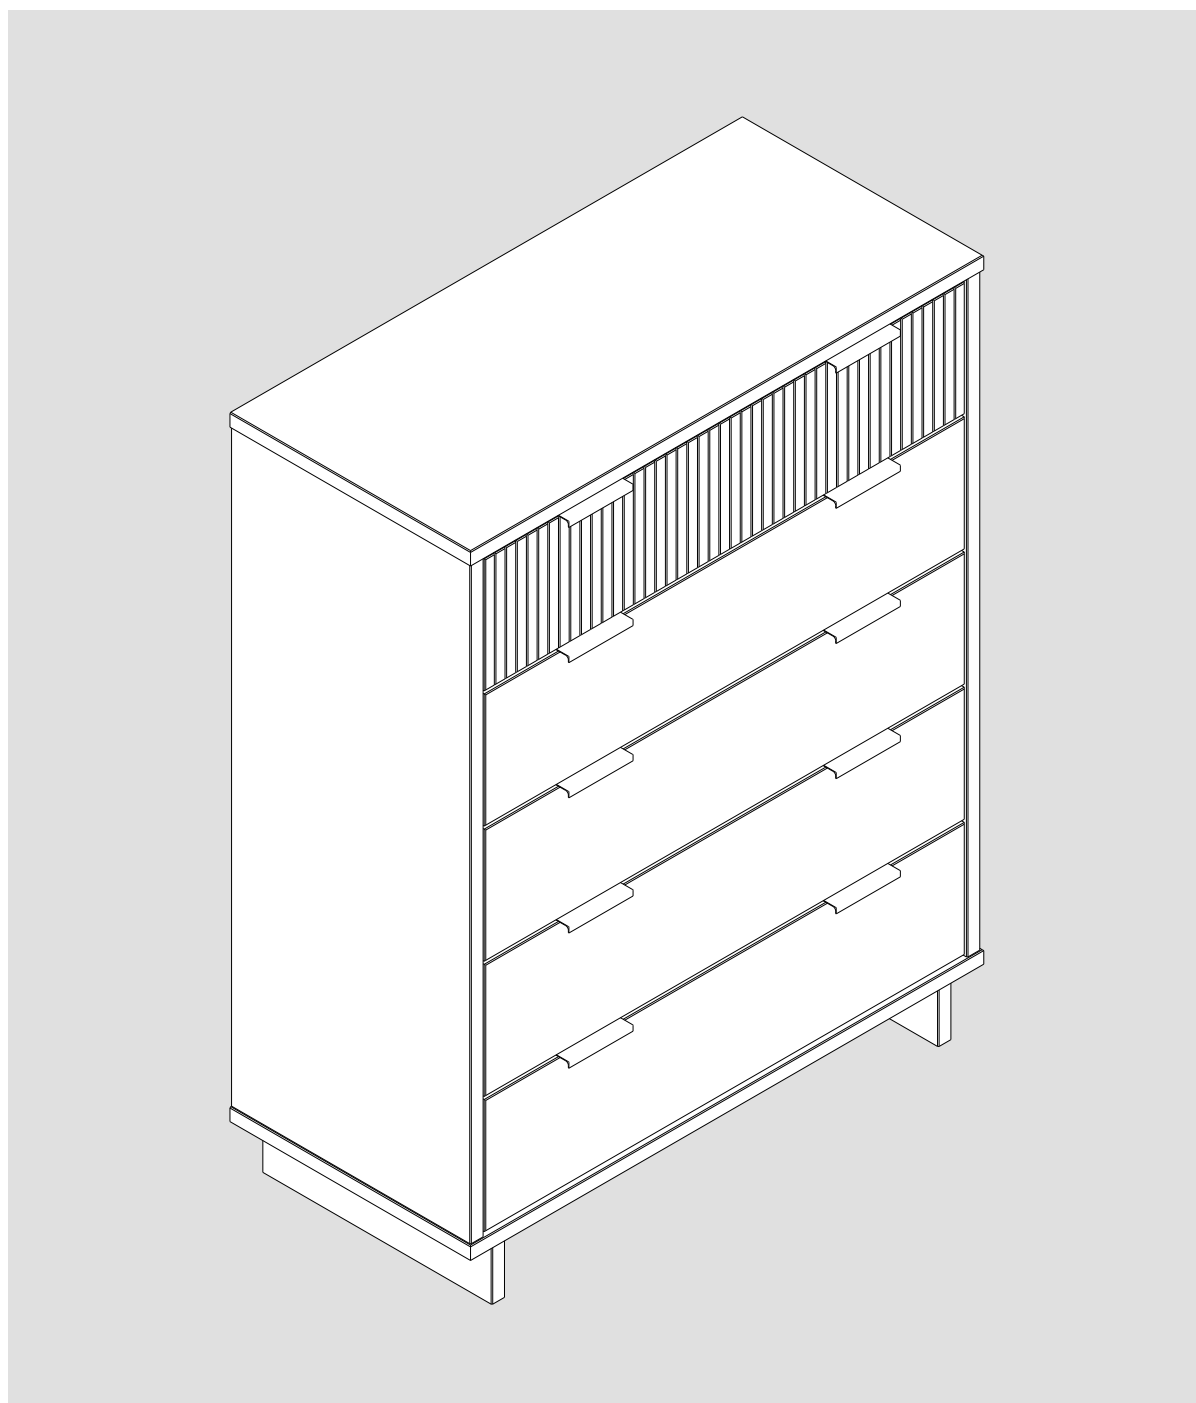




STOP!


Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

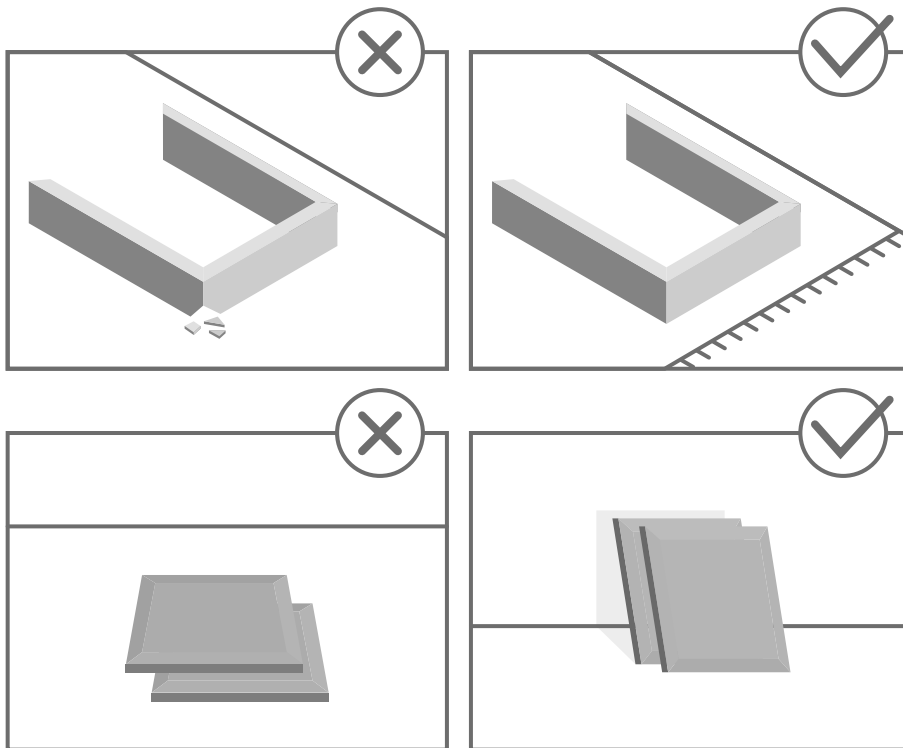

TOOLS REQUIRED

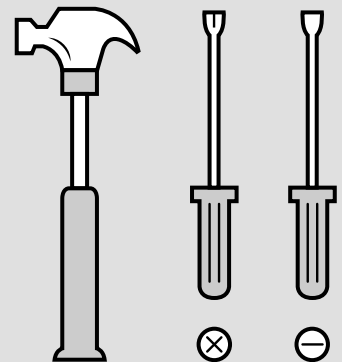

SUPPORT SITE




View our assembly video online:
WWW.MANHATTANCOMFORT.COM





Stuck? Question? We are here to help.
tel: **908-888-0818**
e-mail: help@manhattancomfort.com




Included in this package:

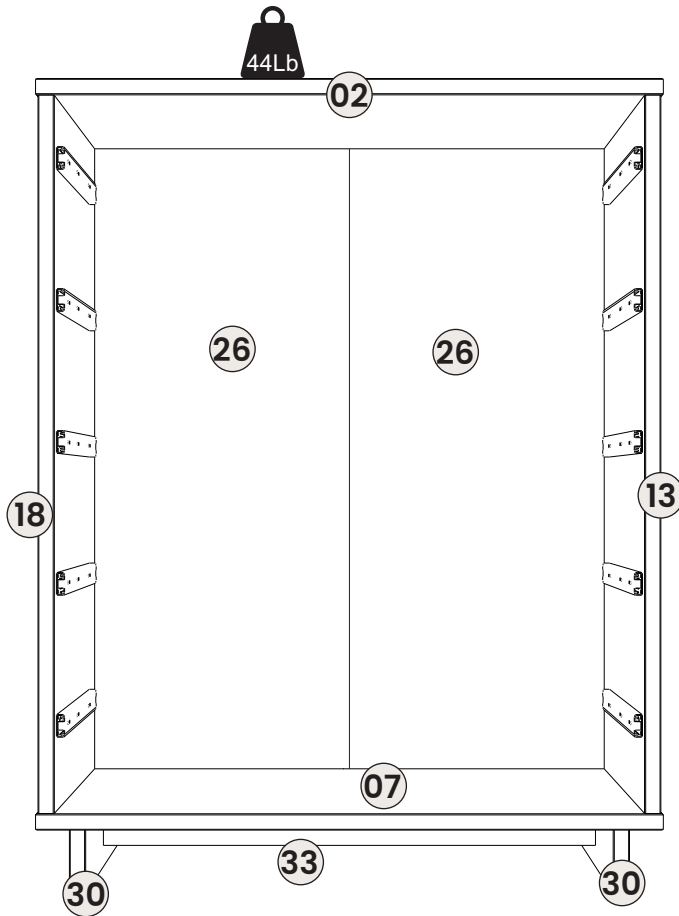

02.	Top Panel	x1
07.	Bottom Panel	x1
13.	Right Side Panel	x1
18.	Left Side Panel	x1
26.	Back Panel	x2
30.	Foot	x2
33.	Feet Crossbar	x1
47.	Drawer Front	x4
48.	Top Drawer Front	x1
55.	Drawer Back	x5
60.	Drawer Bottom	x5
65.	Top Drawer Support	x1
68.	Drawer Support	x5
71.	Drawer Right Side	x5
72.	Drawer Left Side	x5

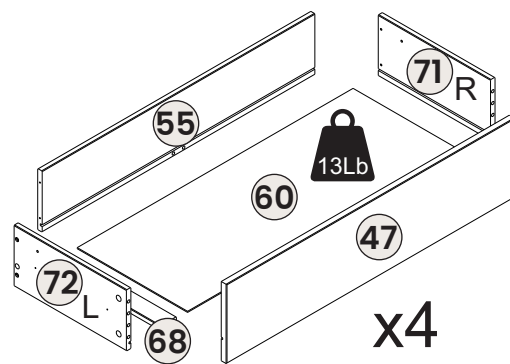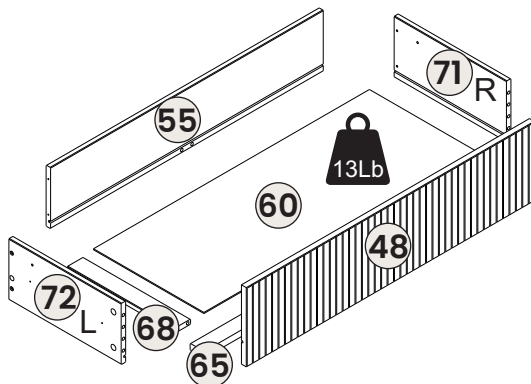

Included in this package:




A x 20
#69




B x 60
#23857




C x 20
#259

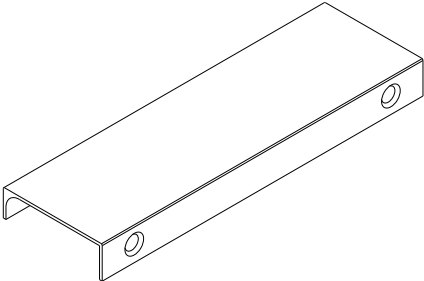

D x 10
#PX.017




E x 26
#10385




F x 26
#10386



G x 4
#284



H x 10
#11169




I x 6
#292




J x 1
#KT.002



K x 60
#1616

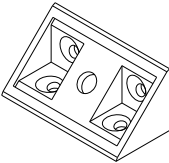

L x 10
#CA.002

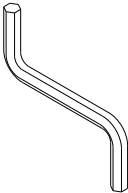

M x 1
#2196



N x 10
#PA.010

Where to find the itens


Box 1				
26	55	72	#10386	#69
30	60	#23857	#284	#1616
33	65	#259	#11169	#CA.002
47	68	#PX.017	#292	#2196
48	71	#10385	#KT.002	#PA.010

Box 2	
02	26
07	
13	
18	

01

Fix the hardware L to part 33 with screw K.
Then, attach the parts 30-33 with the hardware B.


05

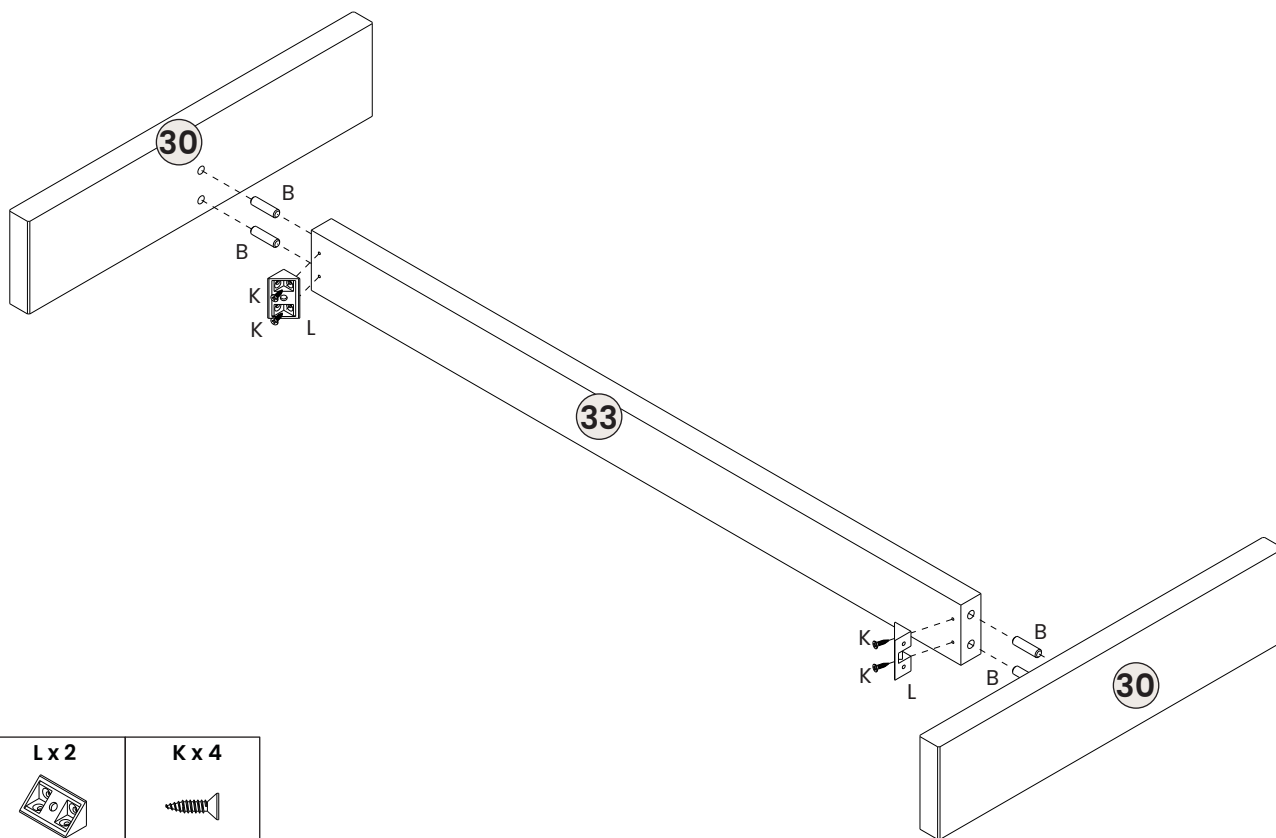

B x 4	L x 2	K x 4

02

Fix the part 33 to part 30 with screw K.

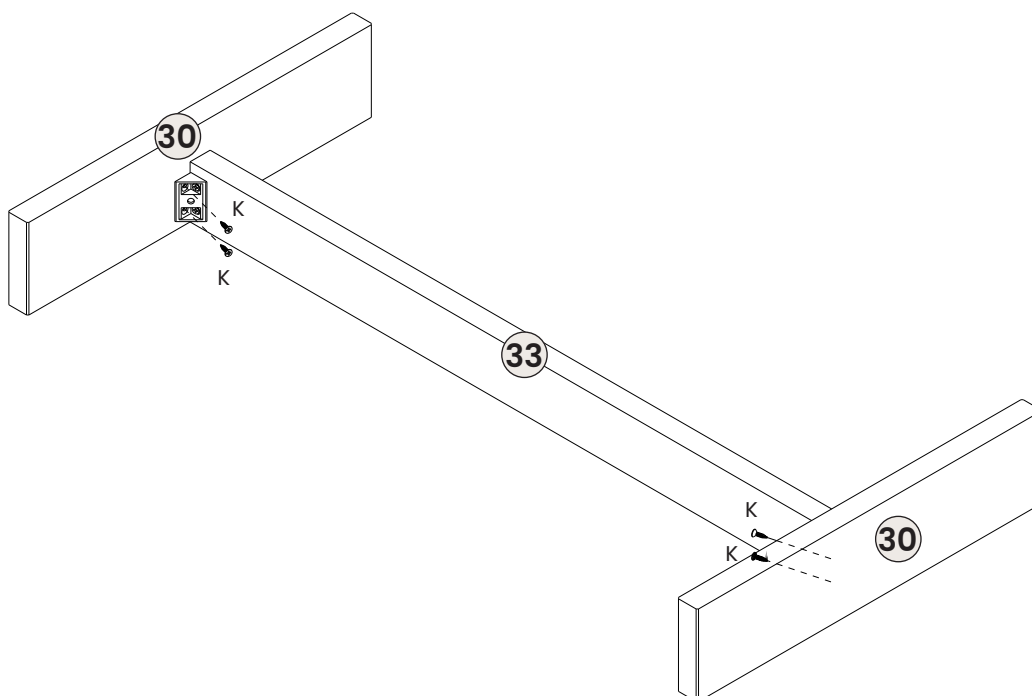



K x 4



03

Fix the part 07 to parts 30-33 with screw I and tool M.

06


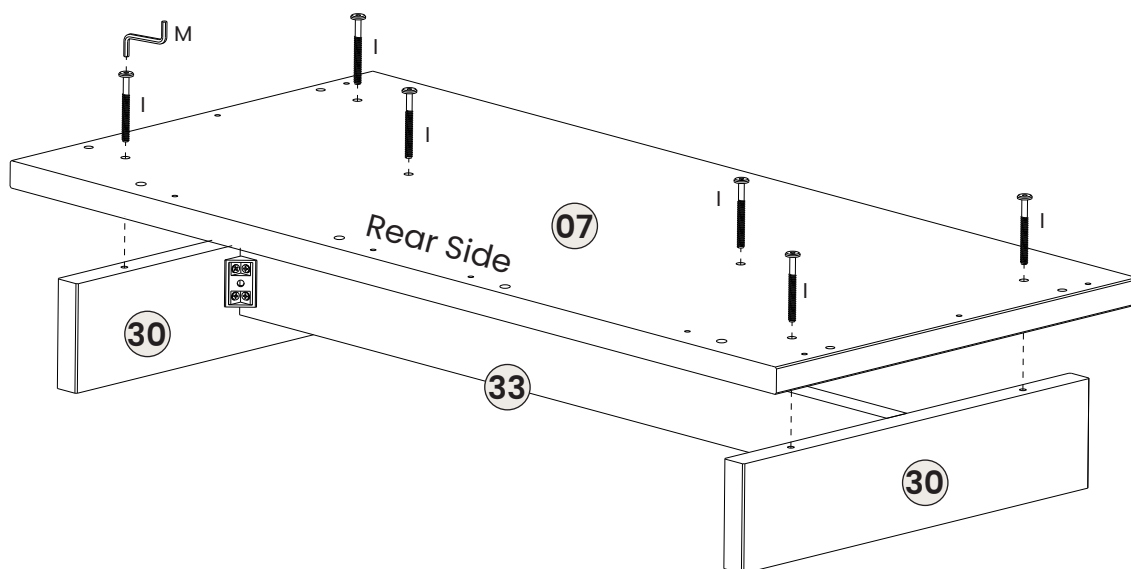


04

Attach the parts 13-18 to part 07 with hardware B.

Then, fix them with screw H.


Pay attention in detail to ensure correct assembling.

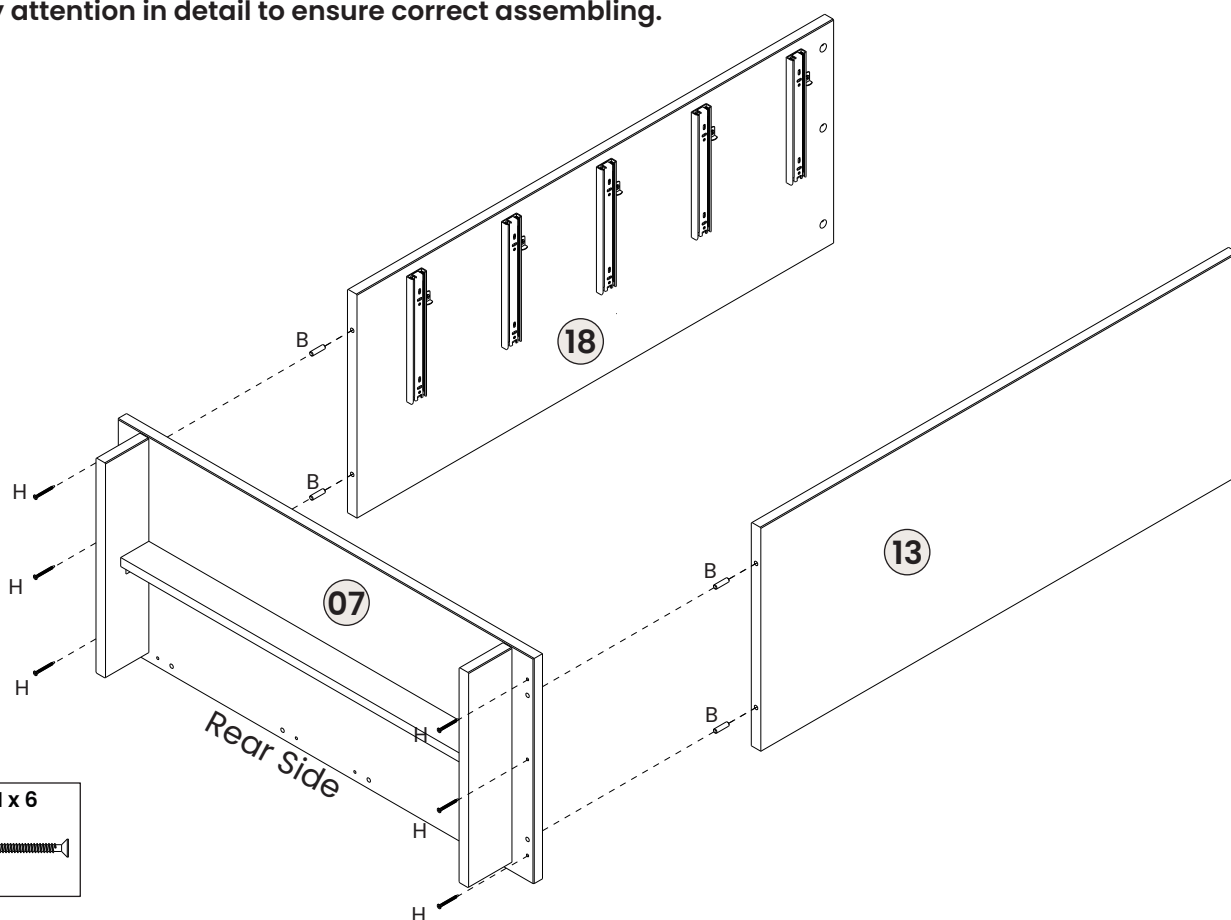



05

Attach part 26 to parts 07-13-18 with hardware B.
Then secure them with screw H.

07

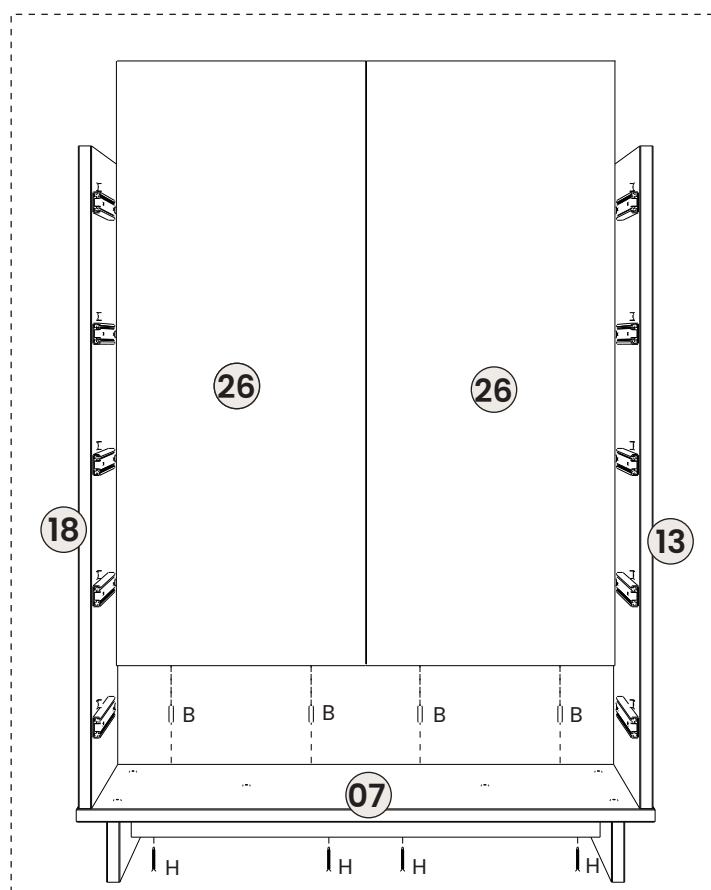


Attention, position the pre-drilling
towards the internal side.
As per drawing below.

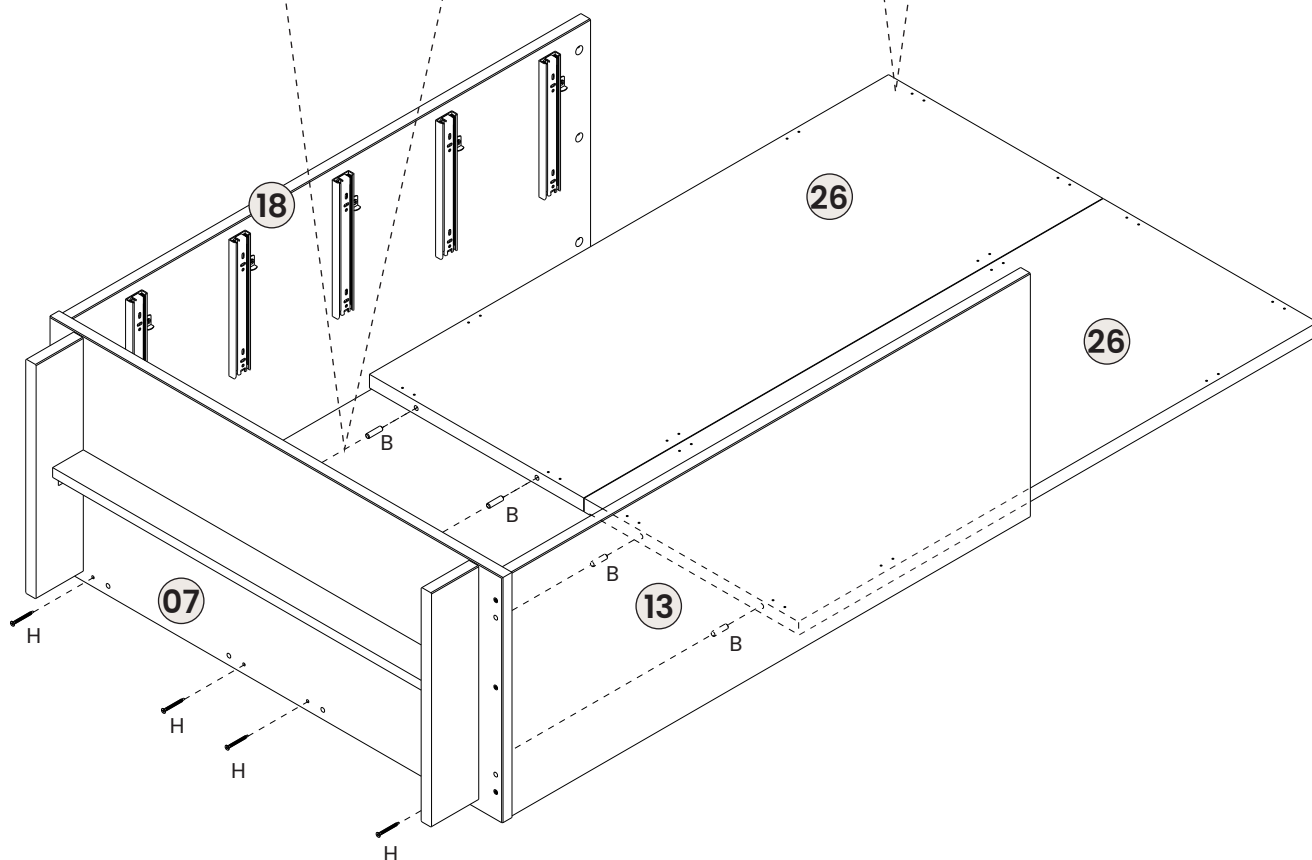

06

Fix the hardware E to part 02.

08

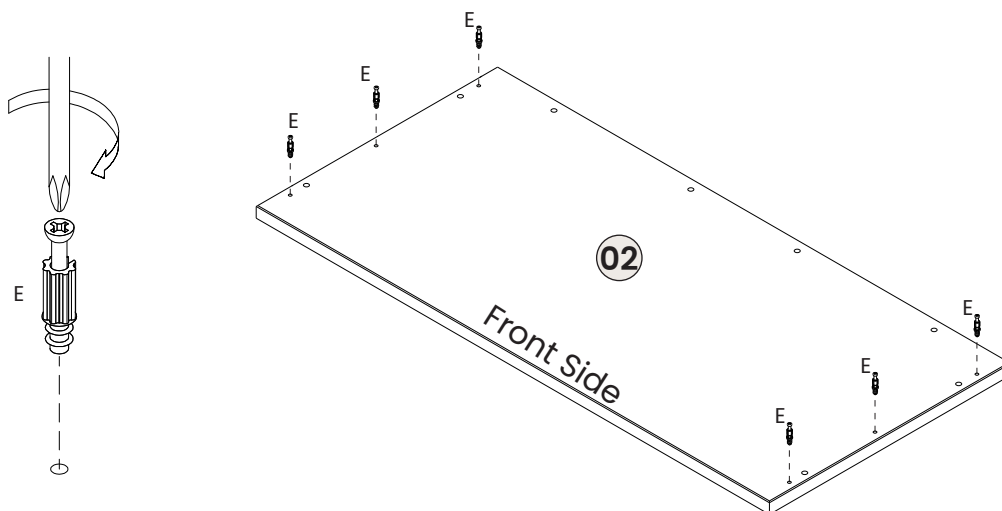



E x 6



07

Attach the part 02 to parts 13-18-26 with hardware B.

Then, apply the hardware F and lock it according the example below.

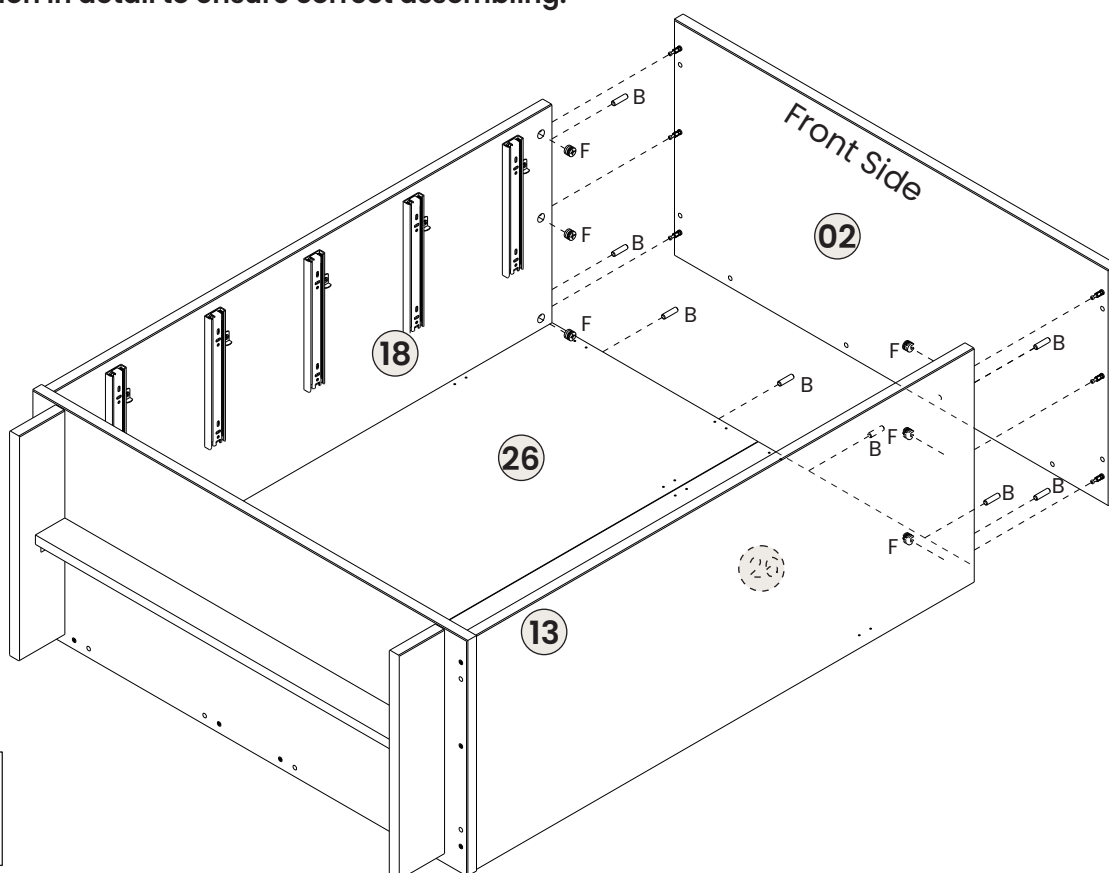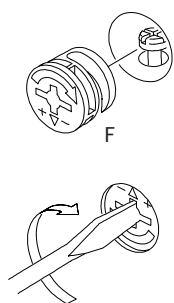Pay attention in detail to ensure correct assembling.

B x 8



F x 6



08



Fix hardware L with screw K in part 26 in the pre-drilled holes indicated.


09

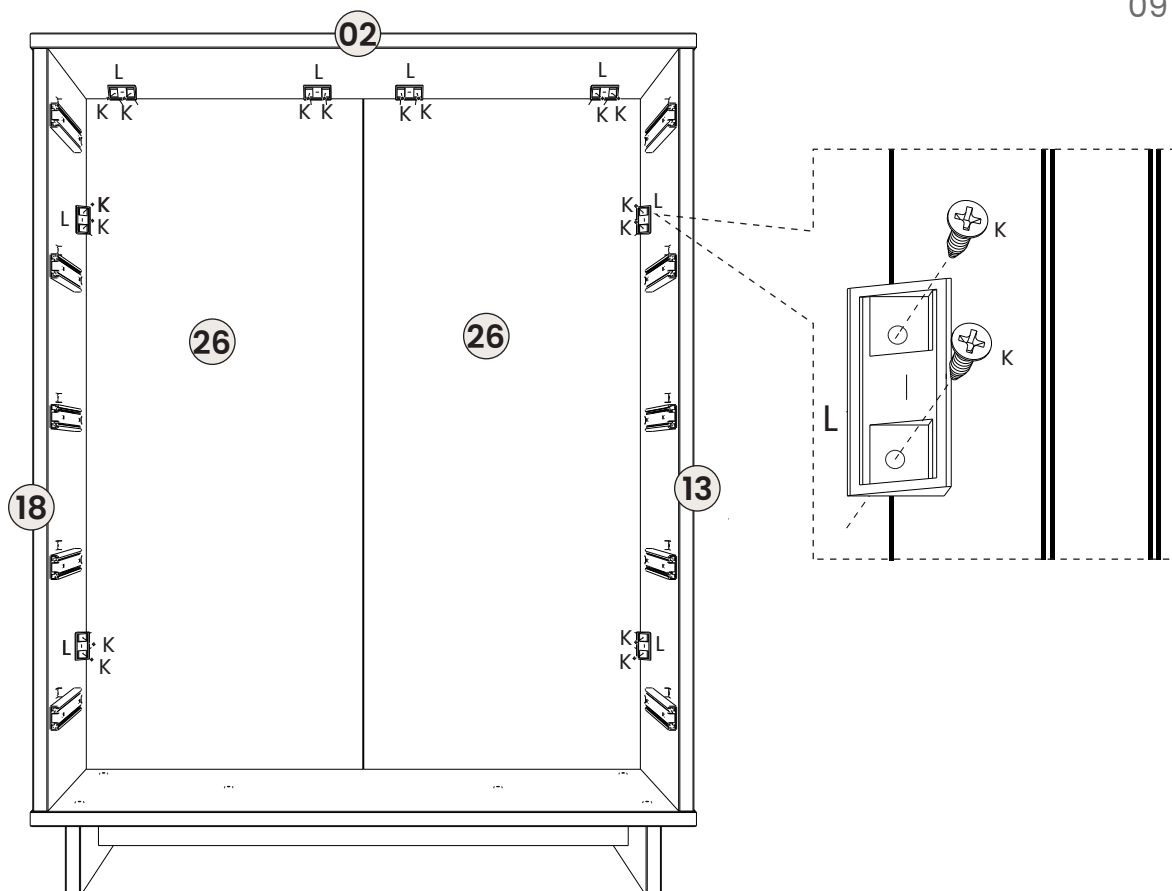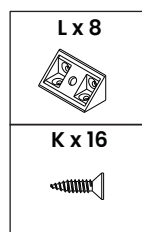


09

Fix screw K on parts 02-13-18.

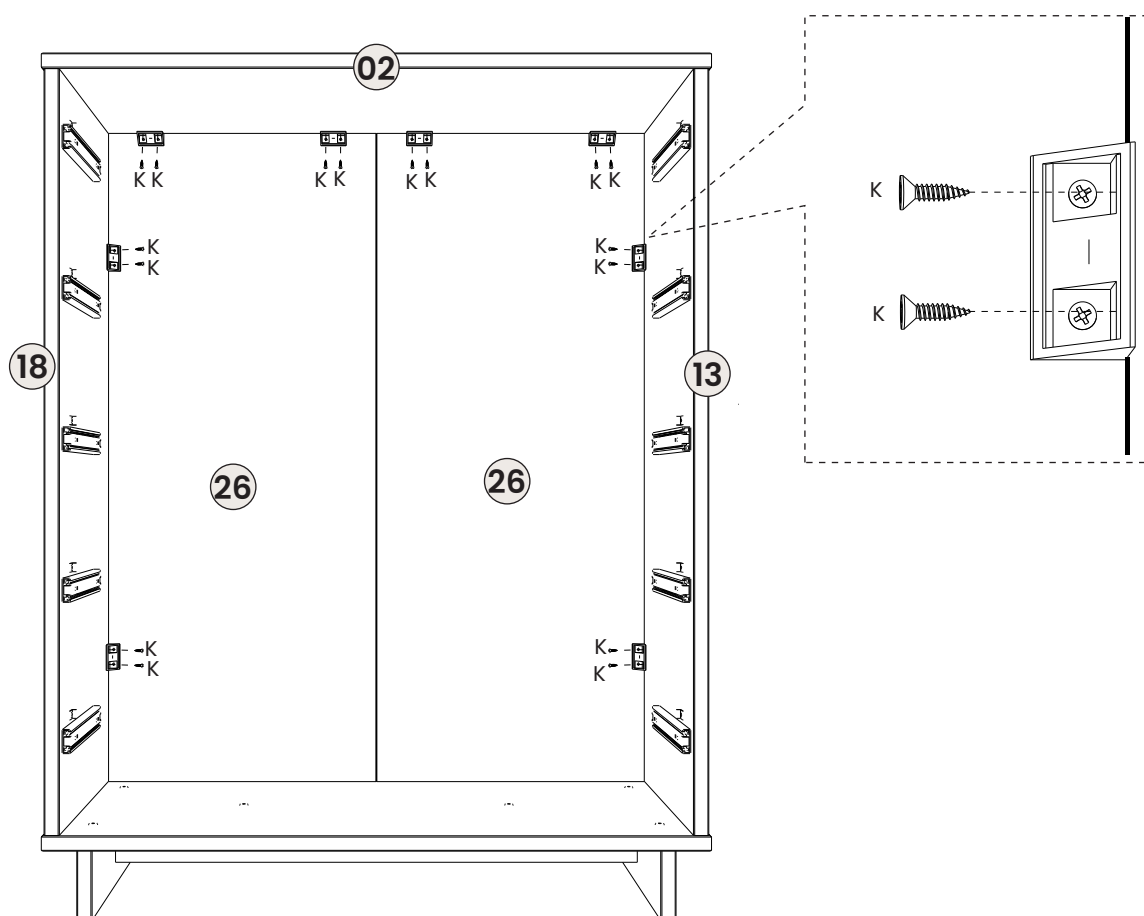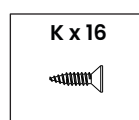



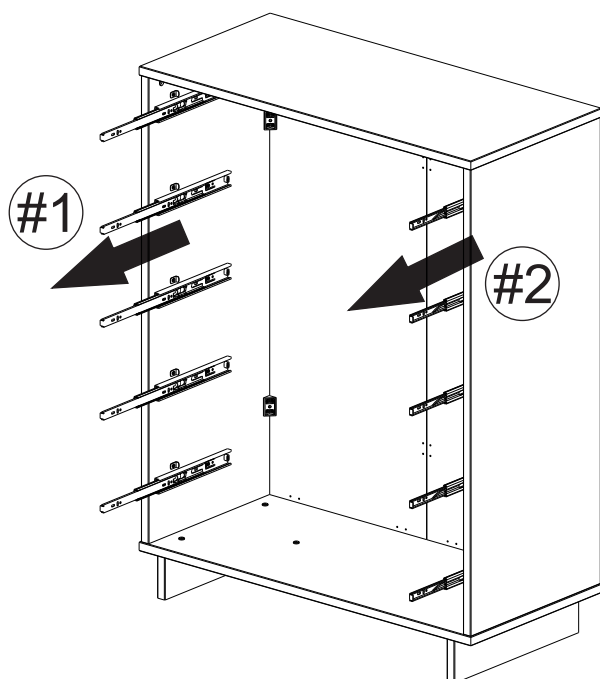


#1 x5

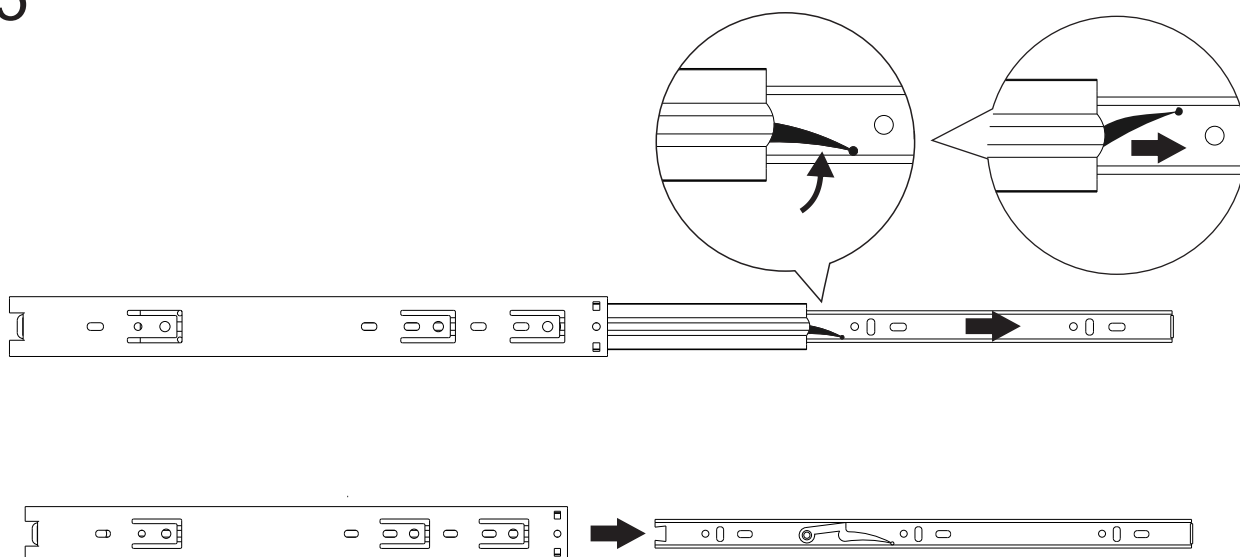

#2 x5

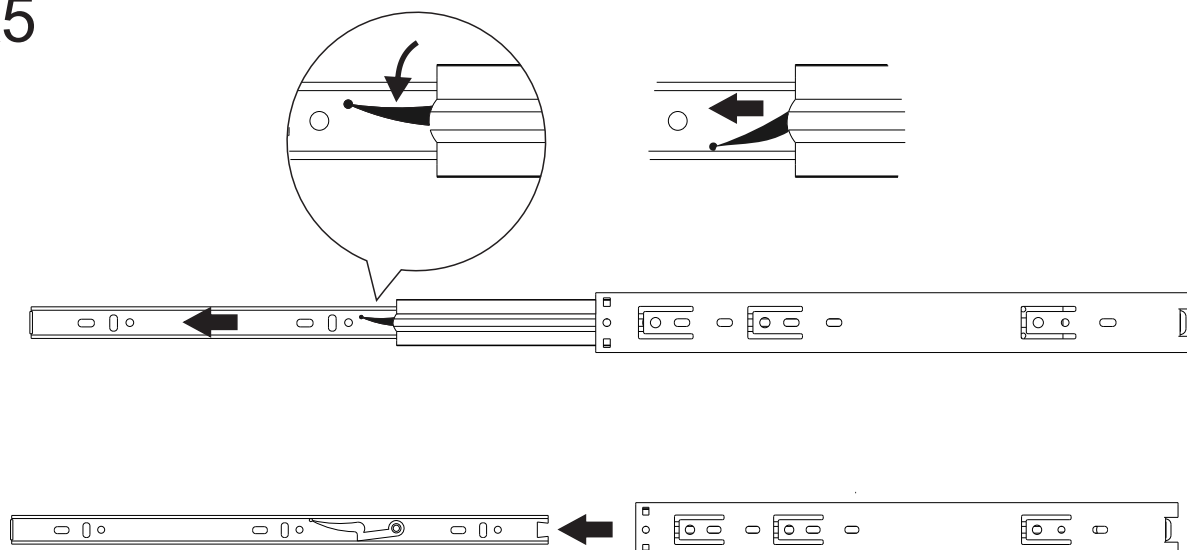

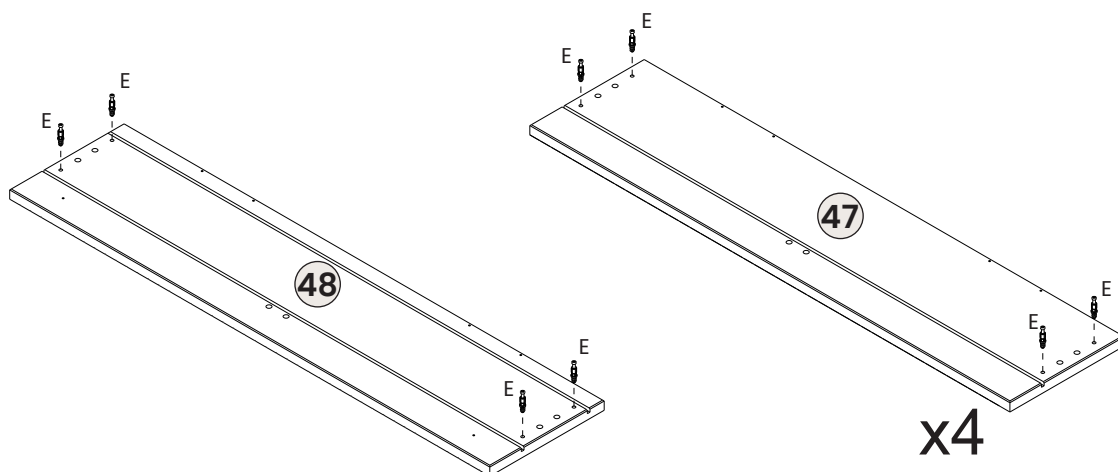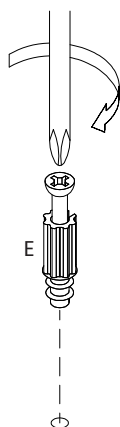


x4

E x 20



Specially to part 48, fix the part 65 with screw G.

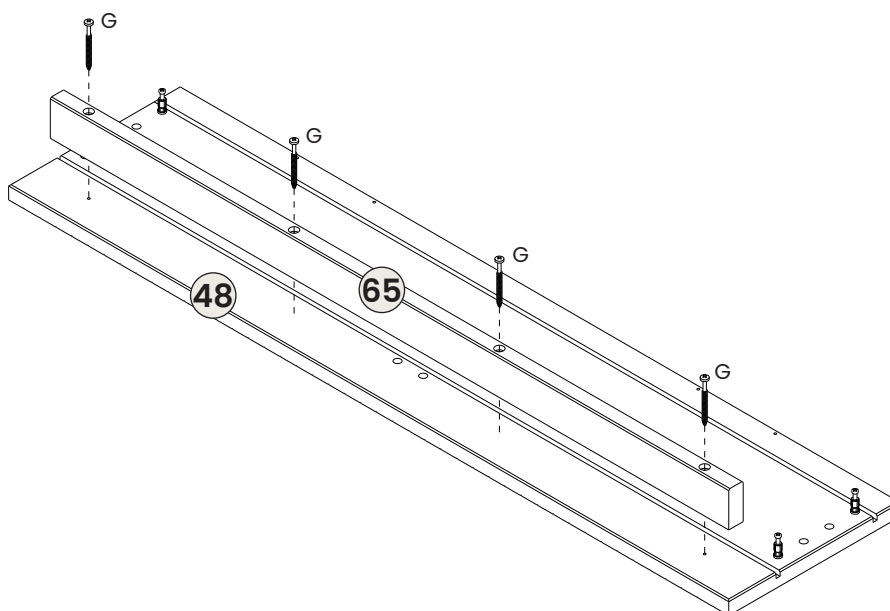Please, start by arranging the ends using the pre-drills.**Then fix the intermediate screws.**

G x 4





13



The sides of the drawers have pre-defined holes to help with fixing.

Correctly position the internal part of the slide (removed in step 10 on page 10) with the pre-defined hole on the drawer side.

Then fix them with screw K.

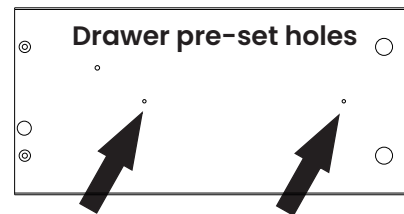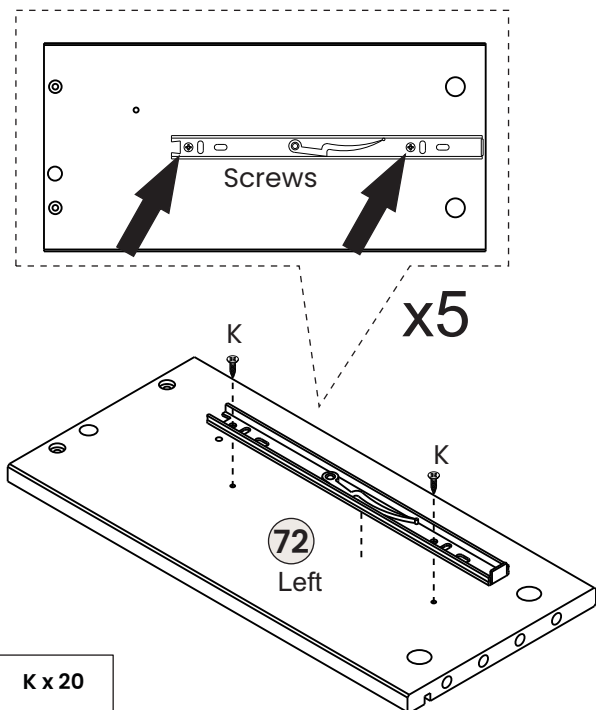

12

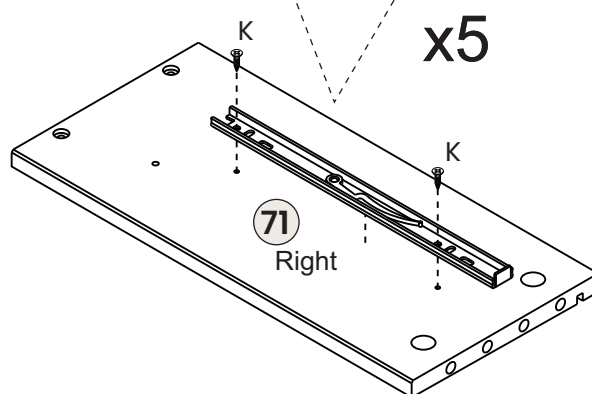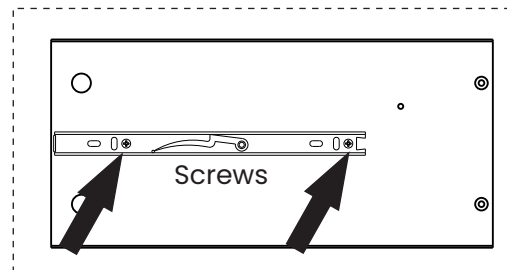

K x 20




14

Attach the parts 48 to parts 71-72 with hardware B.

Then, apply the hardware F and lock it according the example below.

Equally, the same process is applied to parts 47-71-72.

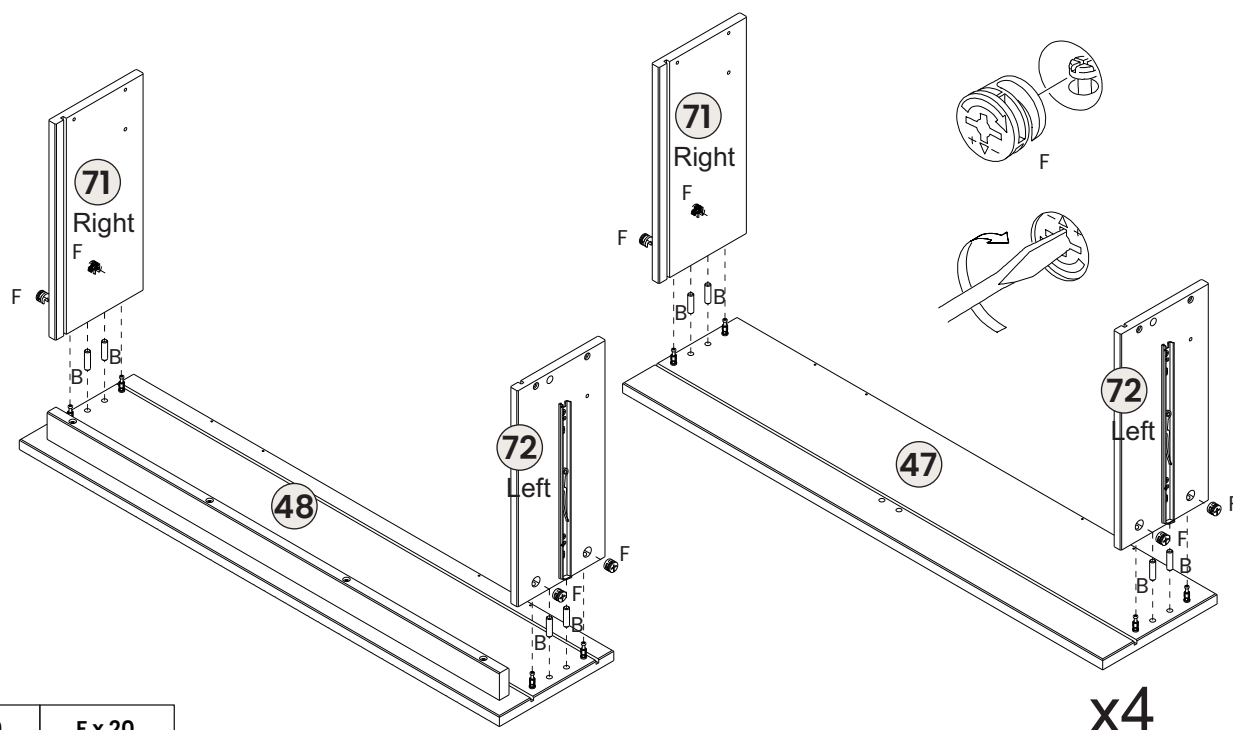

B x 20

F x 20




TOP DRAWER

15


Apply the part 60 in the groove of the parts 71-72.

Then, attach the part 68 to parts 47-48 with hardware B.

13

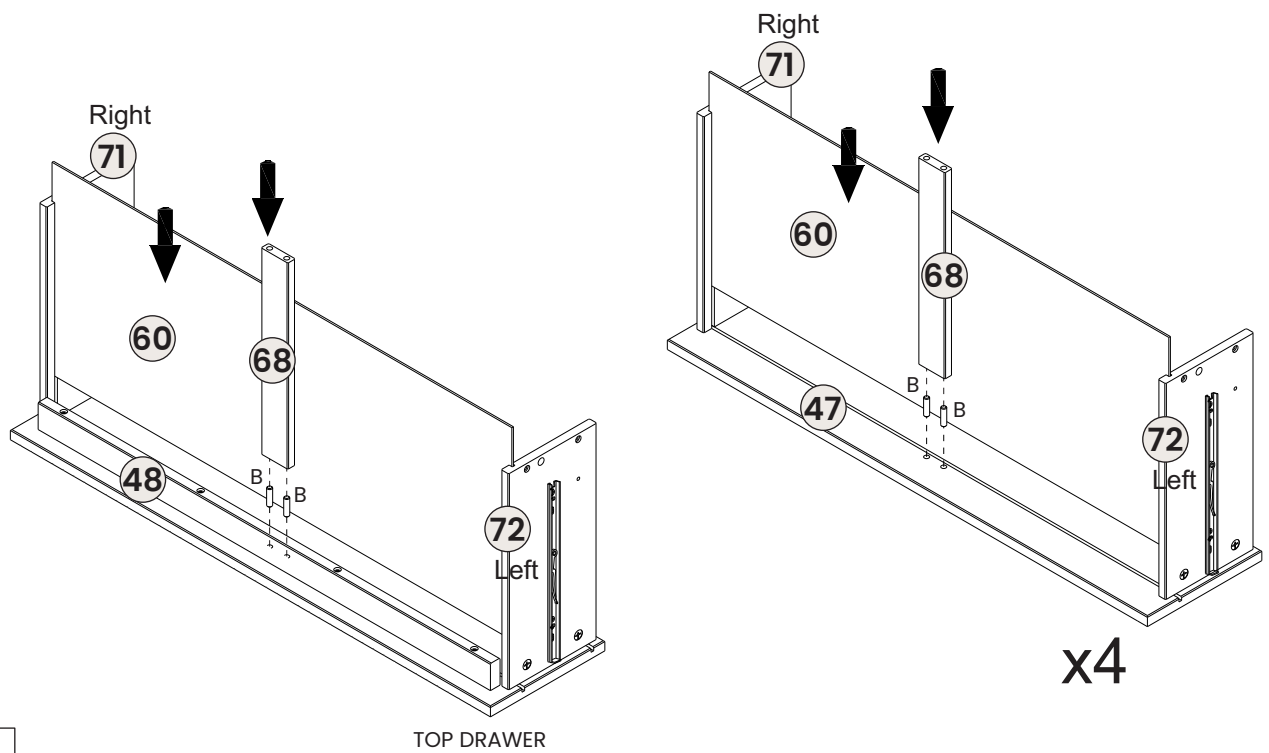


B x 10



16


Attach the part 55 to parts 68-71-72 with the hardware B.

Then, fix the parts 71-72 to part 55 with screw A.


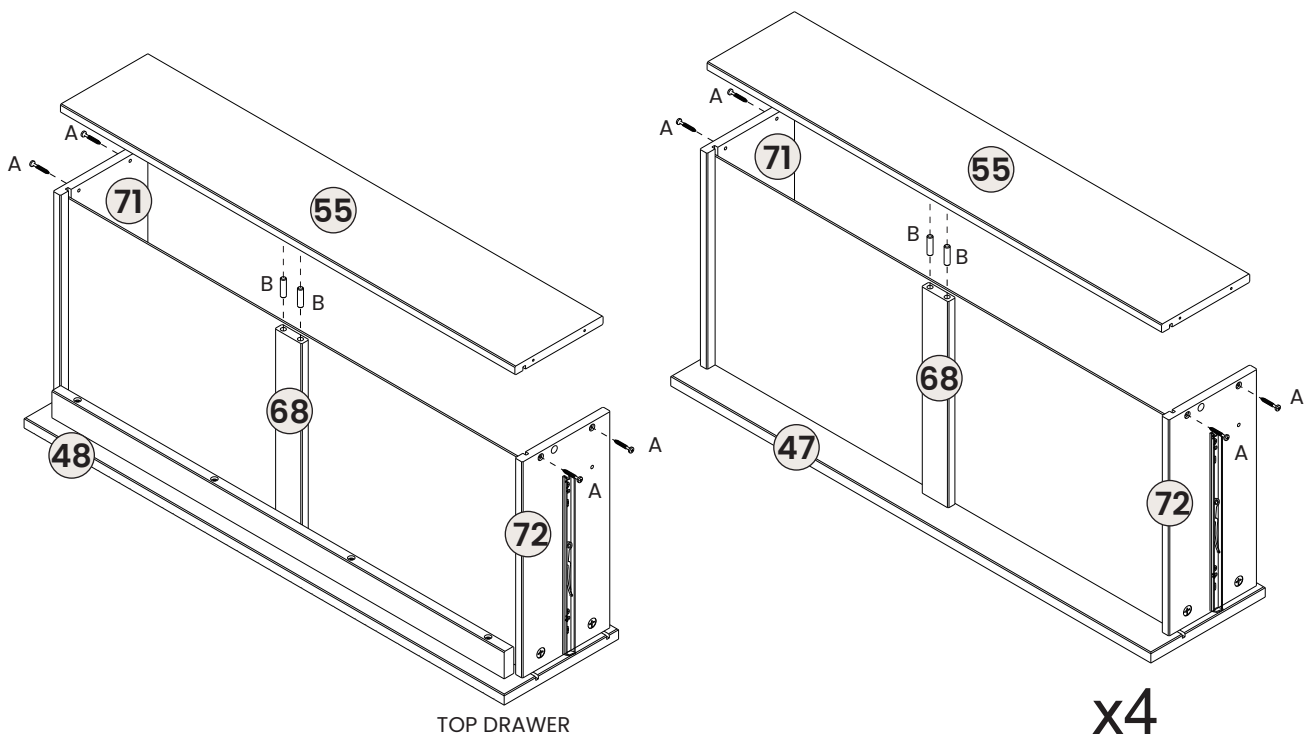


Bx 10


Ax 20



- 17** Apply the hardware D to parts 47-48.
Then, fix them with screw C.

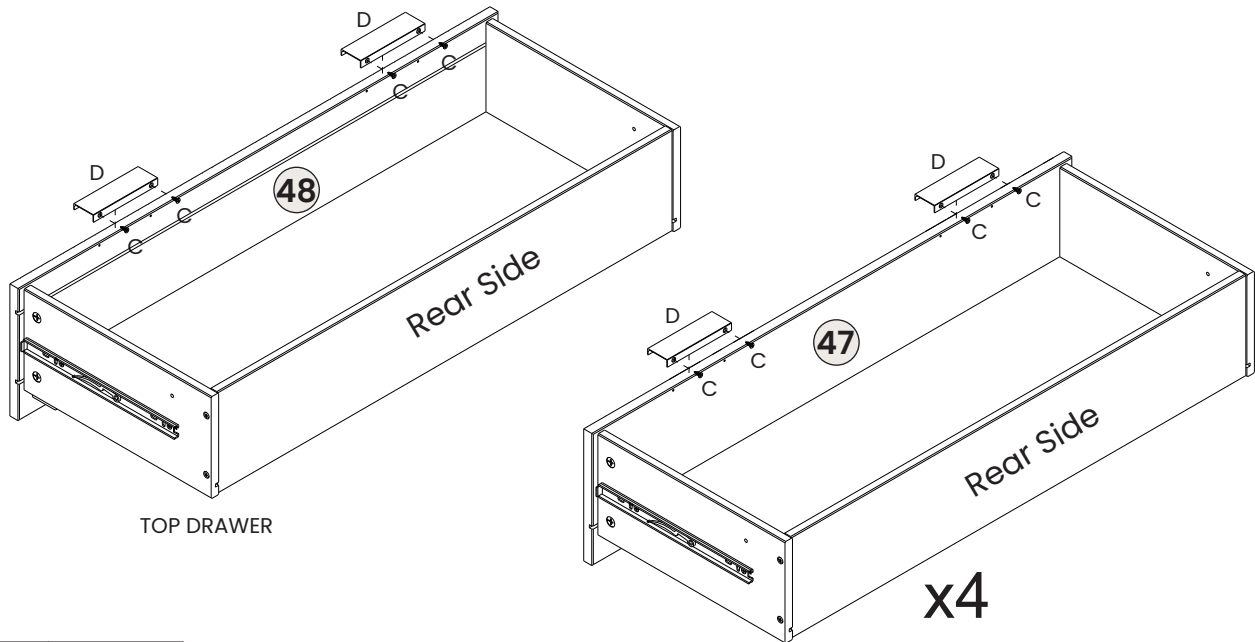

- 18** Insert the drawer carefully. You must put a drawer opening limiter screw.
Firstly, keep the drawer partially open so that the limiter screw hole is behind the limiter bracket according to the detail.

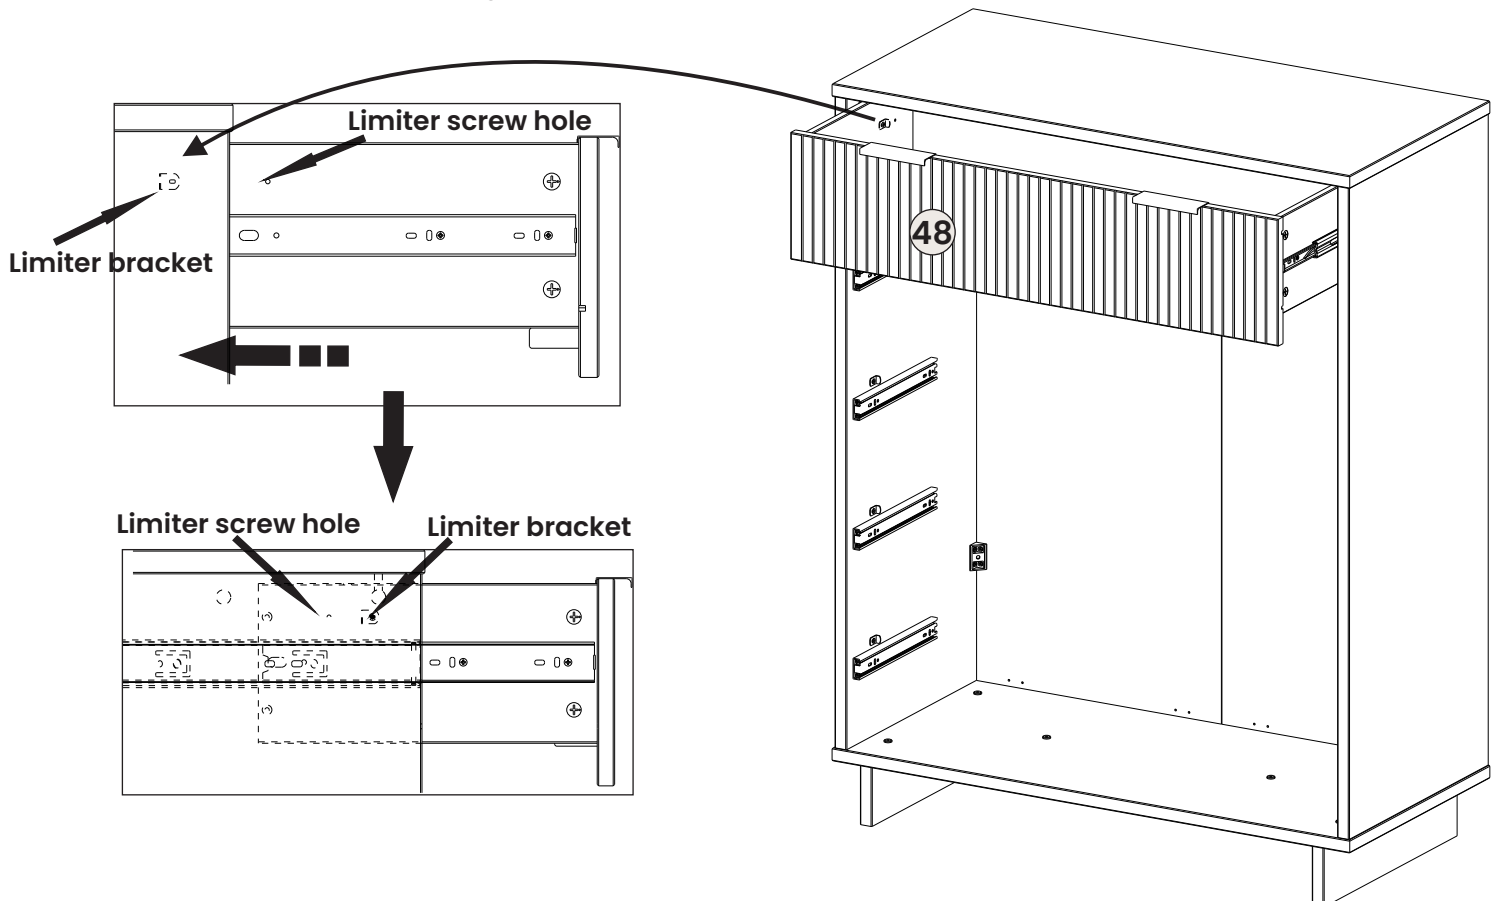


19

ATTENTION: ensure the limiter screw hole is before the limiter bracket.


Then, place the screw #PA.010 to retain the full opening of the drawer.

15

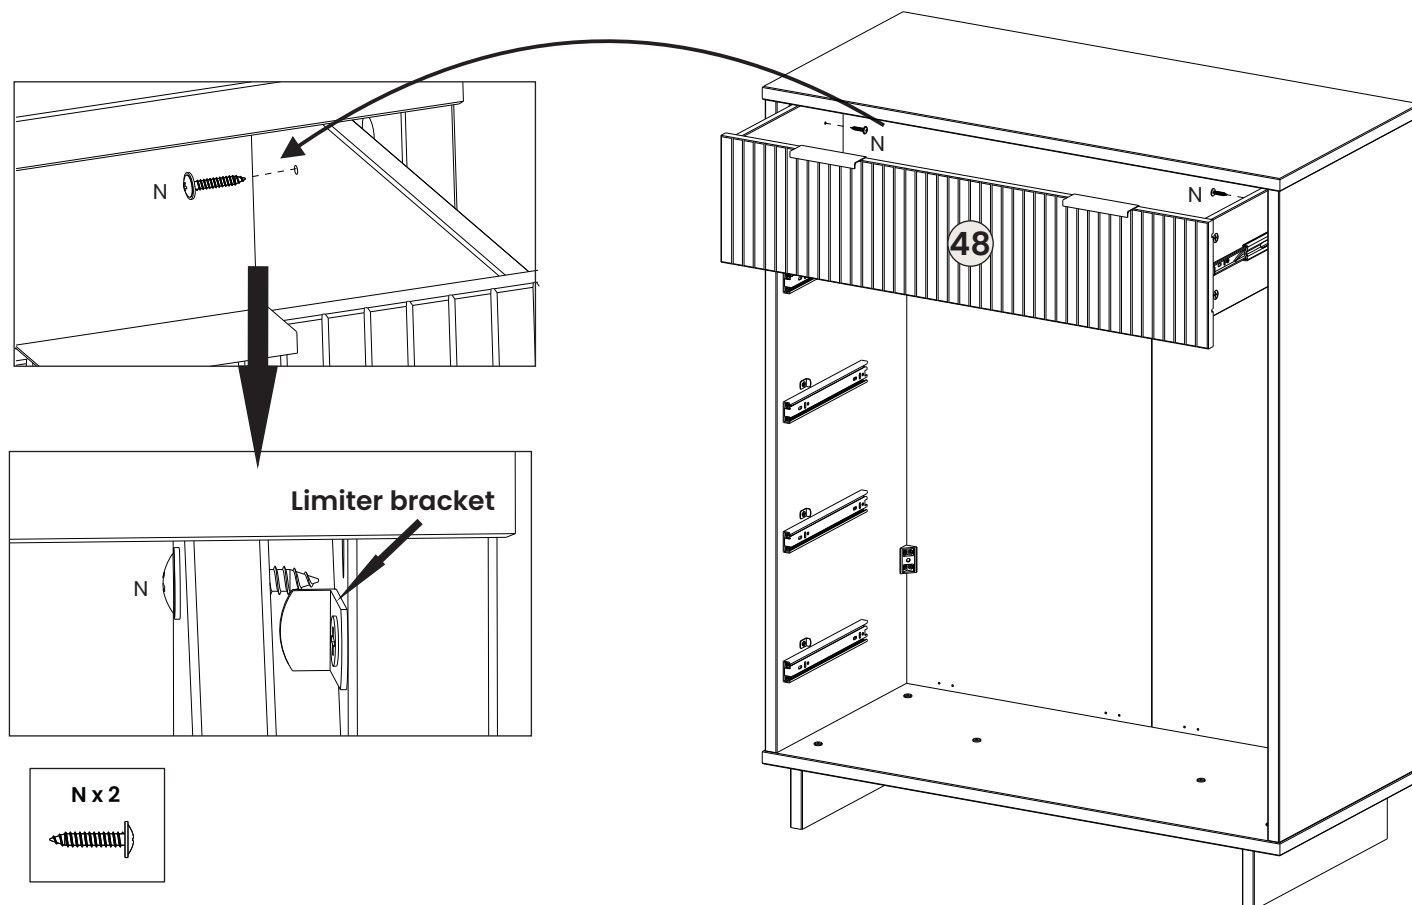

20

Apply the same process to drawer opening limiter to the others drawers.

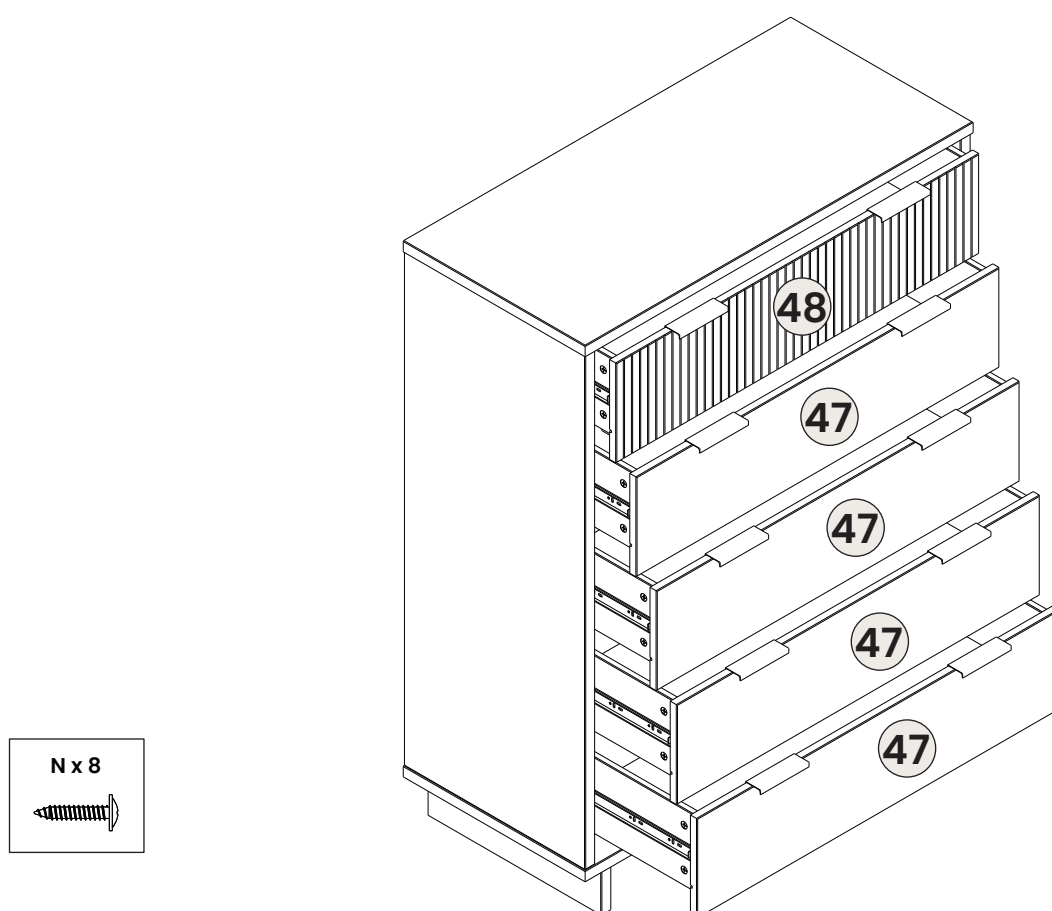


21

You must install the Tipover Restraint Kit (J) provided, in the rear side of the furniture.

Position the hardwares #18256EXP and #20522.

Fix them with screw #11179.


16

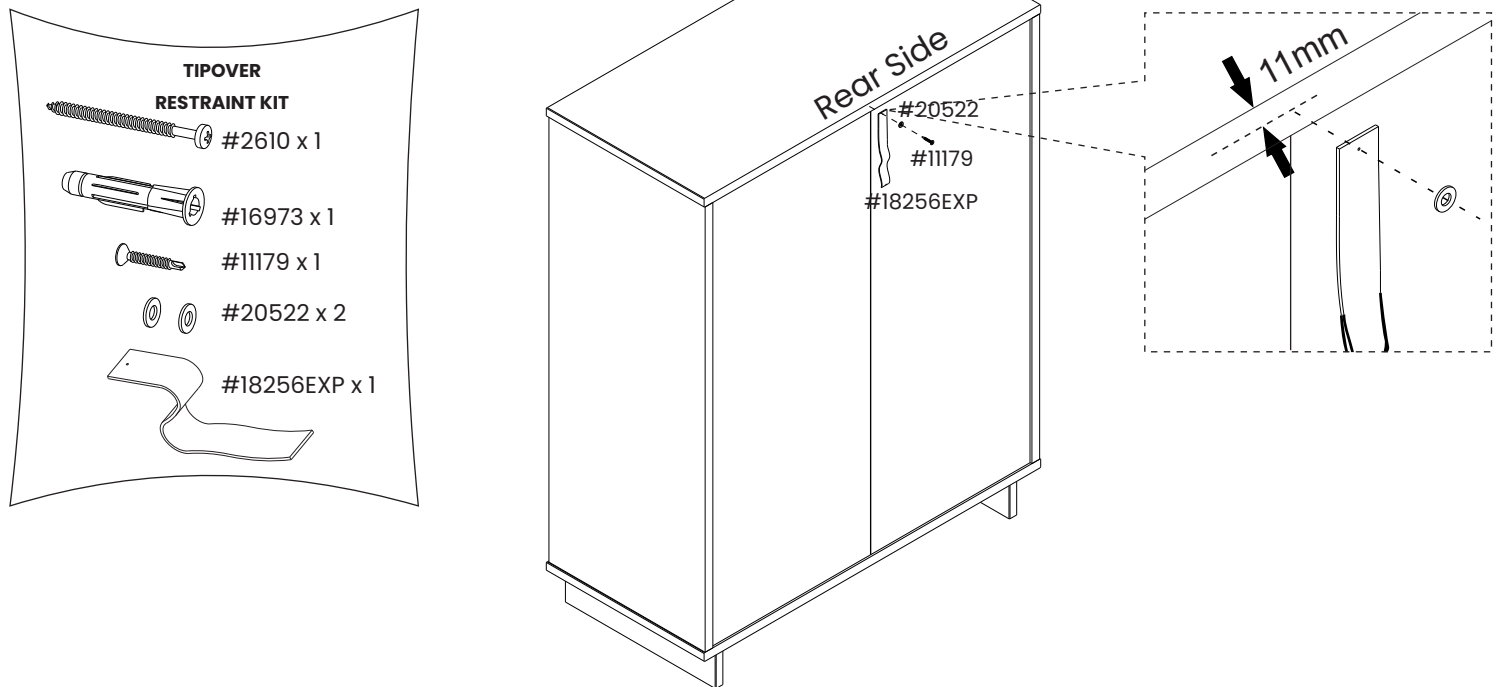

22

Approach the furniture as close as possible to the wall.

Then, mark with a pencil where you should drill the wall to put in the hardware.

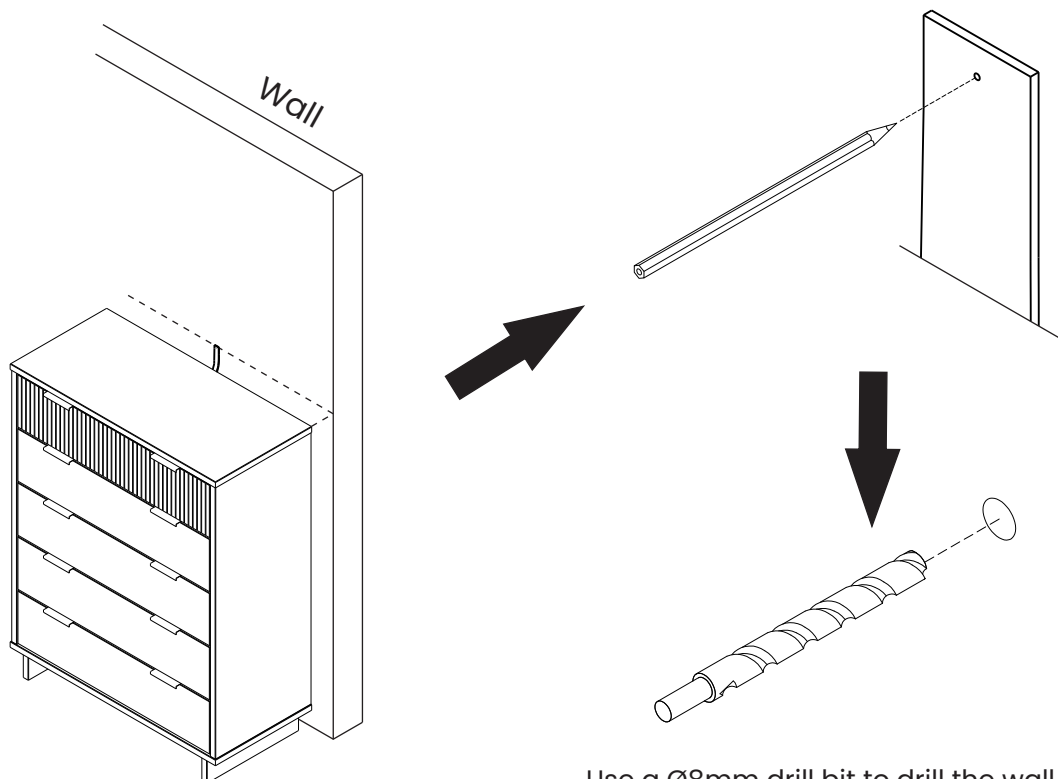


Use a Ø8mm drill bit to drill the wall.

23

Put in the hardware #16973 to the hole that you drilled on the wall.
Then, position the hardware #18256EXP and #20522.
Finally, fix them with screw #2610.

17

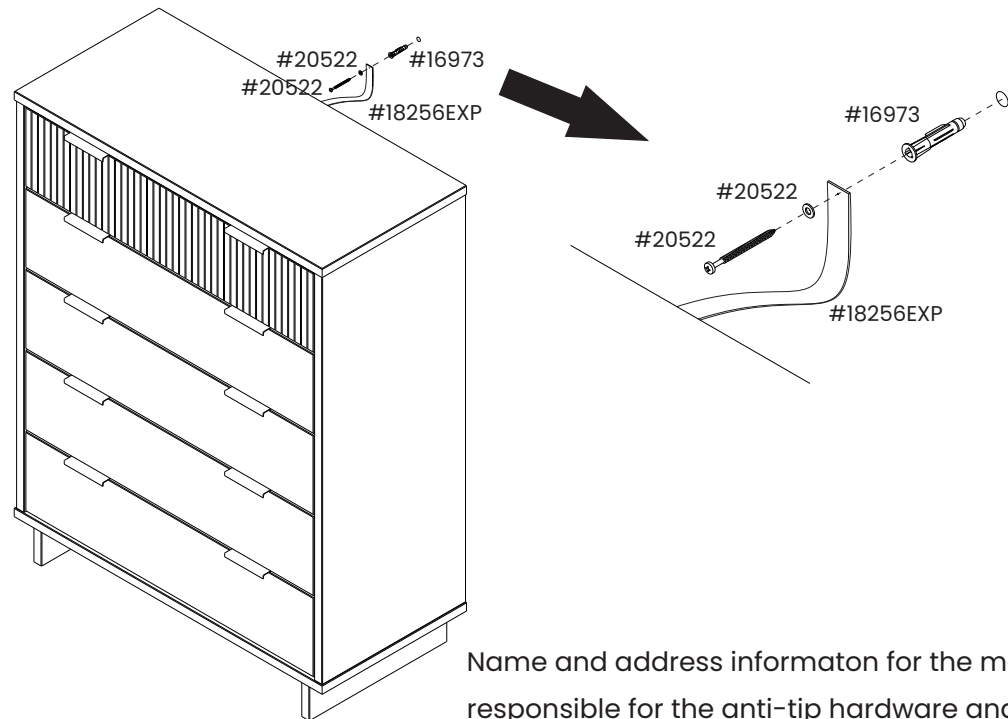

Name and address information for the manufacturer responsible for the anti-tip hardware and date of production can be found on the label on the back of the furniture.



MANHATTAN COMFORT

WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810

908-888-0818