




ASSEMBLY INSTRUCTIONS

IGLO DAYBED NEW

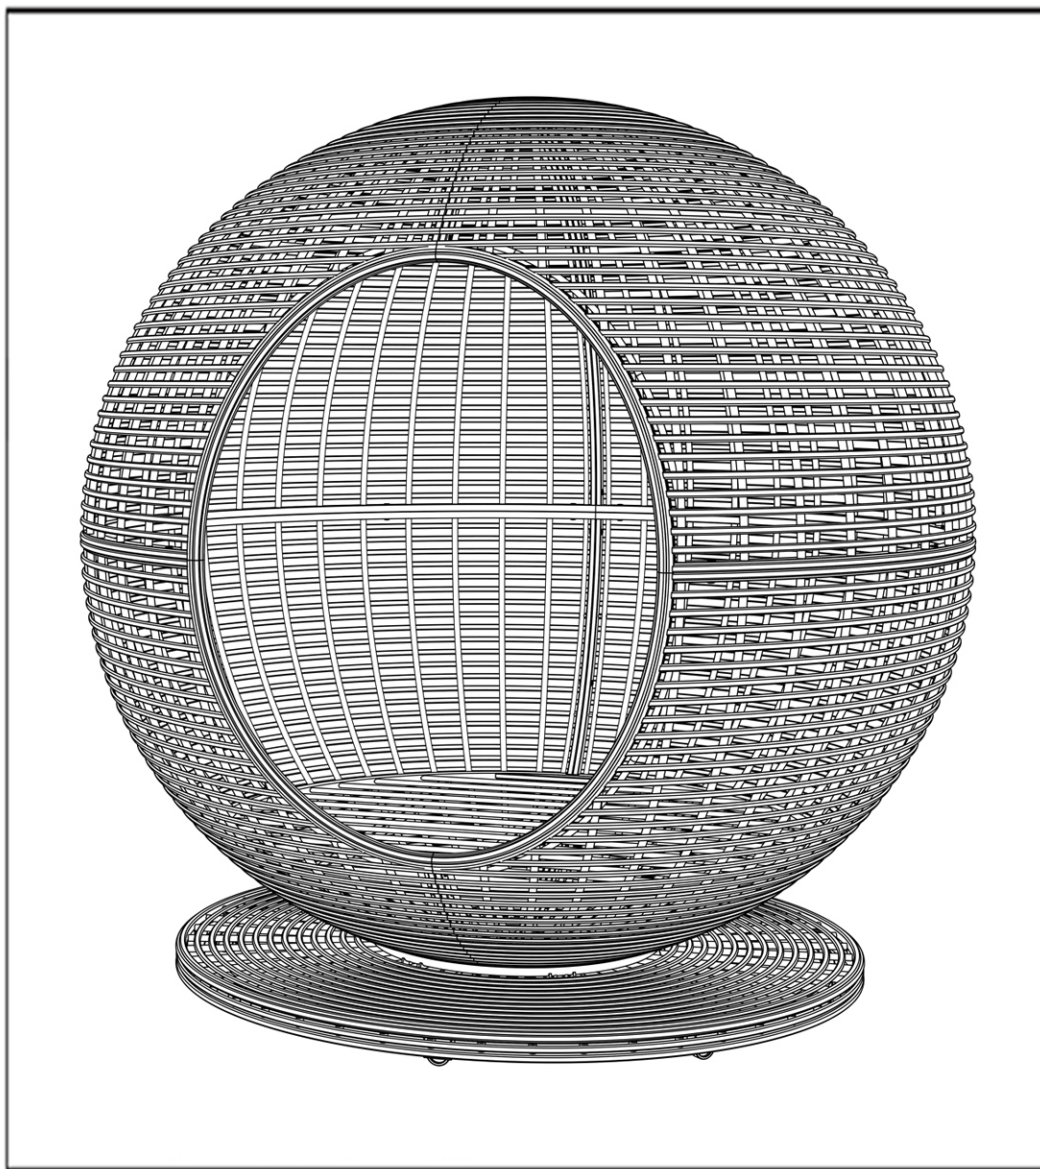


ASSEMBLE WITH CARE !!!
ALWAYS USE ONLY SUGGESTED TOOLS
ACCORDING TO THE INSTRUCTIONS !




TWO PEOPLE REQUIRED

PARTS INCLUDED


① LEFT PART (2 PCS)

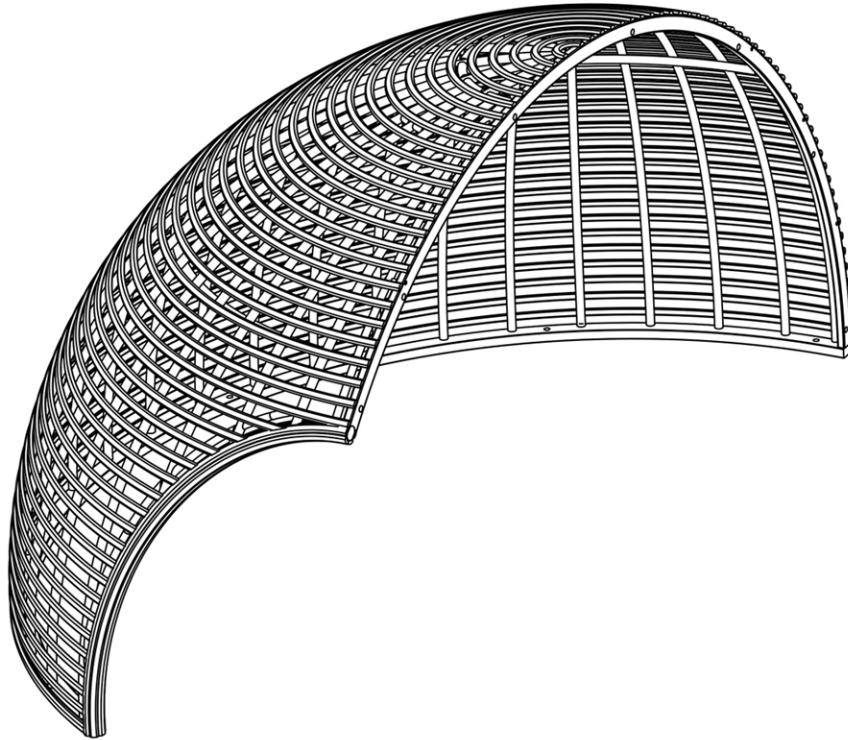


② RIGHT PART (2 PCS)

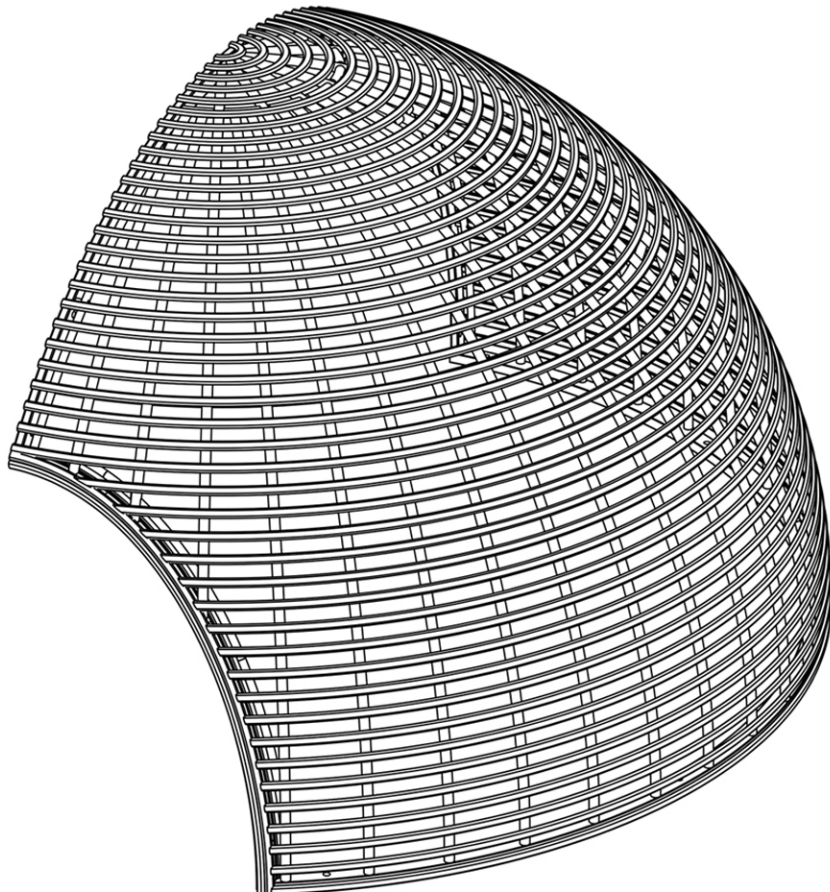

3 BASE PART (1 PC)

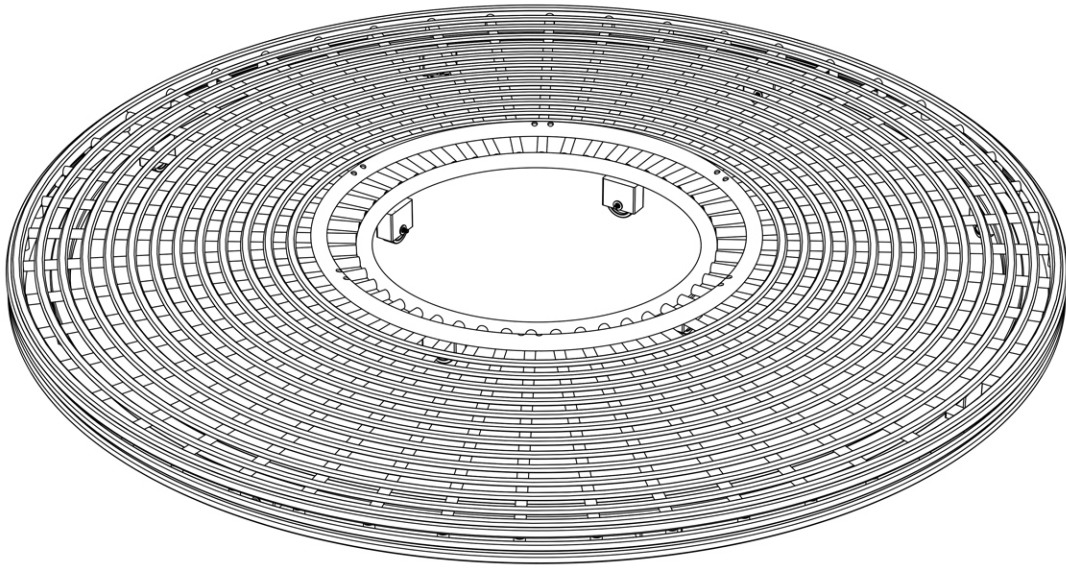


4 SEAT PART (1 PC)

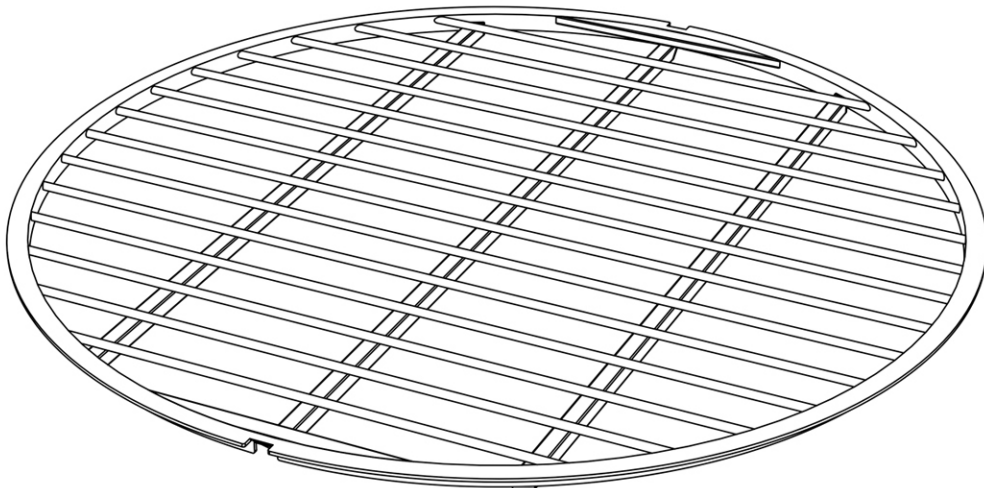

HARDWARE INCLUDED


A

SPANNER 13-13 (1 PC)

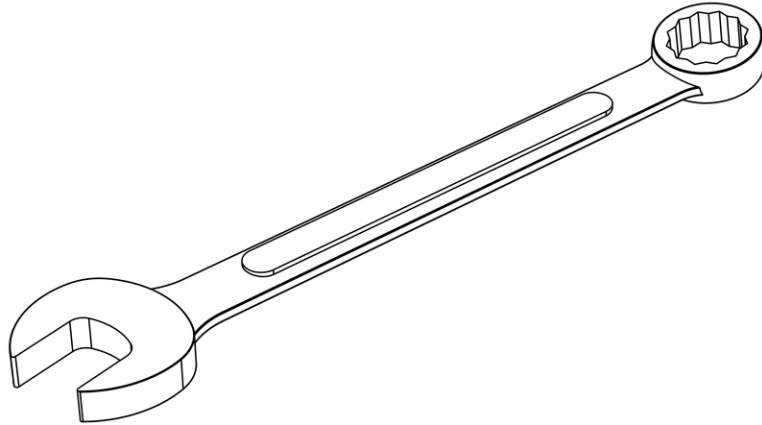


B

ALLEN KEY 5mm (1 PC)

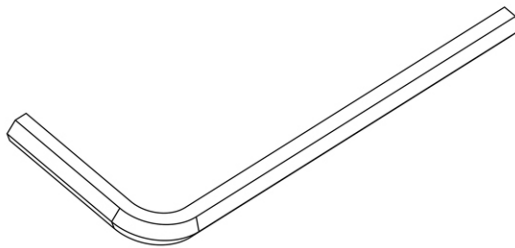


C


ALLEN KEY 4mm (1 PC)

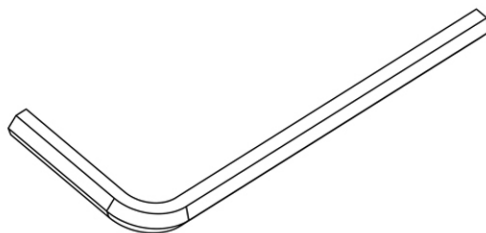


D BASE CONNECTOR(6 PCS)

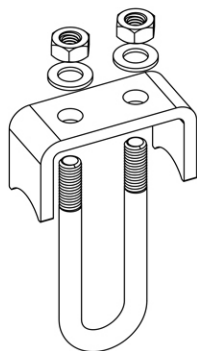


E BAR NUT SET Ø 10 x 30mm (14 PCS)

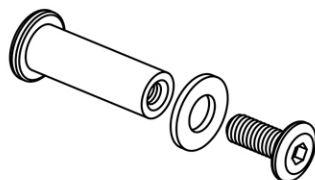


F BAR NUT SET Ø 10 x 40mm (10 PCS)

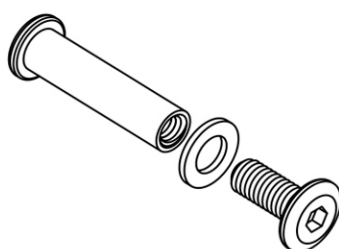


ASSEMBLY INSTRUCTIONS

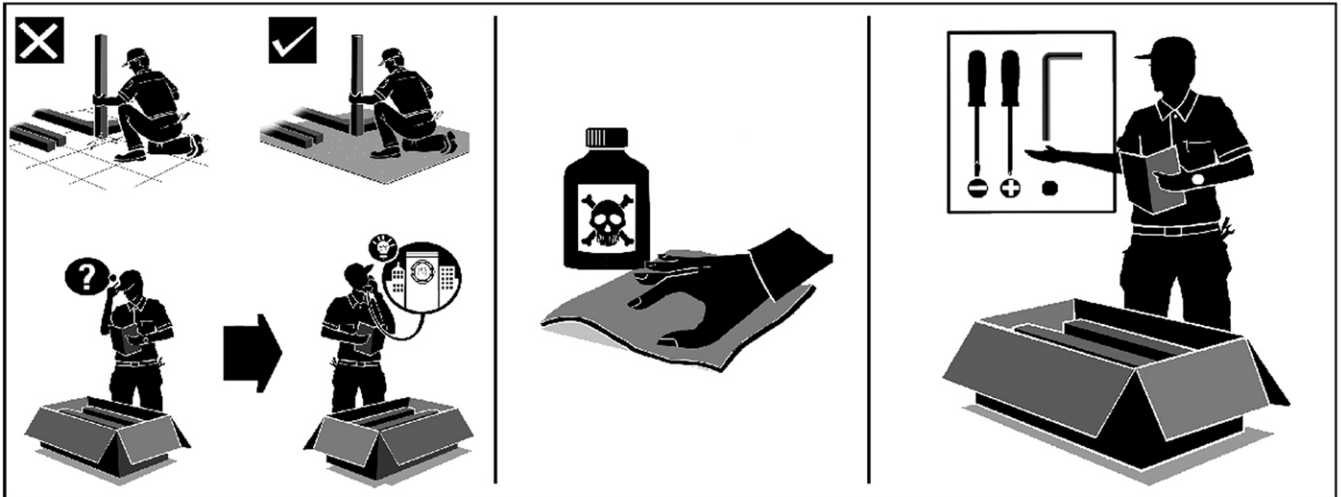


STEP #2 :
TIGHTEN ALL BOLTS FIRMLY
THEN LIFT UP AS SHOWN IN THE PICTURE BELOW

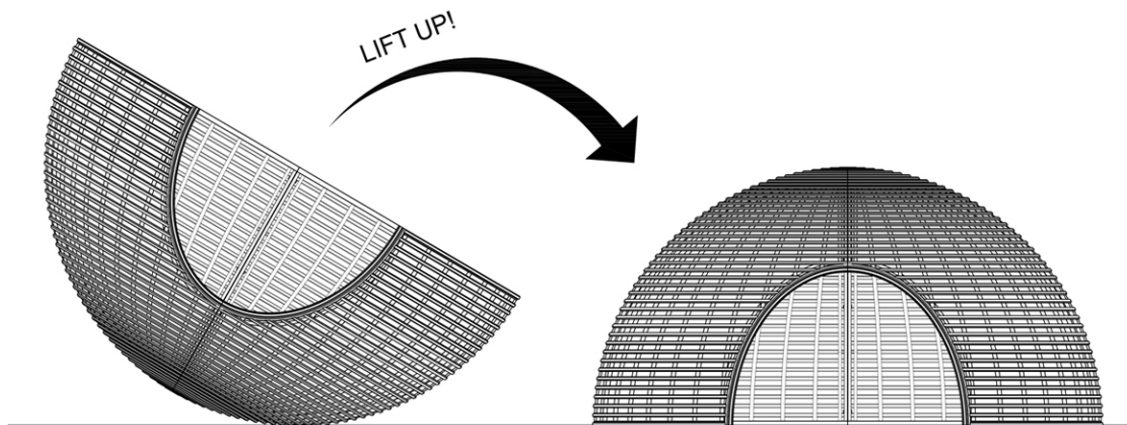


STEP #3 :
SELECT ONE (RIGHT & LEFT PART HAS BEEN ASSEMBLED)
THEN PUT THE BASE PART AS SHOWN IN THE PICTURE BELOW

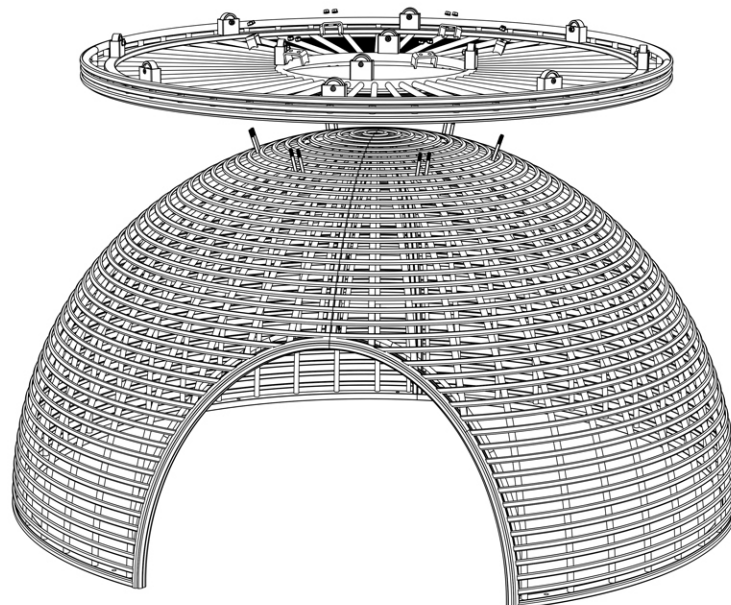


STEP #4 :
MAKE SURE THE CONNECTORS ON THE CORRECT POSITION
AS SHOWN IN THE PICTURE BELOW

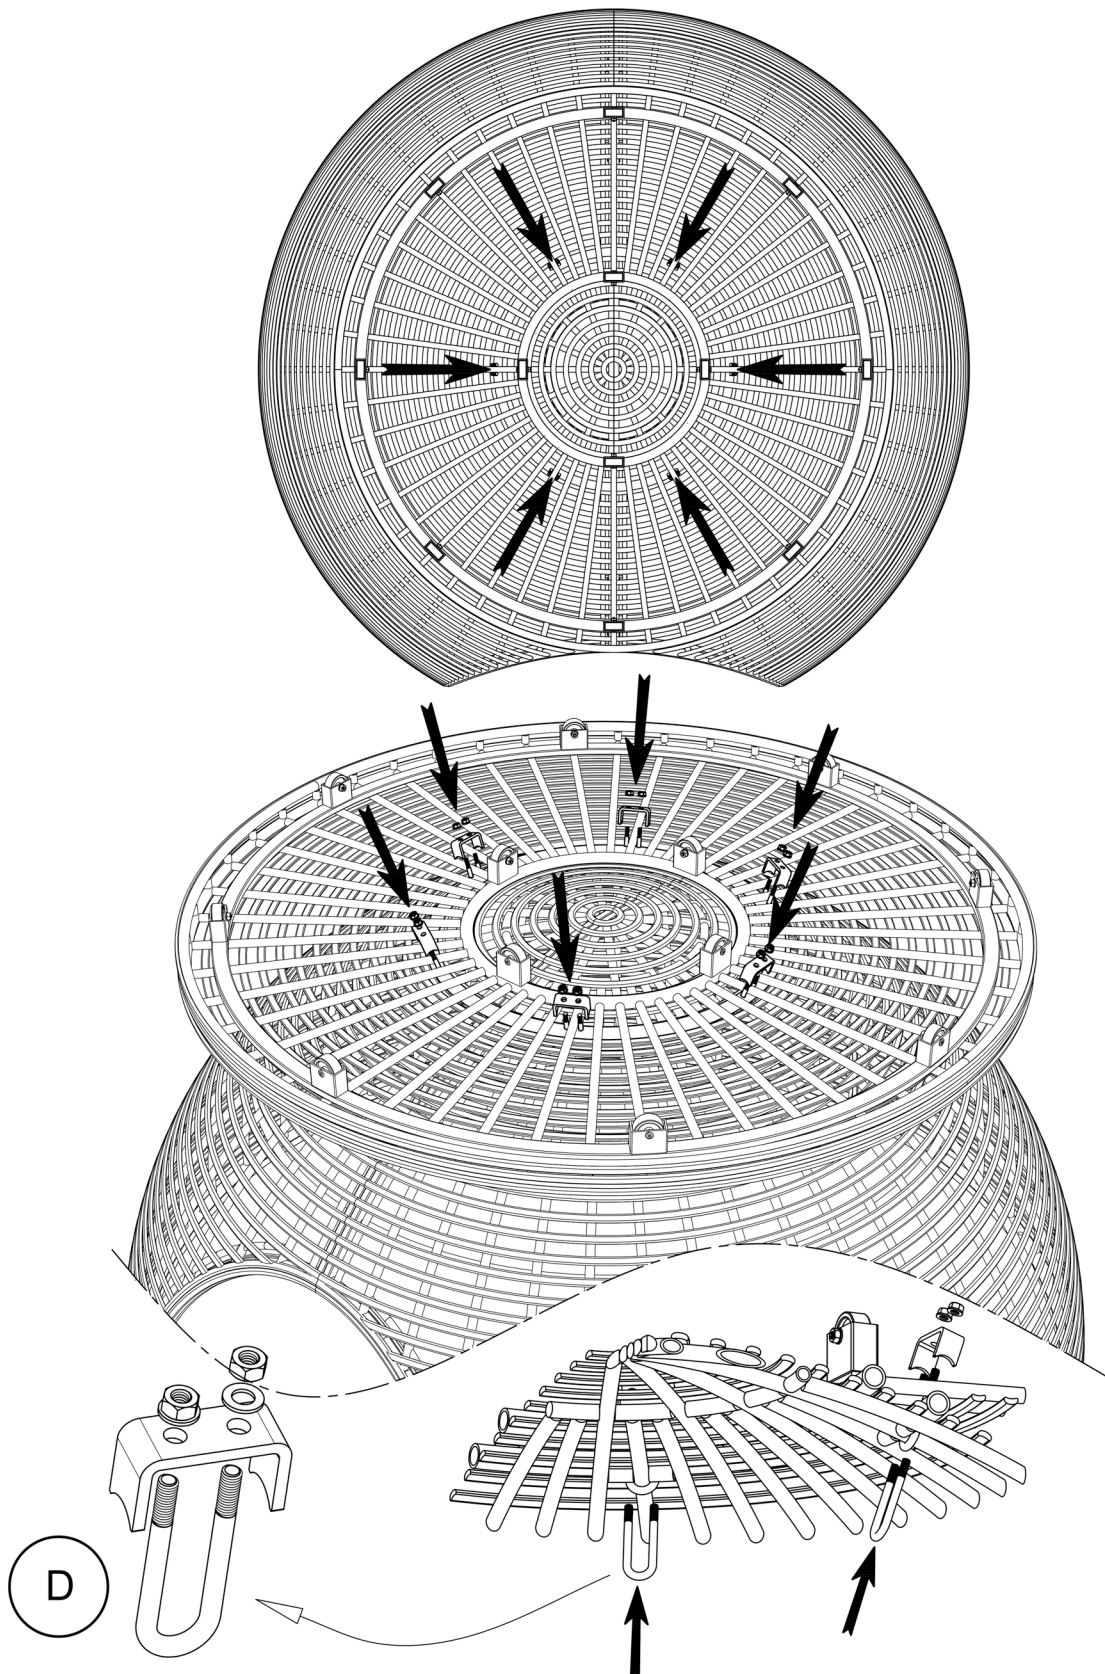


STEP #5 :
TIGHTEN ALL BOLTS FIRMLY
AS SHOWN IN THE PICTURE BELOW

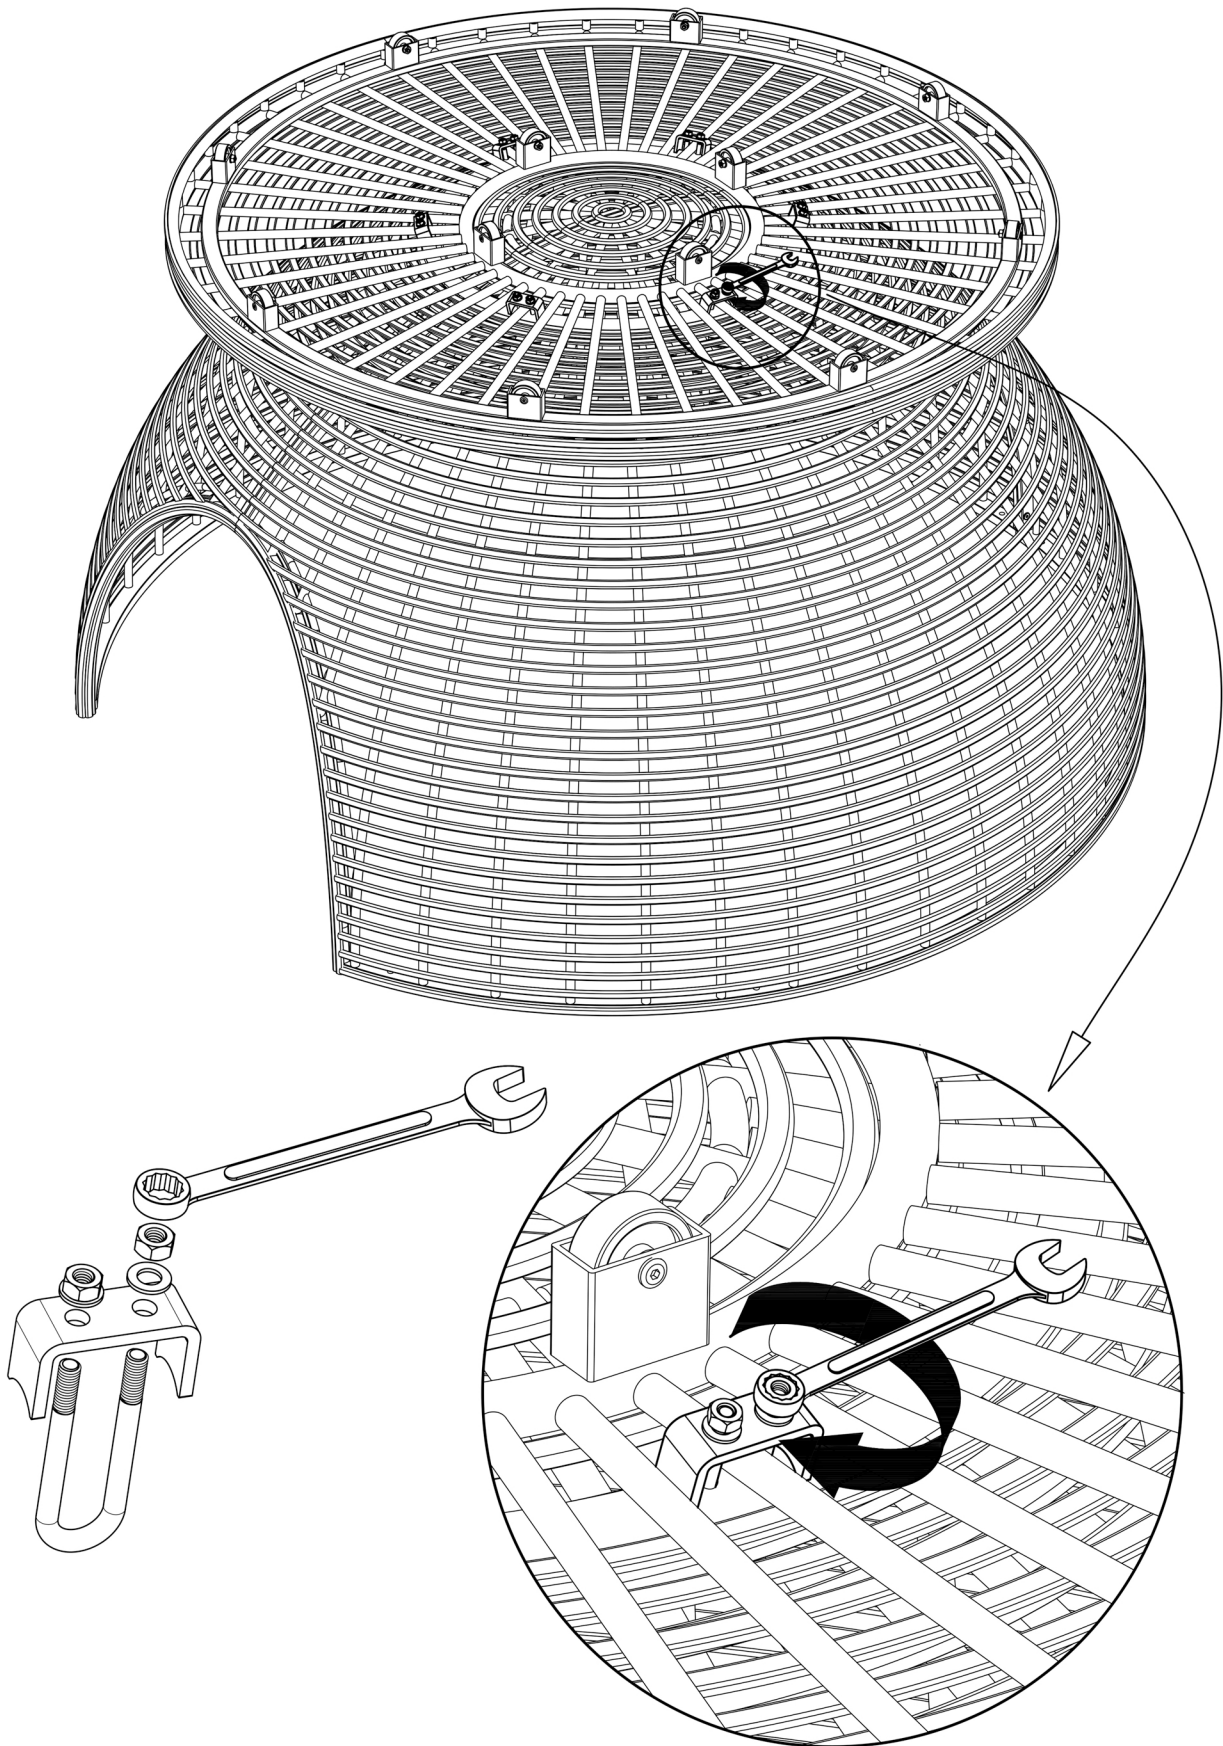


STEP #6 :
LIFT UP AS SHOWN IN THE PICTURE BELOW

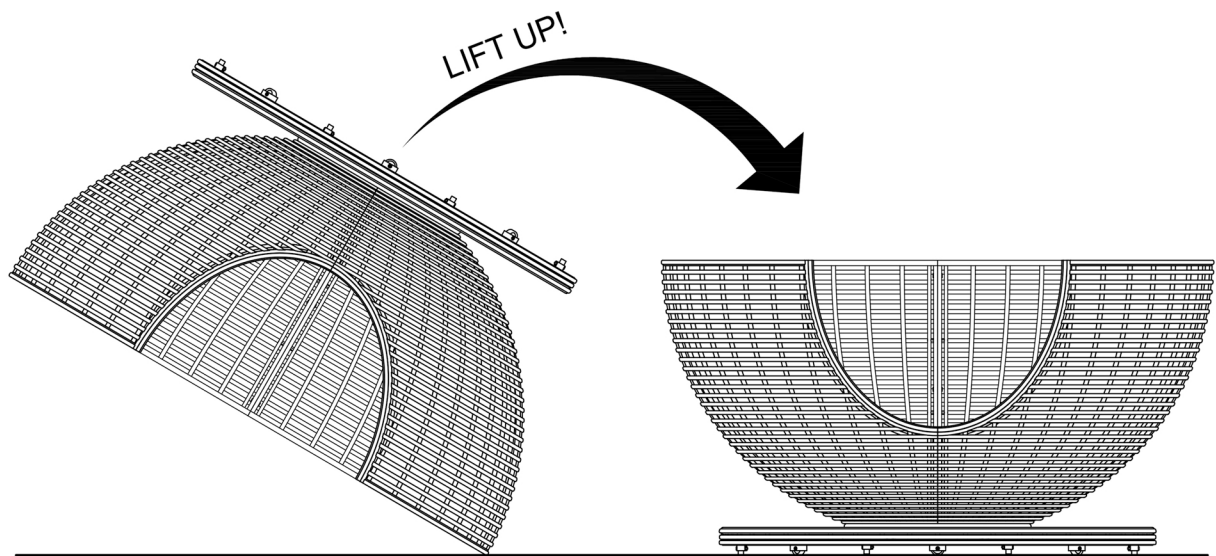


STEP #7 :
PUT THE SEAT PART AS SHOWN IN THE PICTURE BELOW

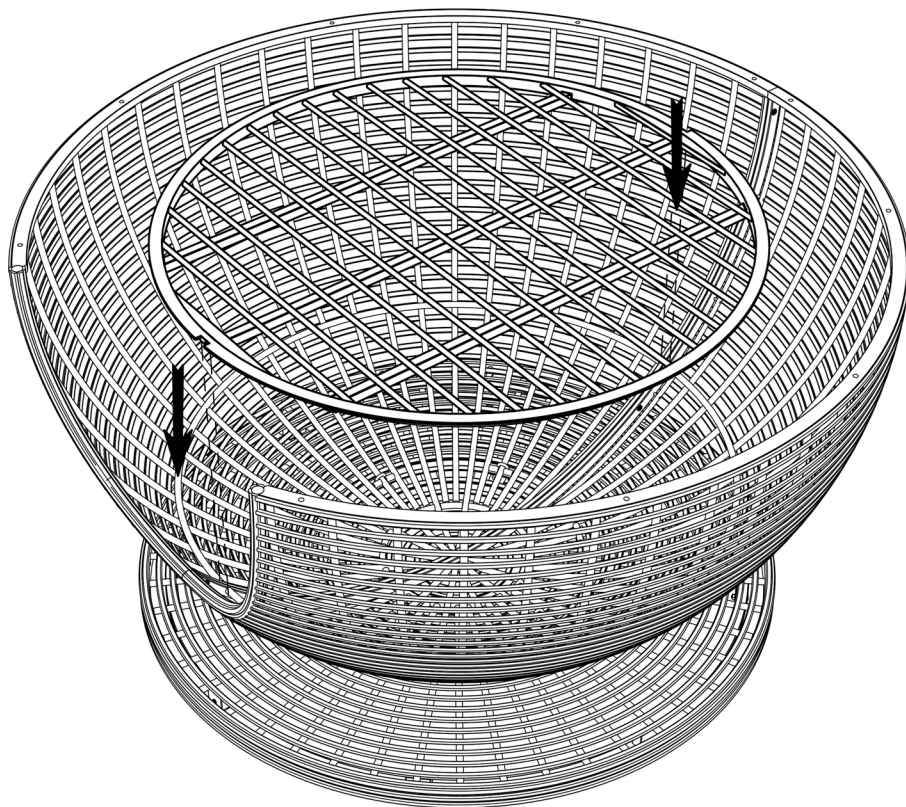

FINAL STEP :
ASSEMBLE TOP AND BASE
AS SHOWN IN THE PICTURE BELOW

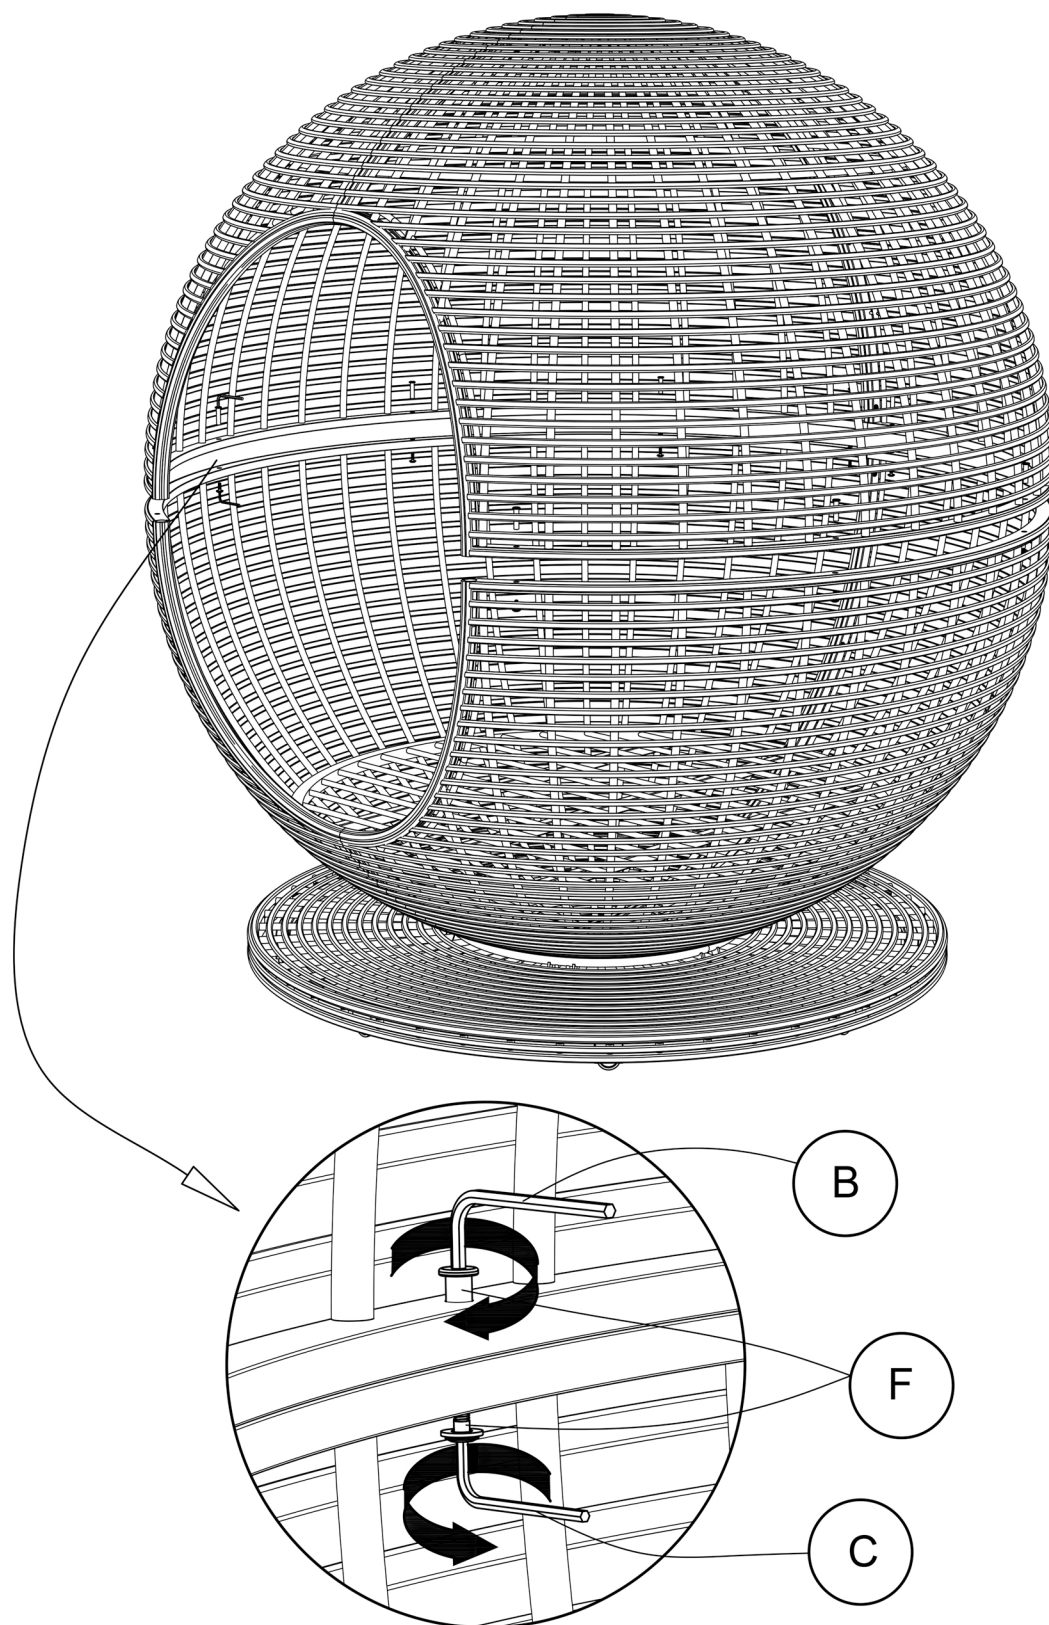

TIGHTEN ALL BOLTS FIRMLY AND FINISH

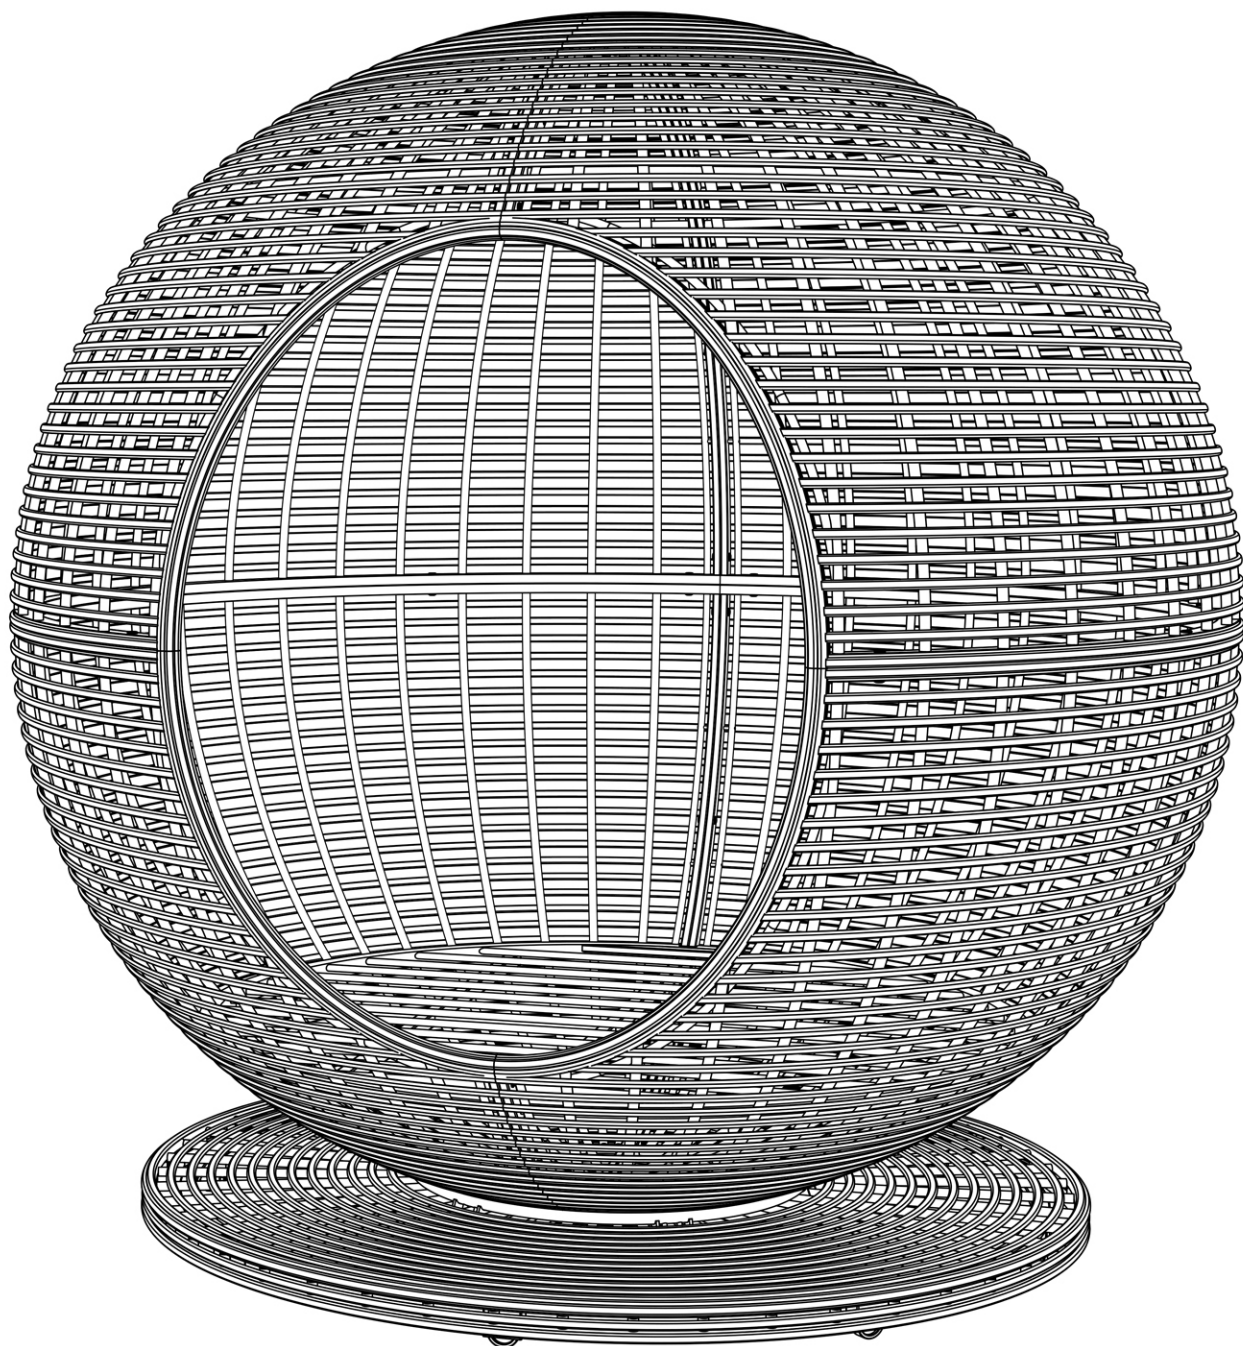

IGLO DAYBED NEW