




MANHATTAN COMFORT

NS1801

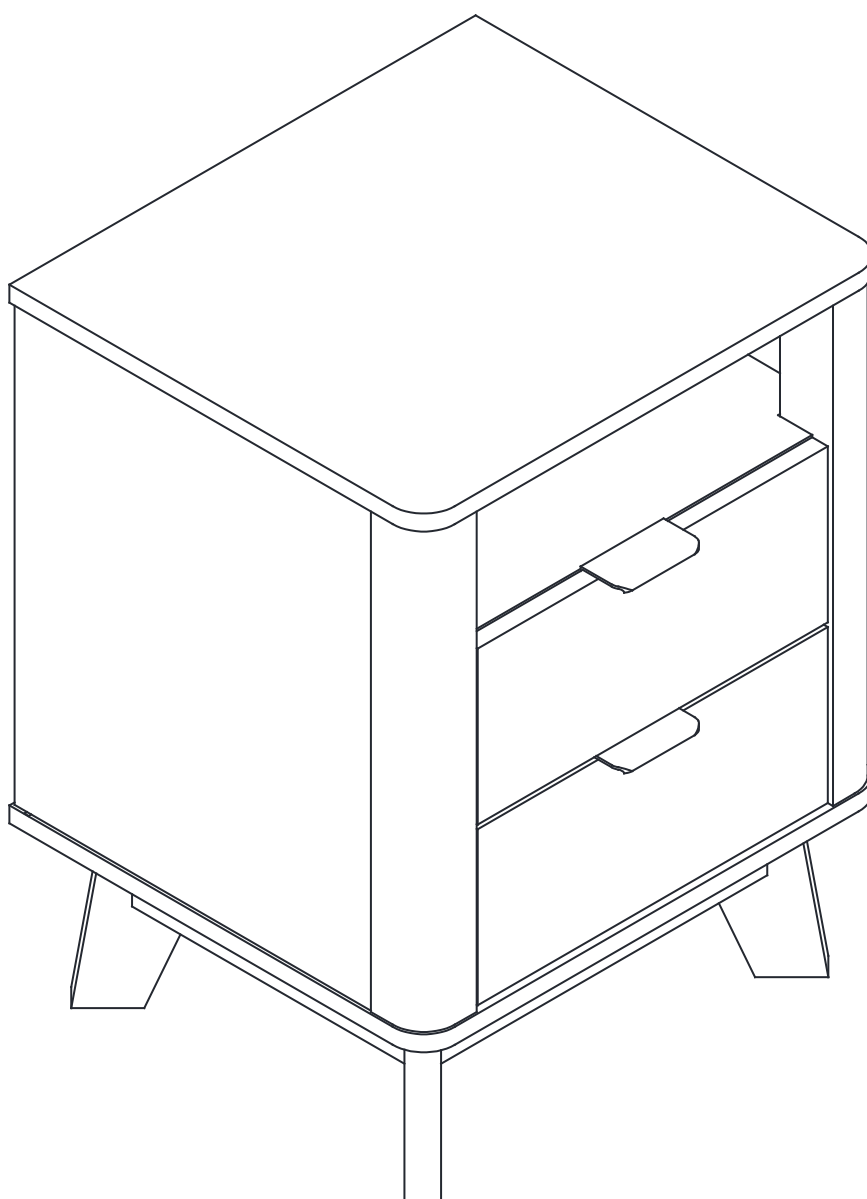




STOP!


Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

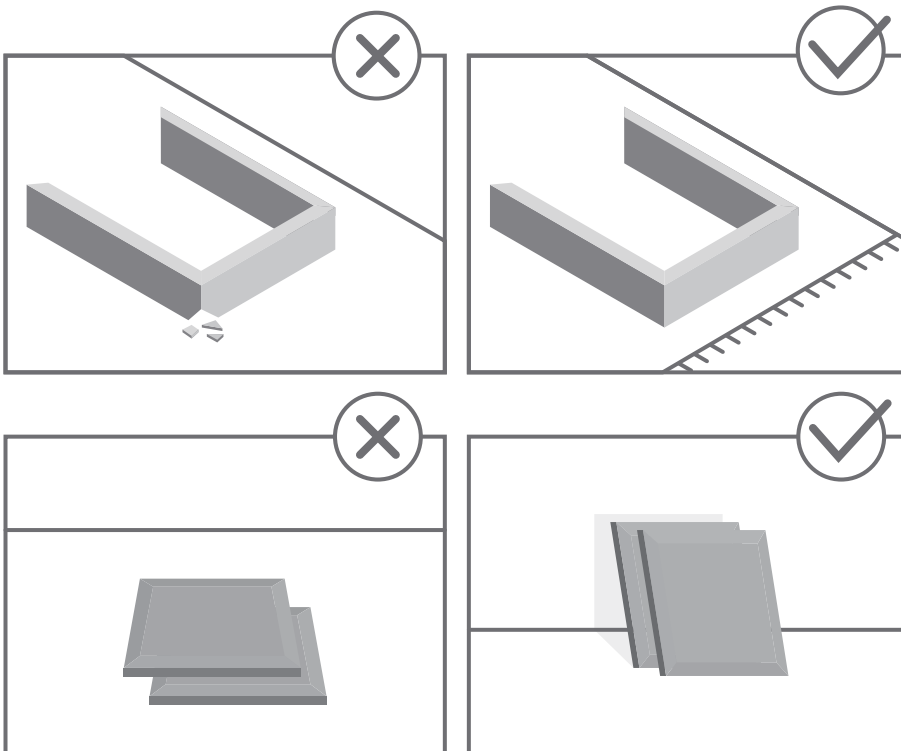

TOOLS REQUIRED

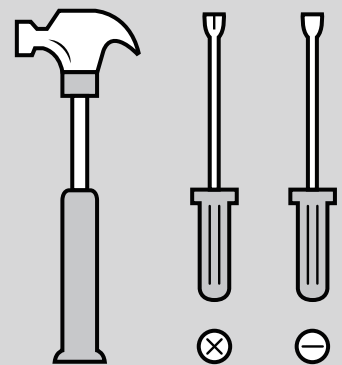

View our assembly video online:
WWW.MANHATTANCOMFORT.COM




Stuck? Question? We are here to help.
tel: 908-888-0818
e-mail: help@manhattancomfort.com

Support Site




Included in this package:

- A. Top Panel (1)
- B. Bottom Panel (1)
- C. Left Side Panel (1)
- D. Right Side Panel (1)
- E. Shelf Panel (1)
- F. Back Panel (1)
- G. Lower Front/Back Support Rails (2)
- H. Lower Left/Right Support Rails (2)
- J. Wooden Legs (4)
- K. Drawer Front Panels (2)
- L. Drawer Left Side Panels (2)
- M. Drawer Right Side Panels (2)
- O. Drawer Back Panels (2)
- P. Drawer Bottom Panels (2)

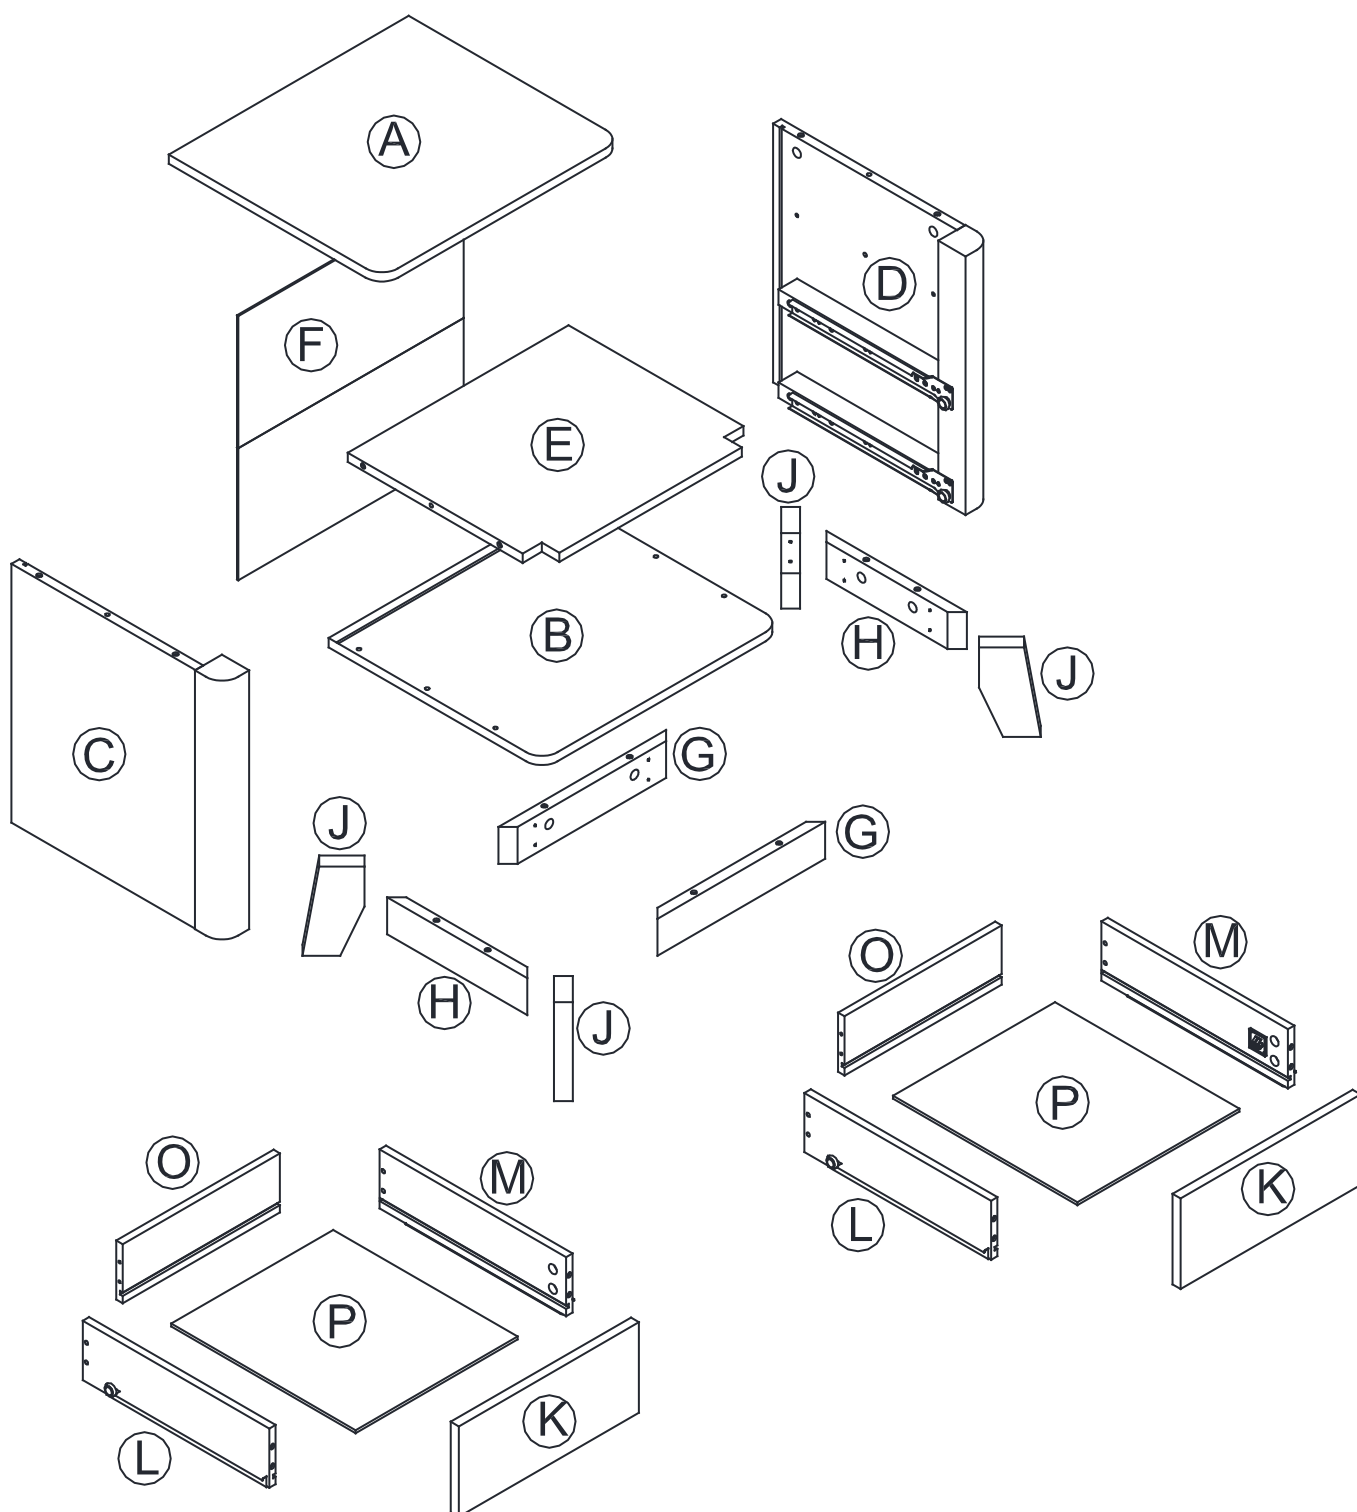


Hardware Identification


① CAM SCREW - 24PCS

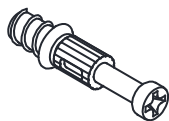


② HIDDEN CAM - 24PCS

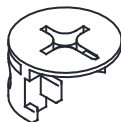


③ APPLIQUE CARD - 4PCS

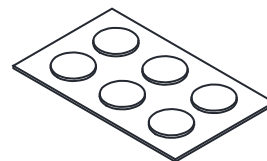


④ WOOD DOWEL - 6PCS

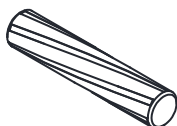


⑤ PULL - 2PCS

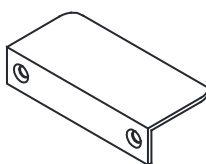

⑥ BRACKET - 4pcs

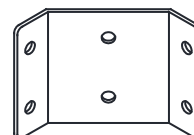

⑦ BACK PANEL BRACKET - 8pcs



⑧ PAN HEAD SCREW
M5*35mm - 12PCS



⑨ PAN HEAD SCREW
M4*12MM - 24pcs




⑩ FLAT HEAD SCREW
M3*16mm - 8PCS







⑪ FLAT HEAD SCREW
M3*12mm - 4pcs



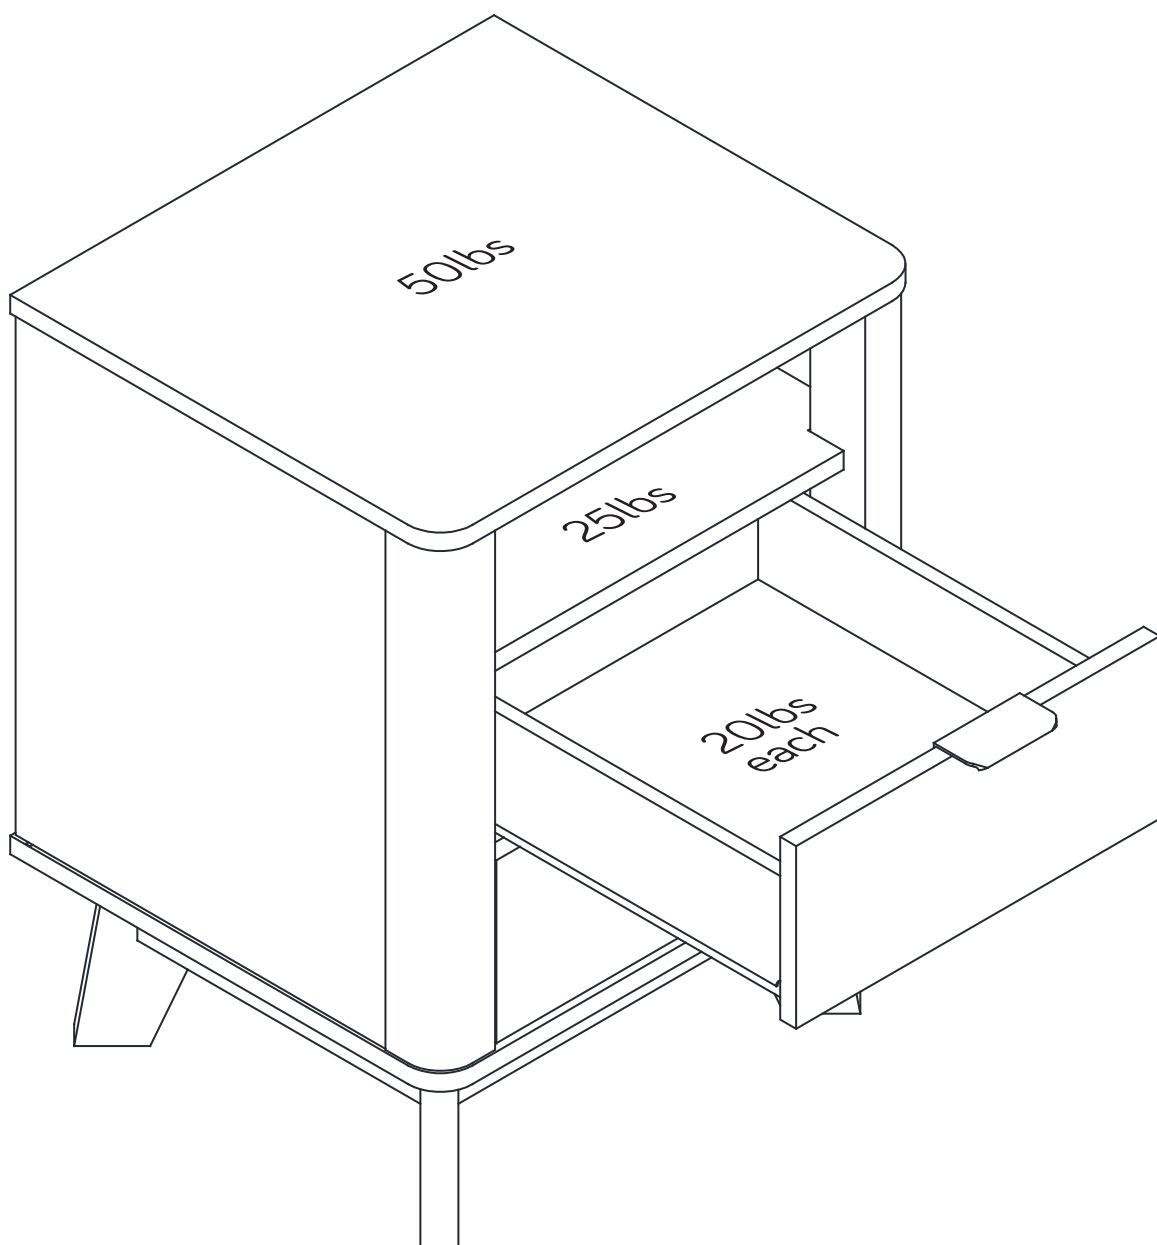


Step 1

- ◆ Insert 24 Cam Screw (1) into the Top Panel (A), Bottom Panel (B), Left and Right Side Panels (C, D), and Drawer Front Panels (K).

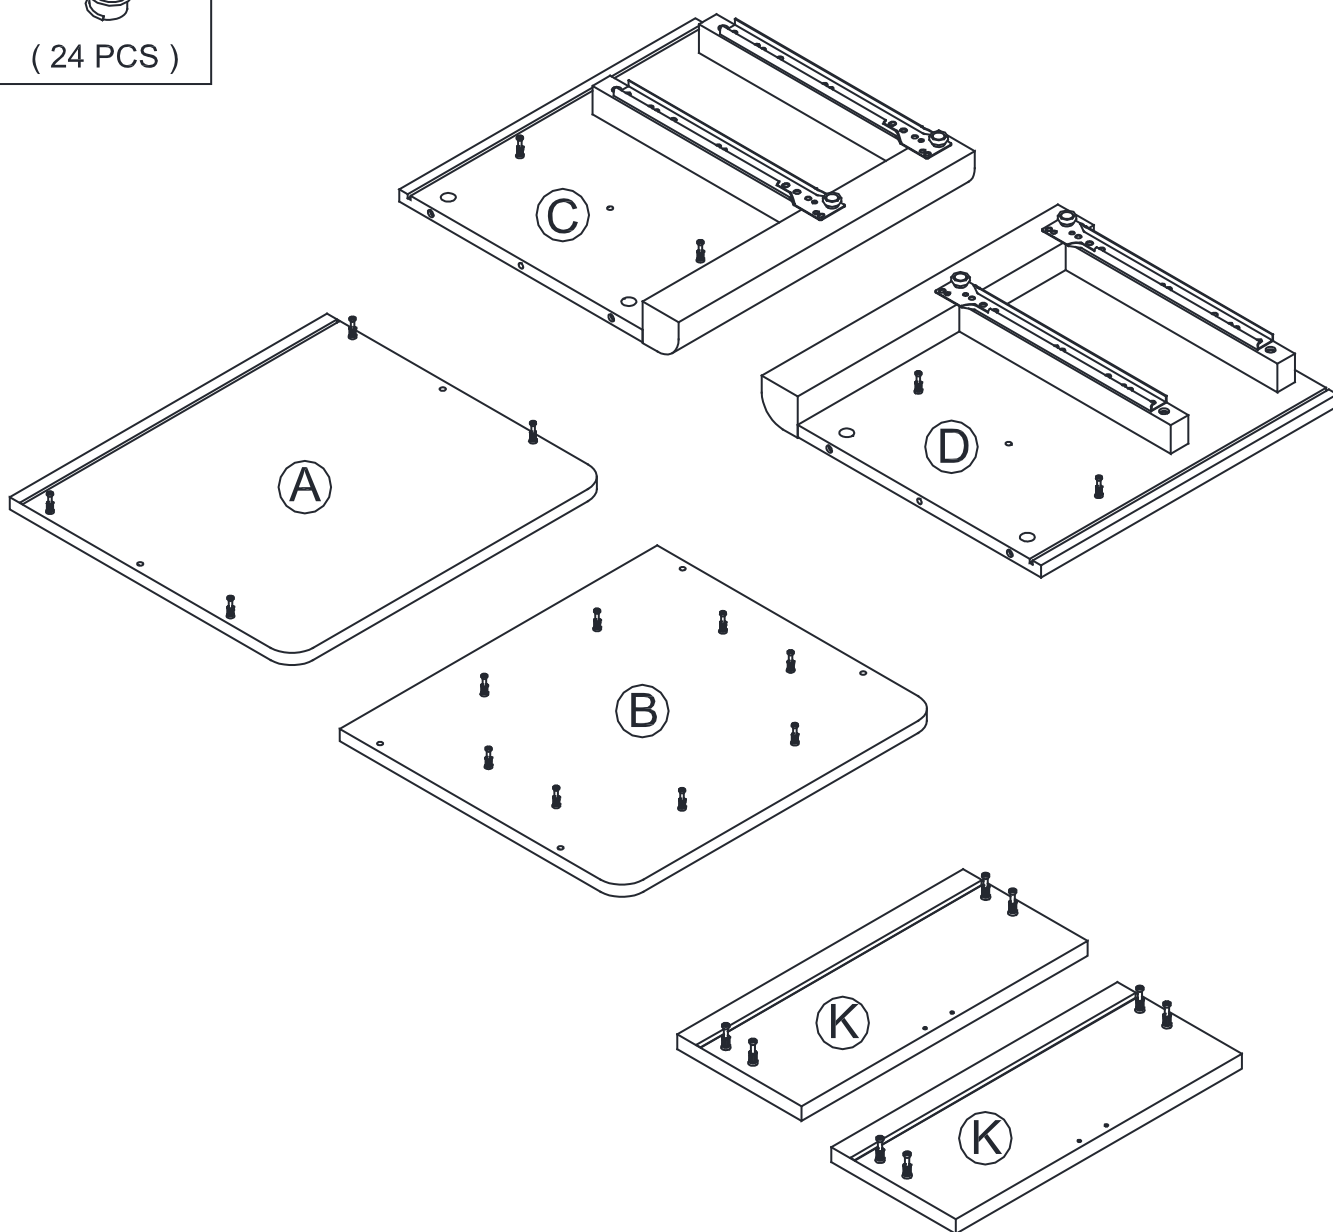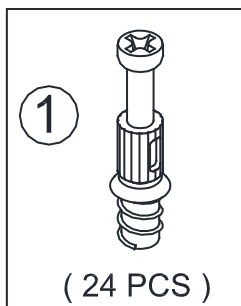






Step 2

- ◆ Install 24 Hidden Cams (2) into the Left and Right Side Panels (C, D), Shelf Panel (E), Lower Front/Back Support Rails (G), Lower Left/Right Support Rails (H), and Drawer Side Panels (L, M).

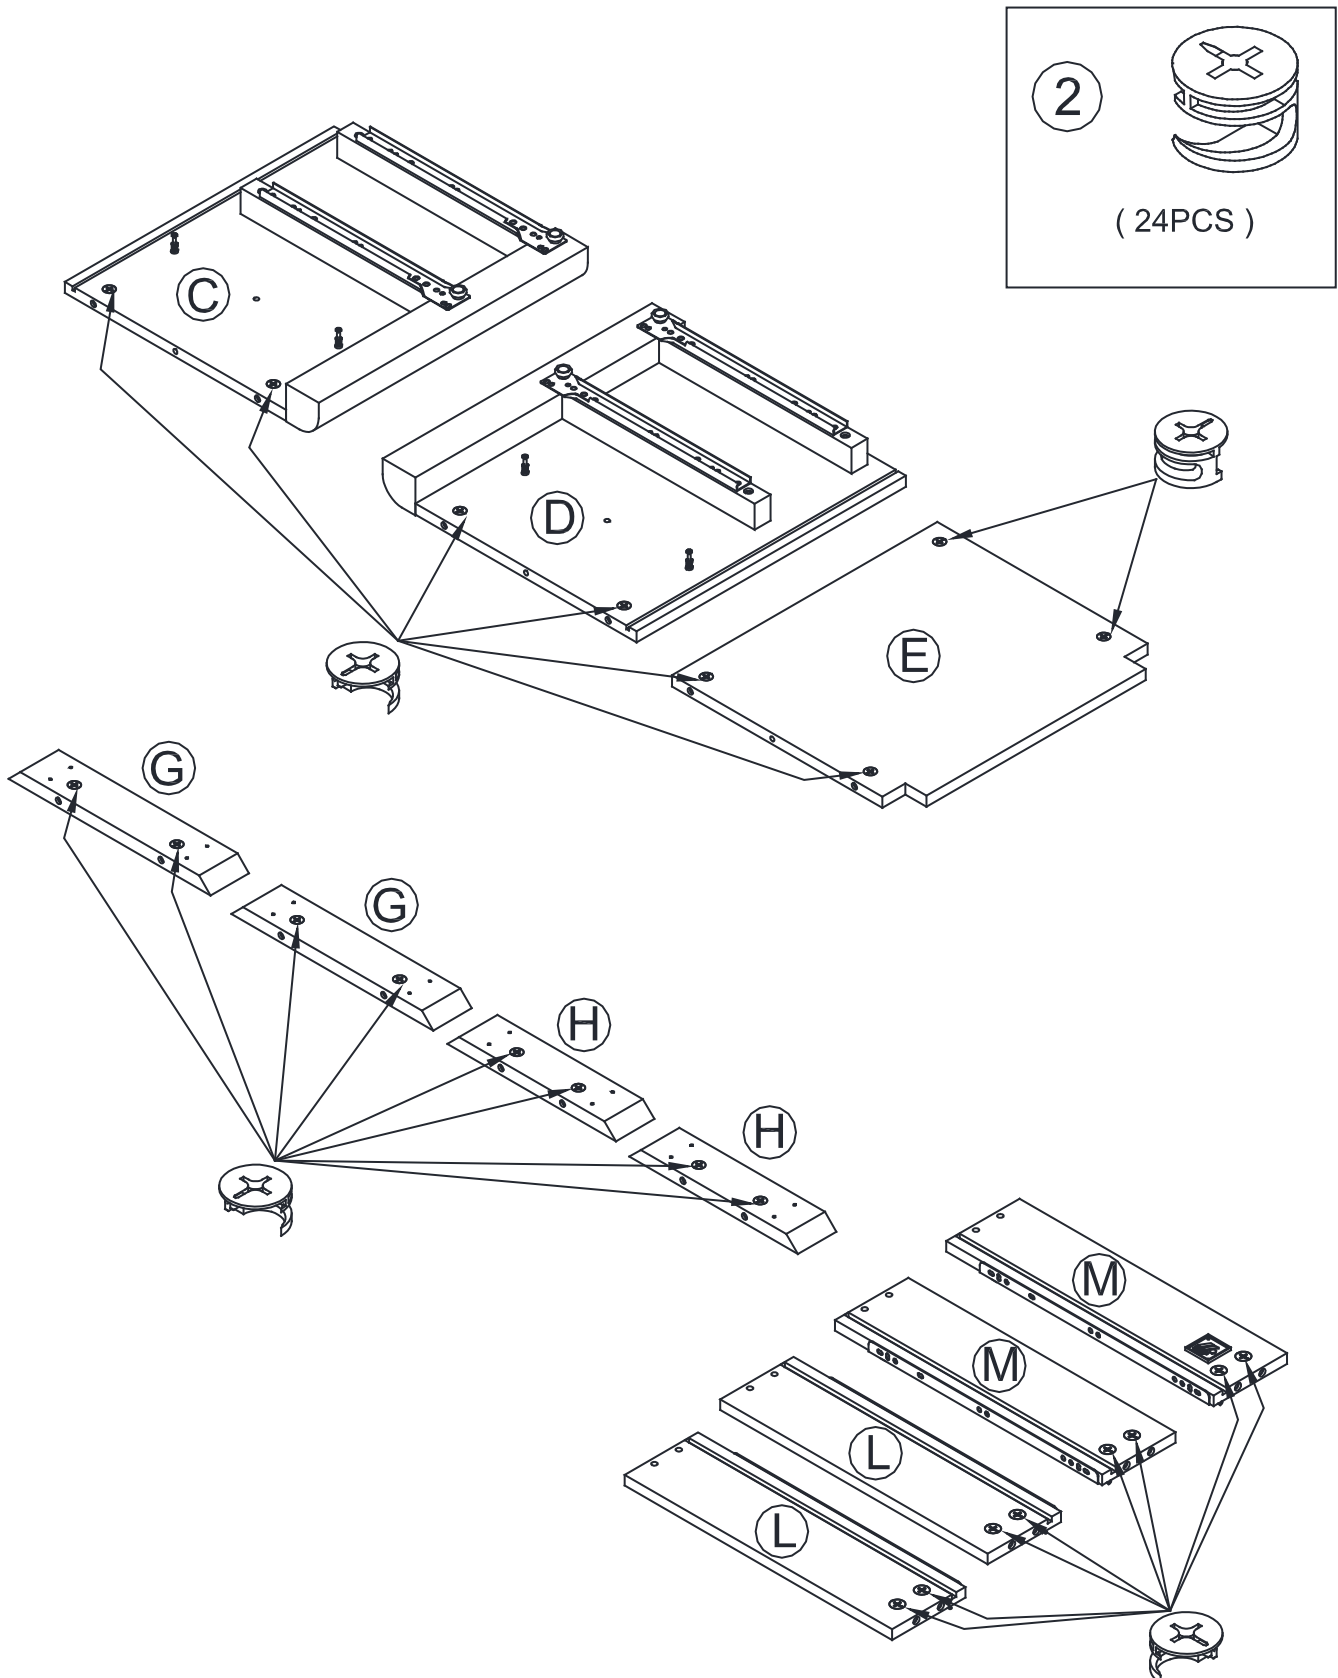





Step 3

- ◆ Use Wood Dowels (4) and cam locks to fasten the Left and Right Side Panels (C, D) to the Shelf Panel (E).

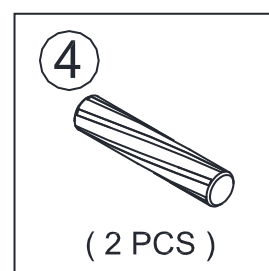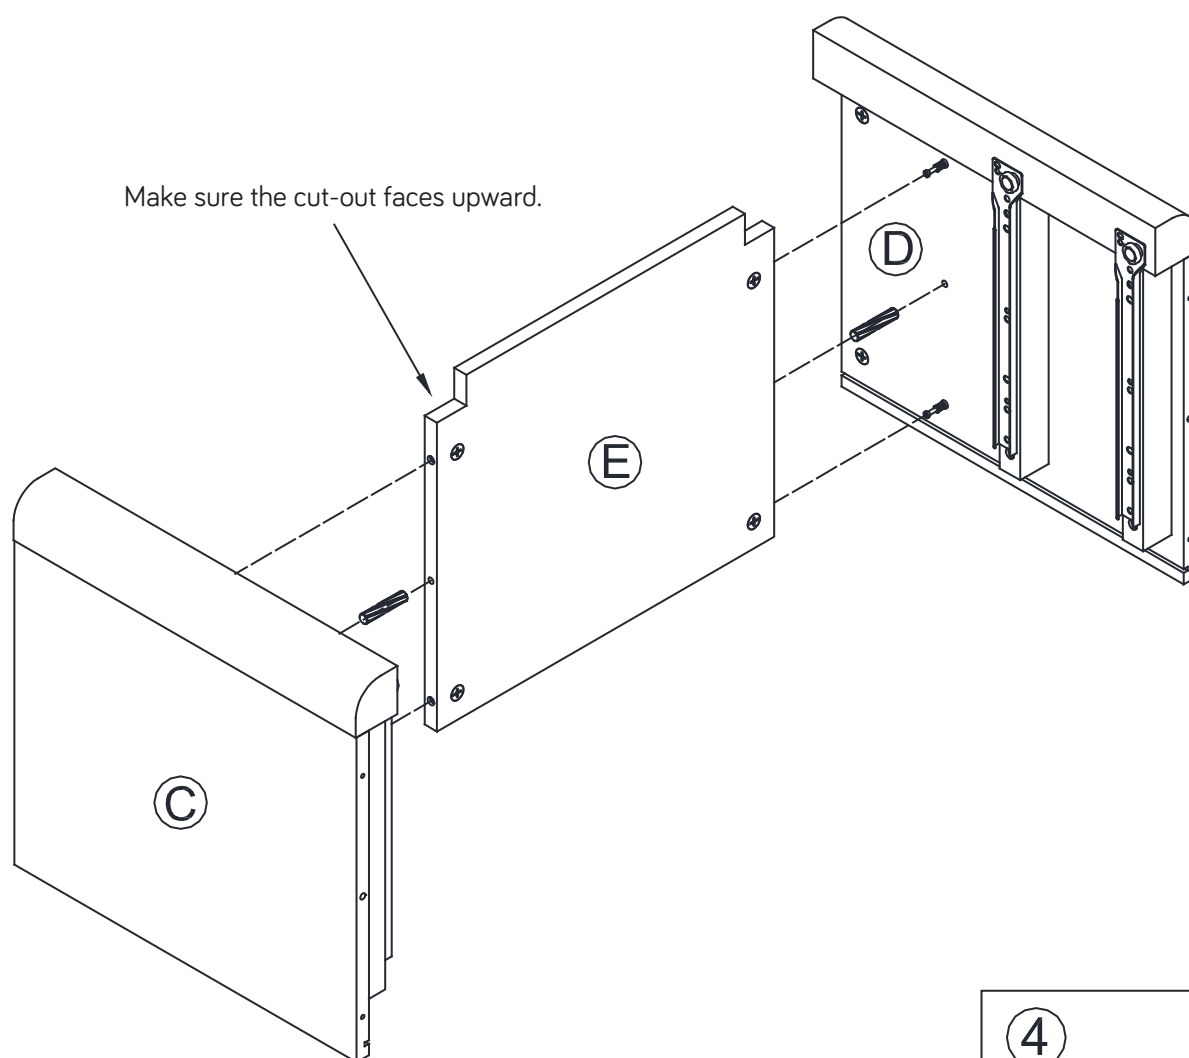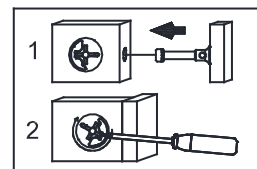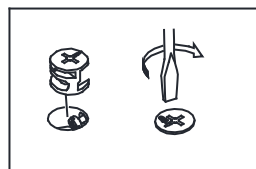
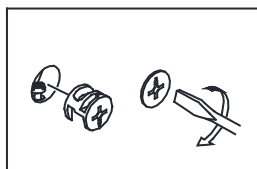


Step 4

- ◆ Use Wood Dowels (4) and cam locks to fasten the Left and Right Side Panels (C, D) to the Top Panel (A).

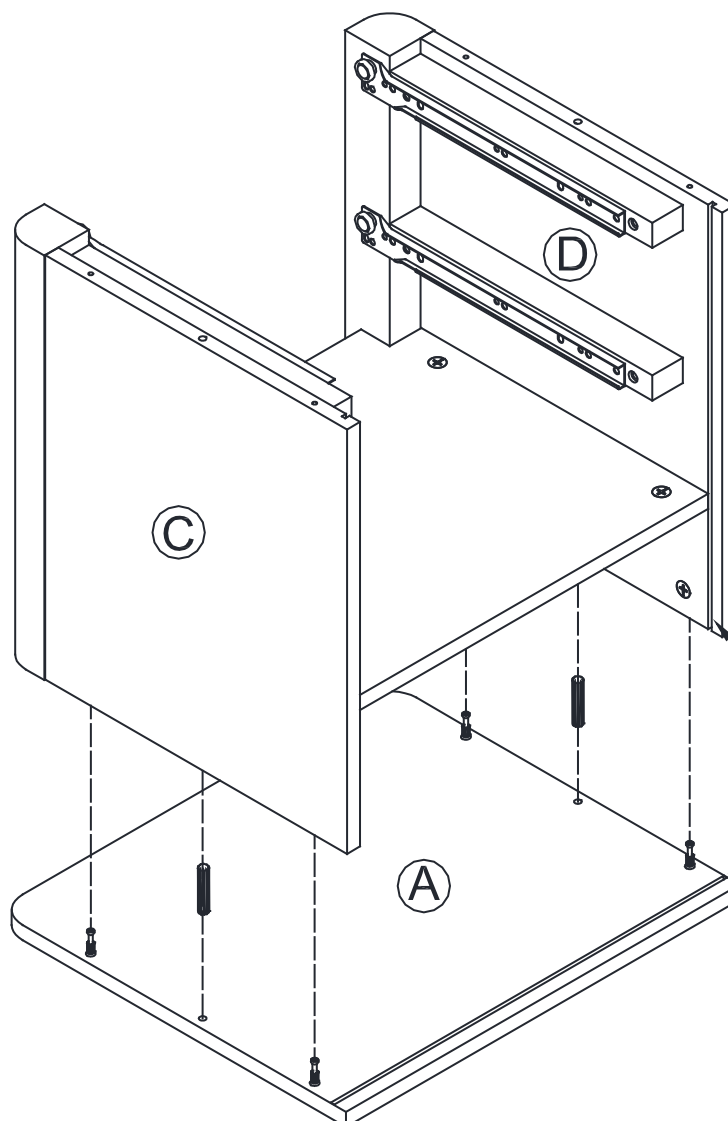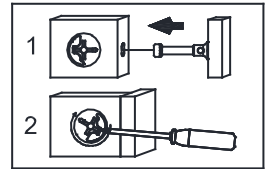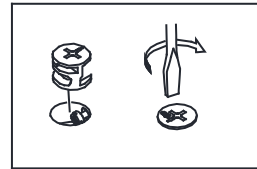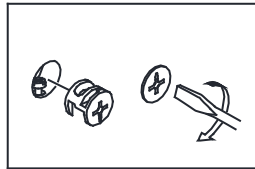


Make sure the groove is facing the correct direction.

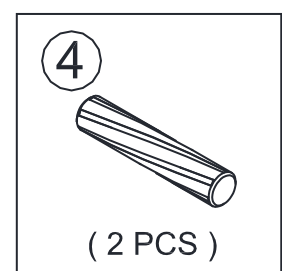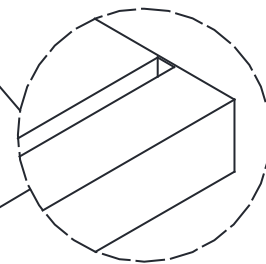




Step 5

- ◆ Align the Back Panel (F) and insert it into the grooves of the Left and Right Side Panels (C, D) and the Top Panel (A).

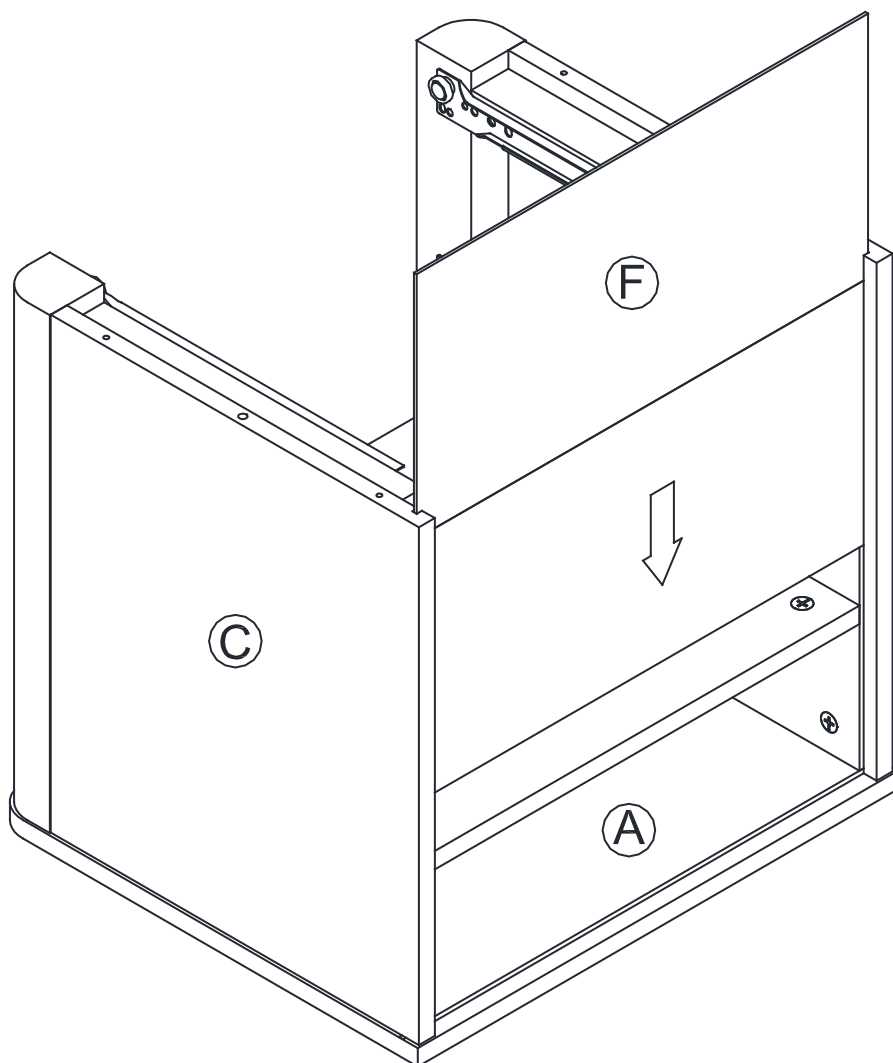




Step 6

- ◆ Use Pan Head Screws (8) and Wood Dowels (4) to fasten the Bottom Panel (B) to the Left and Right Side Panels (C, D).

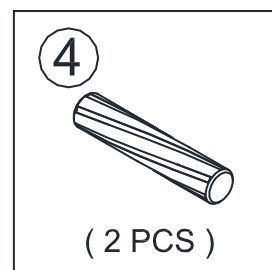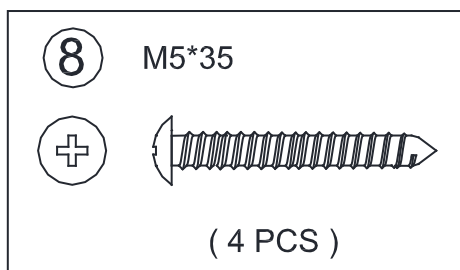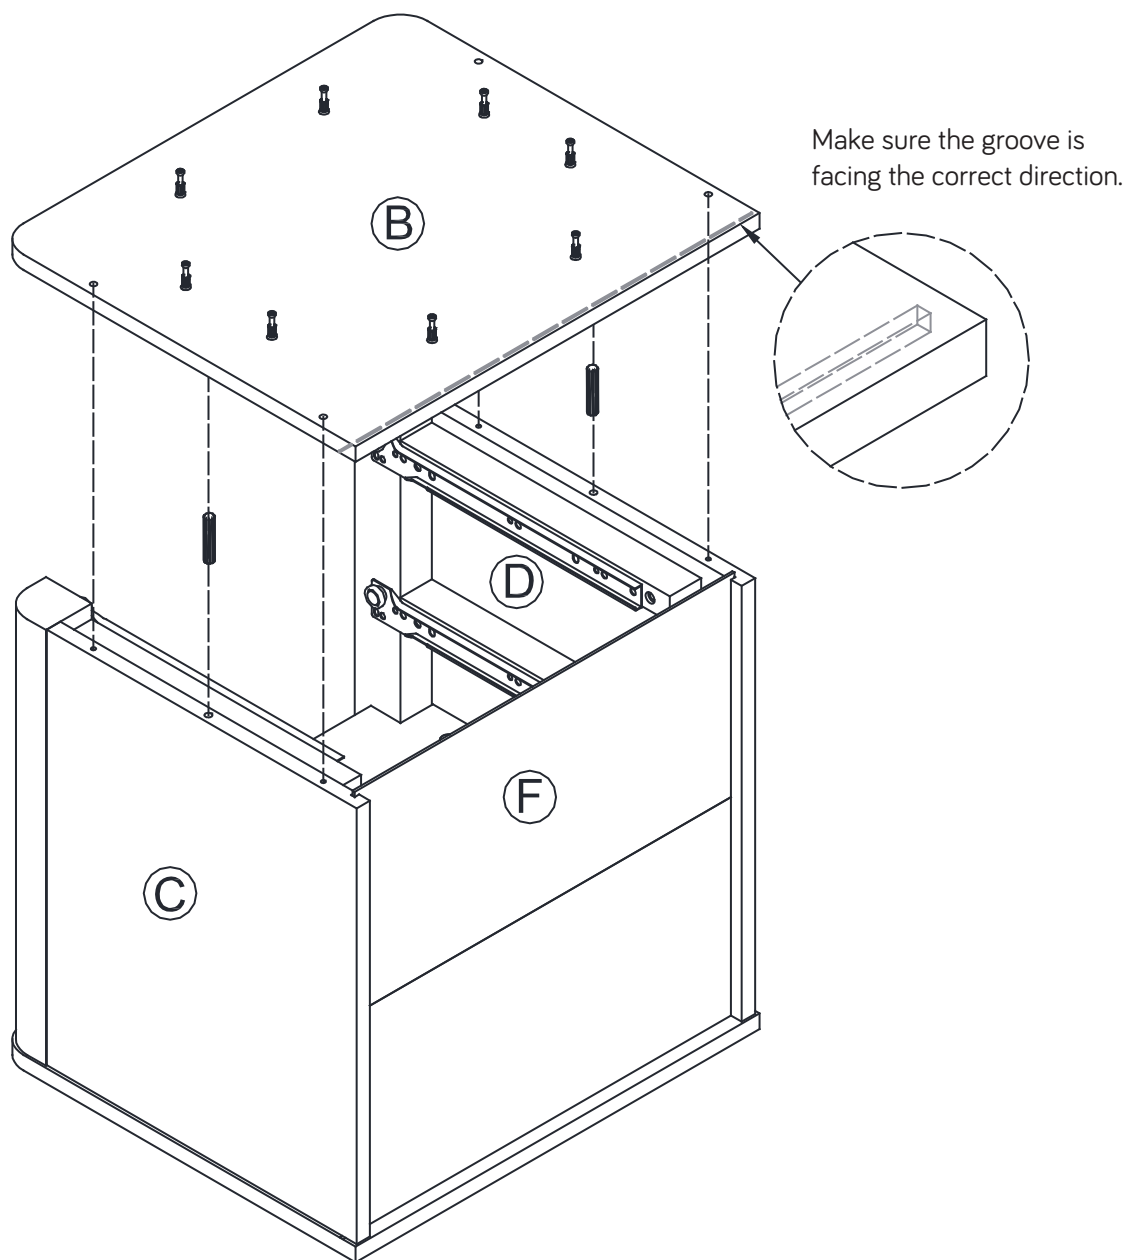





Step 7

- ◆ Use Brackets (6) and Pan Head Screws (9) to secure the Lower Front/Back Support Rails (G) and Lower Left/Right Support Rails (H) to the Wooden Legs (J).

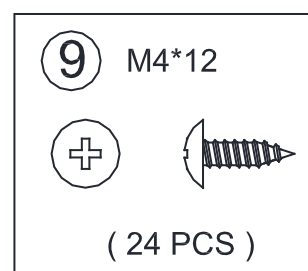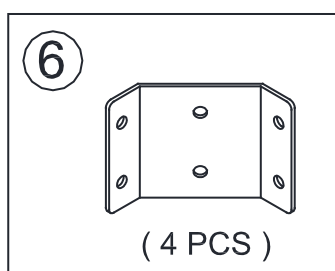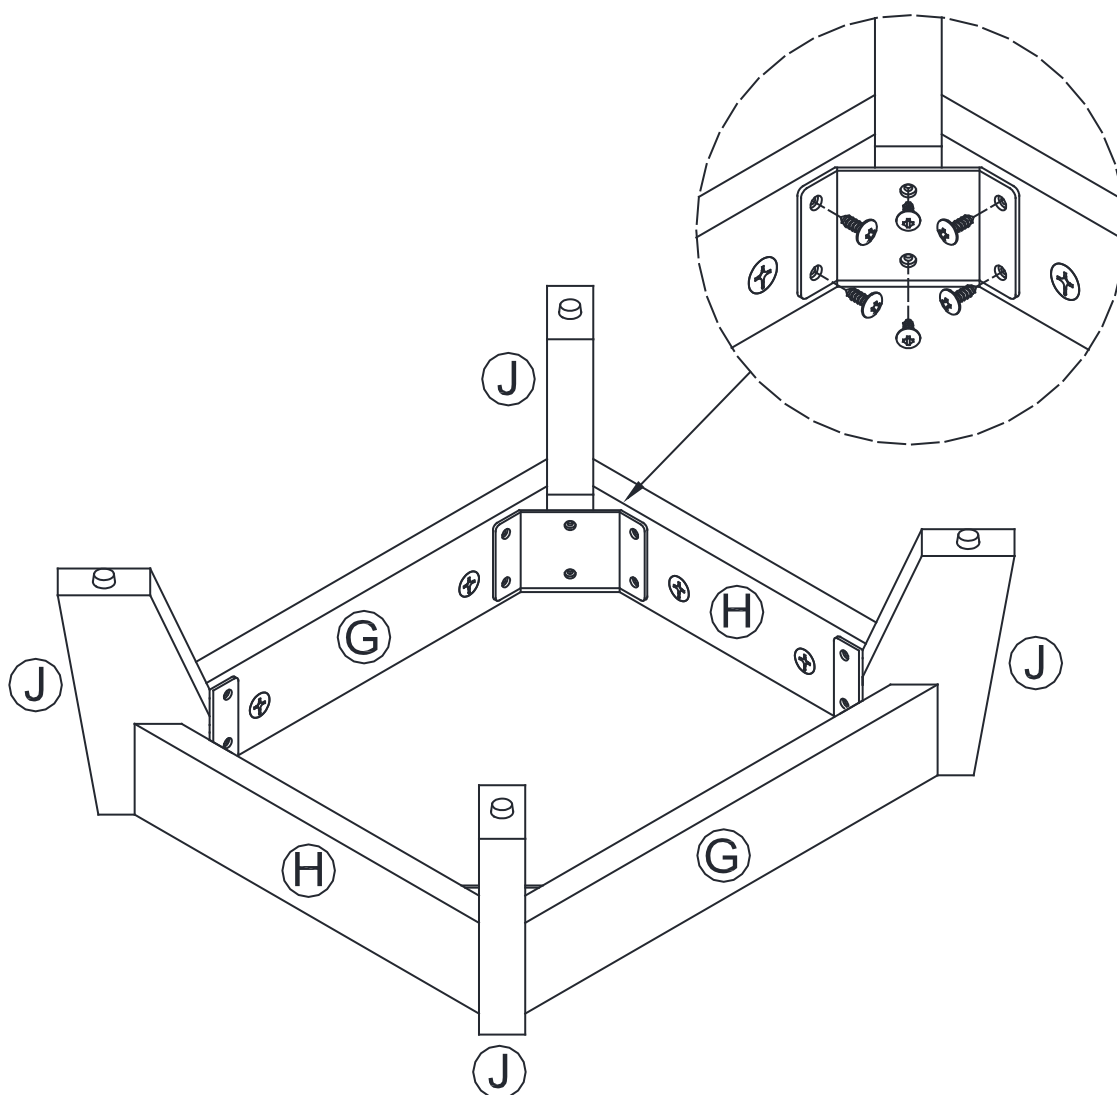




Step 8

- ◆ Use cam locks to fasten the Lower Front/Back Support Rails (G) and Lower Left/Right Support Rails (H) to the Bottom Panel (B).

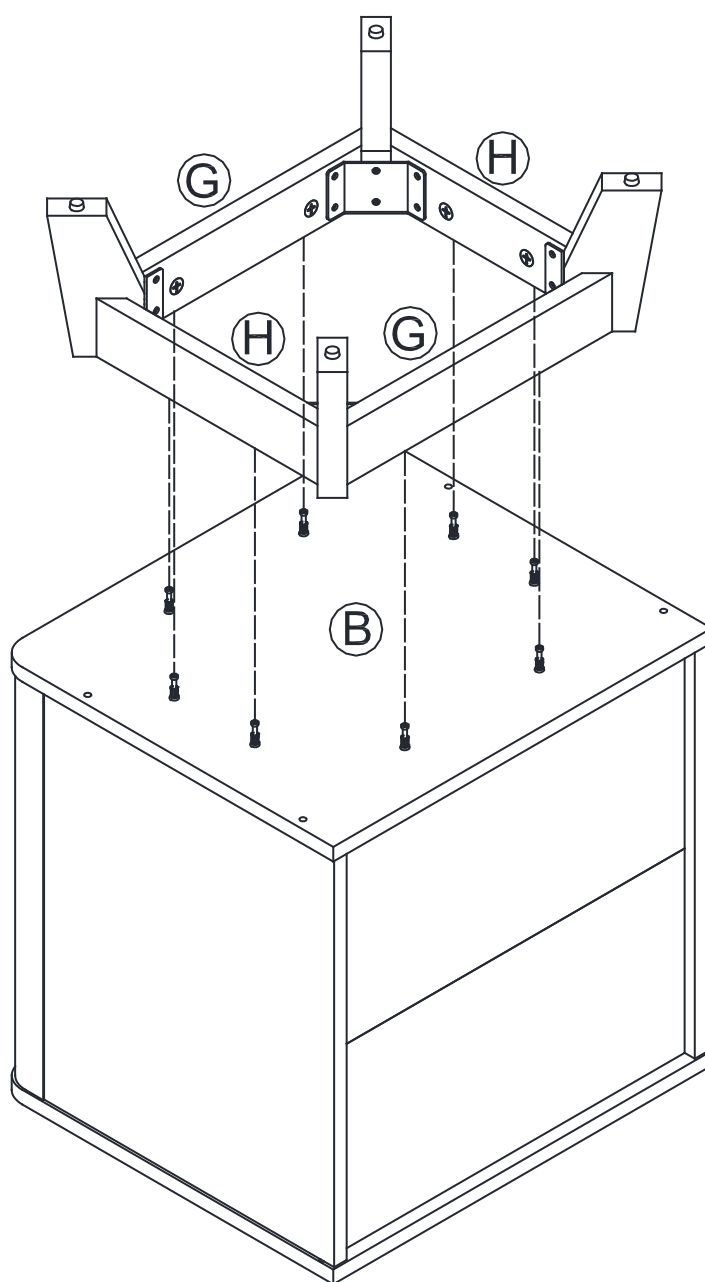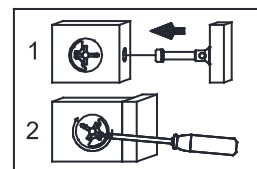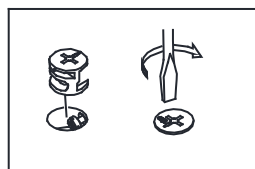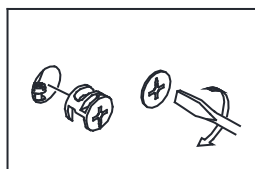


Step 9

- ◆ Use Back Panel Brackets (7) and the Flat Head Screws (11) to secure the Back Panel (F) to the Left and Right Side Panels (C, D) and the Top and Bottom Panels (A, B).

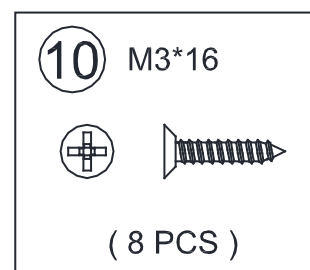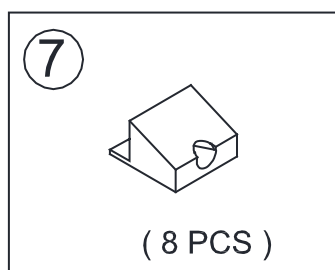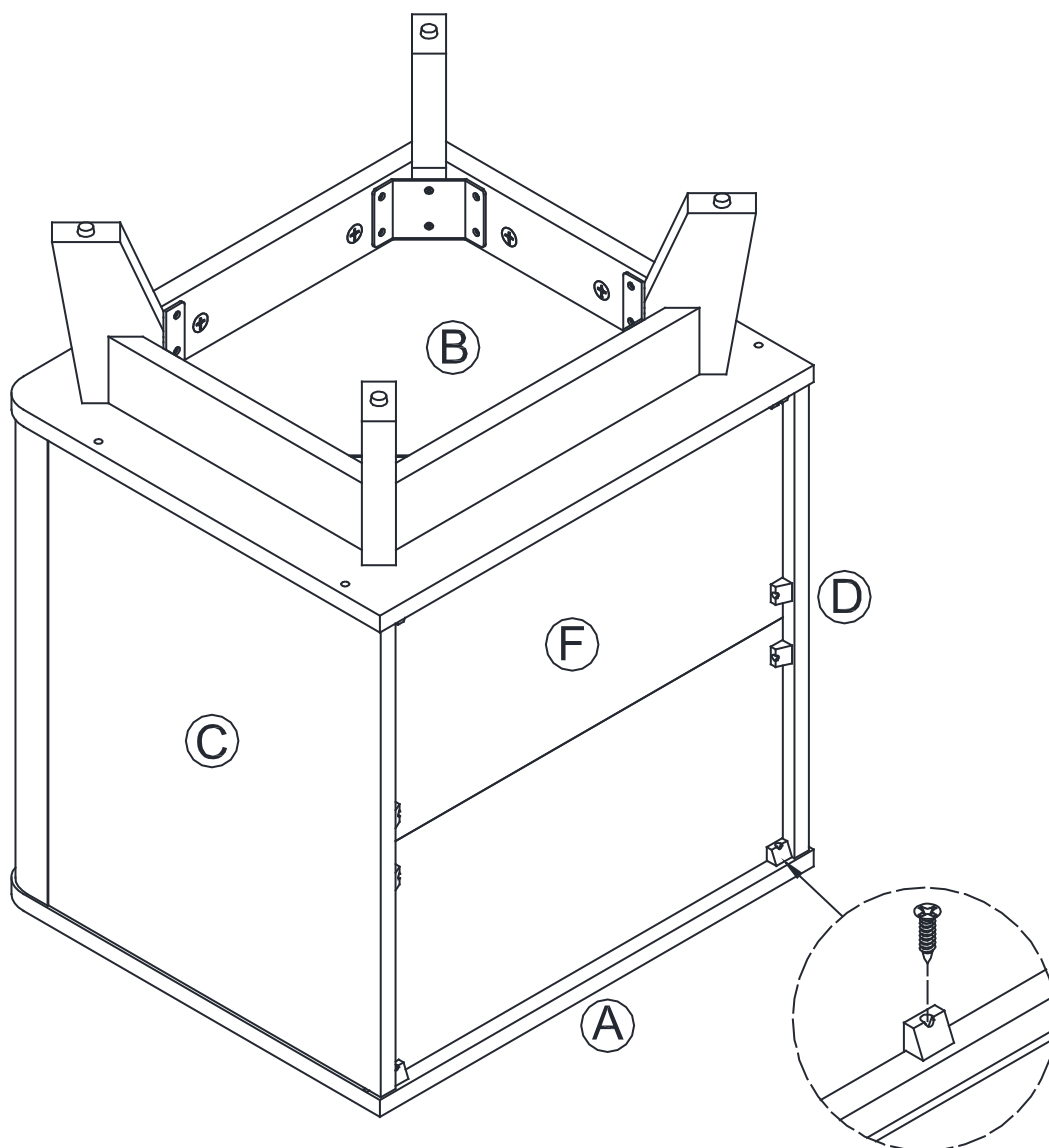


Step 10


- ◆ Use Pan Head Screws (8) to fasten the Drawer Side Panels (L, M) to the Drawer Back Panel (O).

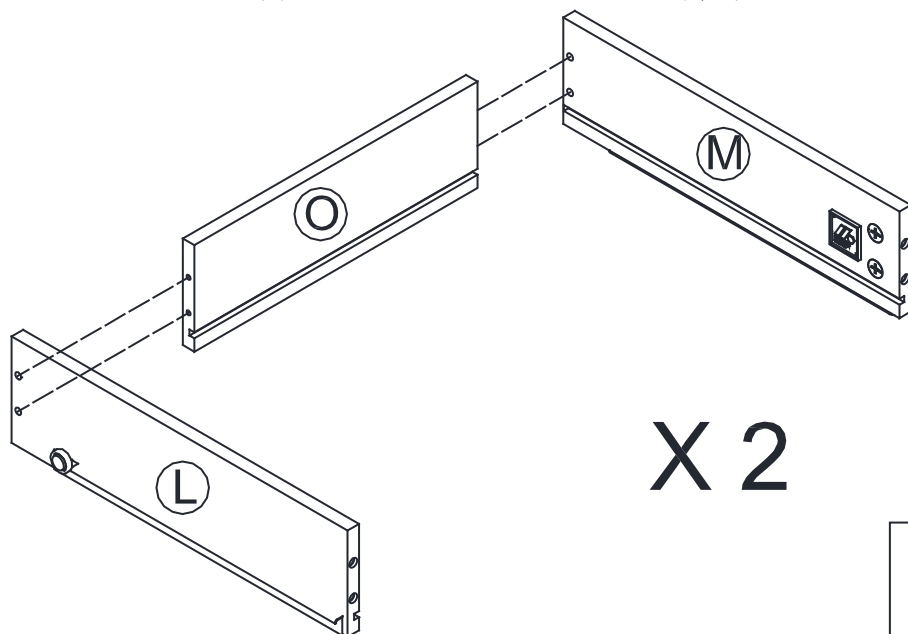

X 2

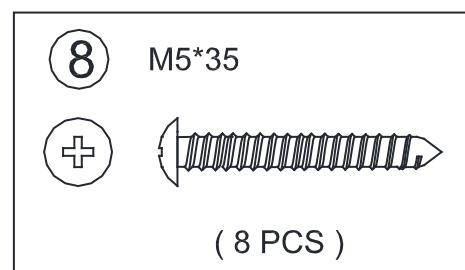





- ◆ Slide the Drawer Bottom Panel (P) into the grooves of the Drawer Left and Right Side Panels (L, M) and the Drawer Back Panel (O).

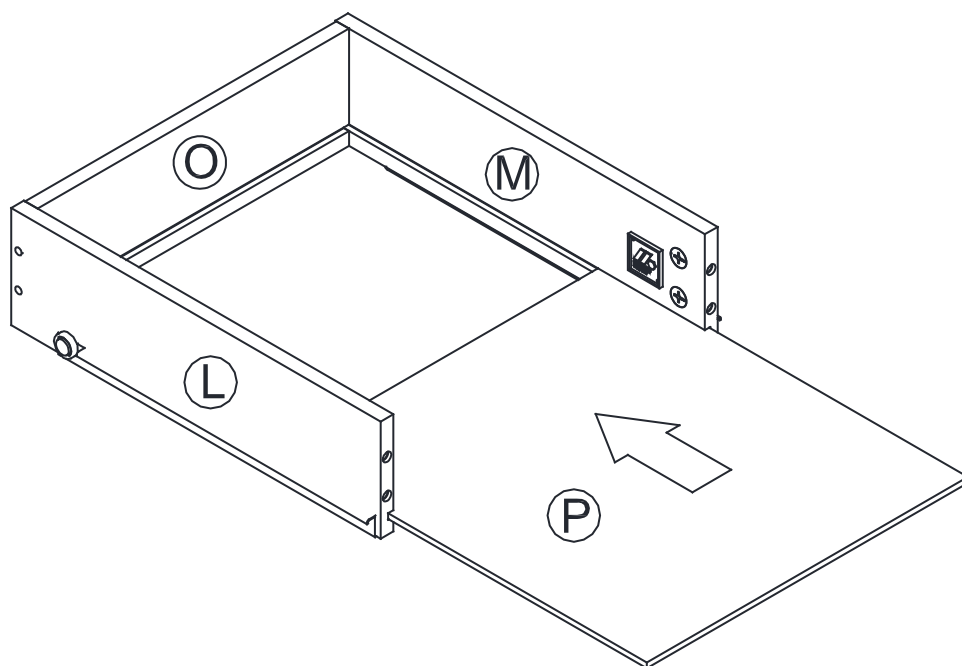

X 2

Step 11


- ◆ Use cam locks to fasten the Drawer Front Panel (K) to the Drawer Left and Right Side Panels (L, M).

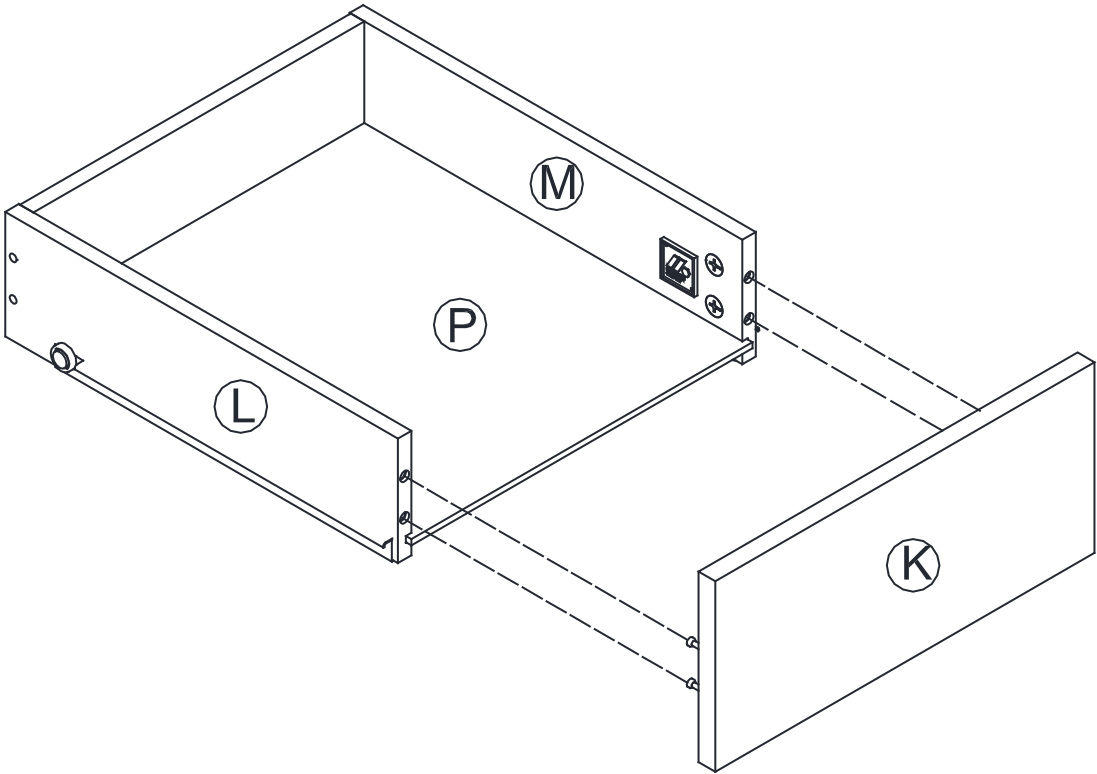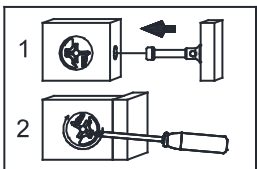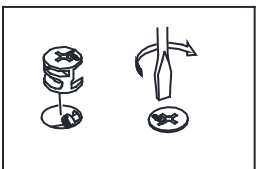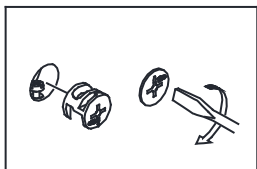



X 2

Step 12

- ◆ Use Flat Head Screws (11) to attach the Pull (5) to the Drawer Front Panel (K).


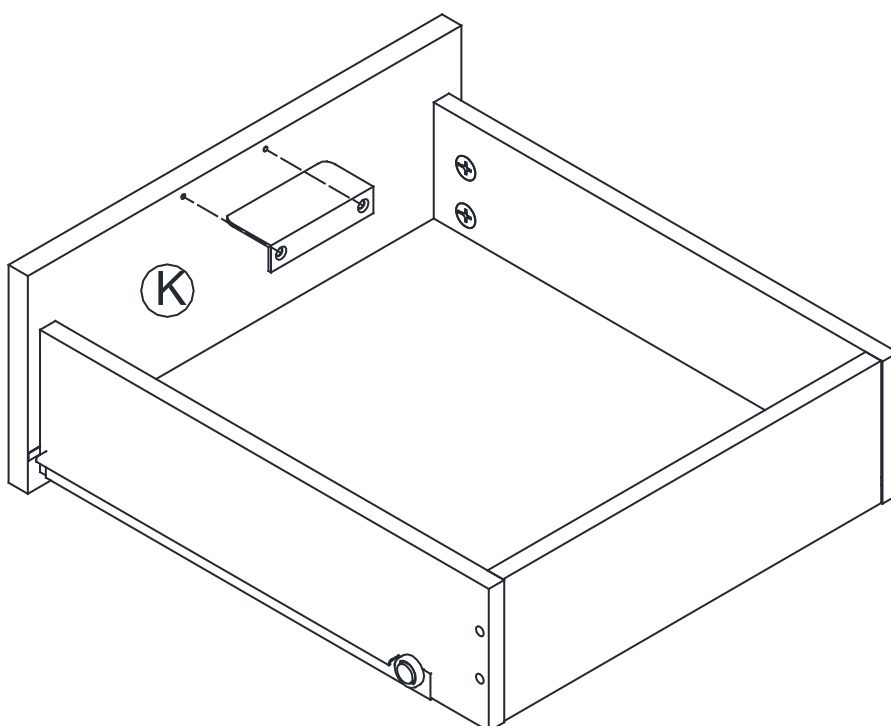


X 2

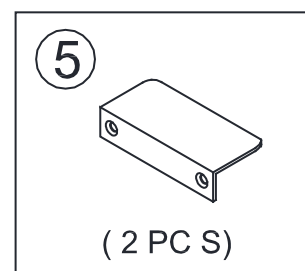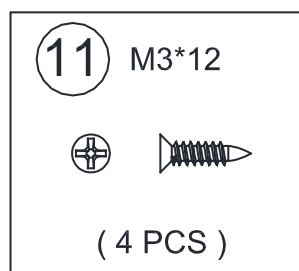

Step 13


- ◆ Align the drawer slides and push the drawers into place.

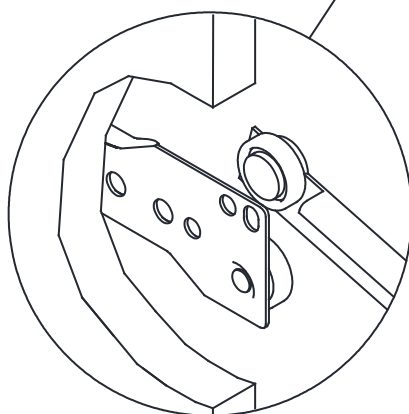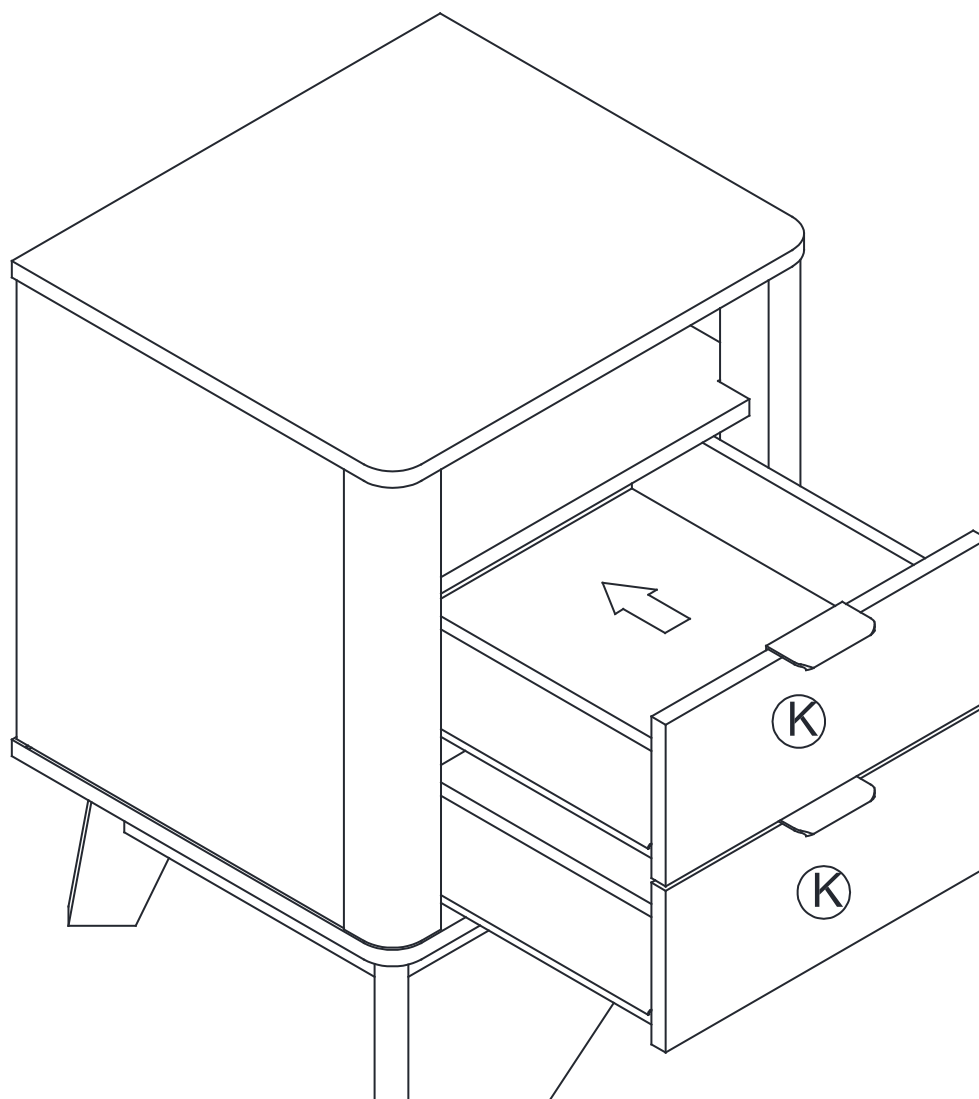

Place the roller on the SLIDE
behind the roller on the RAIL.

Step 14

- ◆ Peel APPLIQUES from the APPLIQUE CARD (3) and stick them onto each visible HIDDEN CAM.

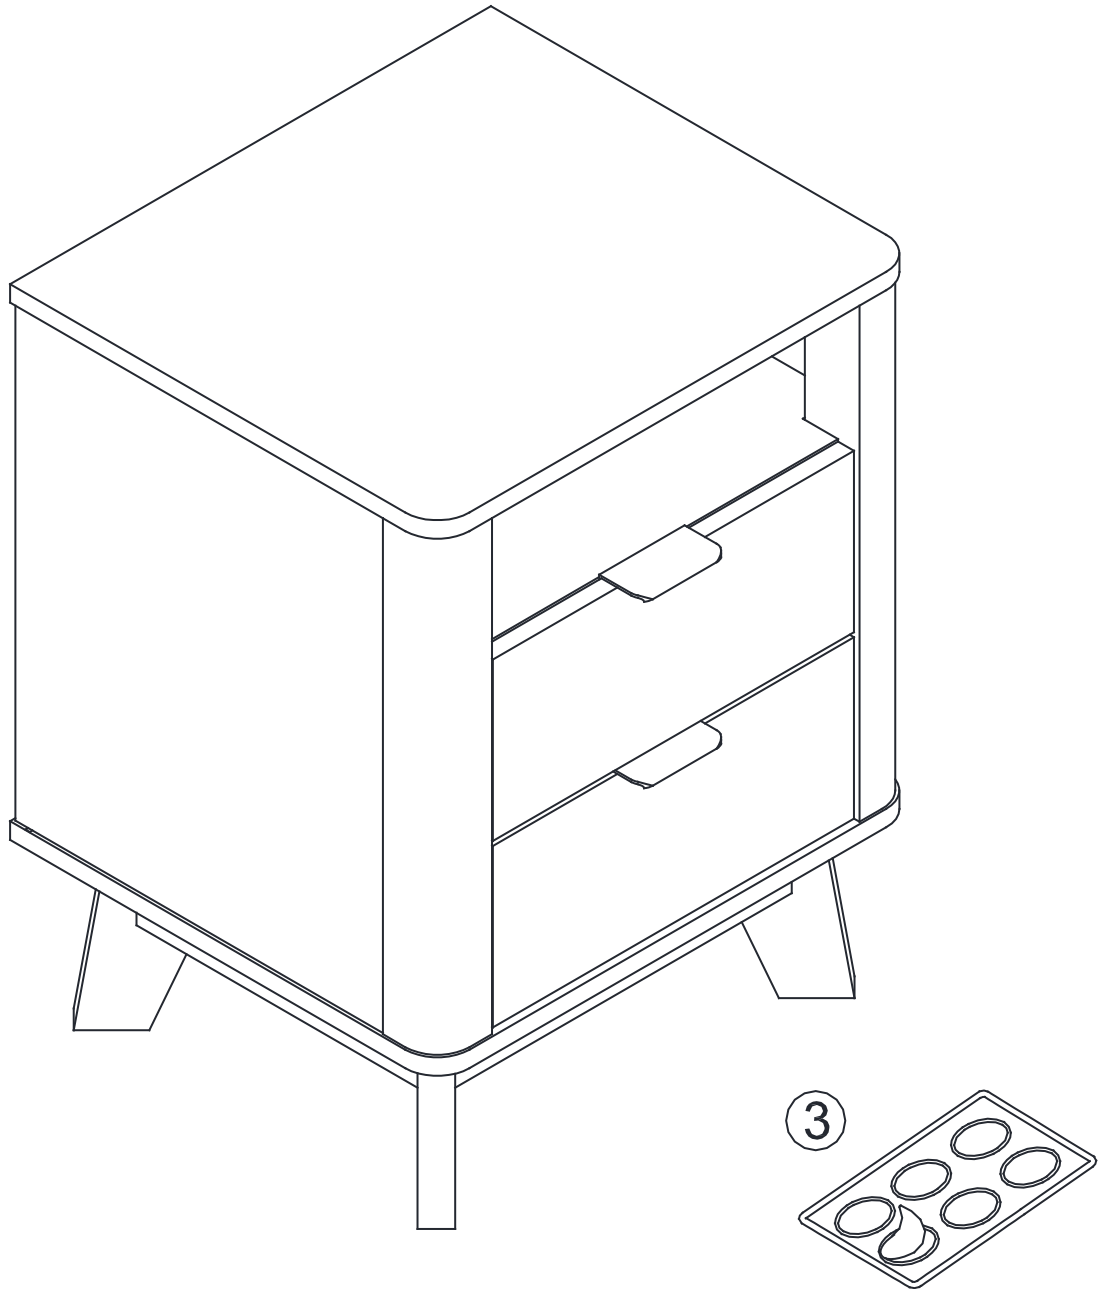



MANHATTAN COMFORT

WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810

908-888-0818