


EURONICS

Tierra

Soap Dispenser

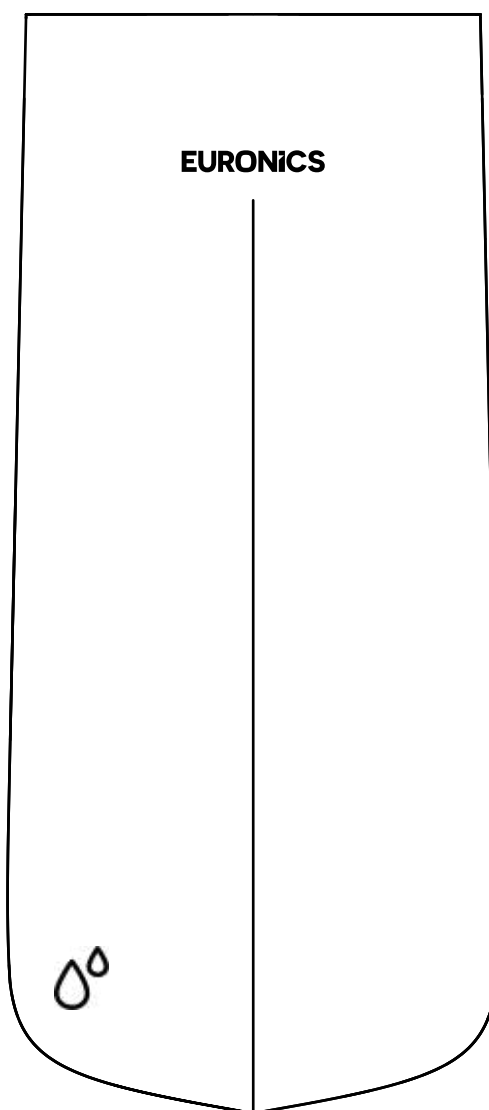

USER MANUAL INSTRUCTION

Maintenance and Care

Refill Soap: Refill the soap reservoir when the soap level is low. The eye level allows you to quickly check the soap level.

Replace Batteries: When the low battery indicator appears or if the dispenser stops functioning, replace the 4 AA batteries. Use fresh batteries for optimal performance.

Cleaning the Dispenser : Always Wipe or polish with the grain direction of satin finishes. Remove any cleaning or soap residue from stainless surface with water and wipe dry with clean cloth.

Caution: Avoid cleaning products containing bleach, hydrochloric acids and or chlorides, these are frequently found in toilet bowl or tile cleaners and in abrasive scrubbing powders. Avoid use of steel wool which can leave behind fine particles that cause surface rust. Avoid use of abrasive cleaners or bright polish stainless steel surfaces

Safety Warnings


- Do not submerge the soap dispenser in water.
- Keep away from direct sunlight and heat sources to prevent damage.
- Use only liquid soap types. Viscous or gel soaps may cause clogging.
- Keep out of reach of children.

Key Features


Operation	Automatic Infr-Red Sensor
Material	304 Stainless Steel
Capacity	1100 ML
Power	Battery (4 x AA Alkaline Duracell)
Sensing Distance	5-9 cm
Warranty	6 Months

Operation Intruction


Auto Soap Dispenser Operation Instruction

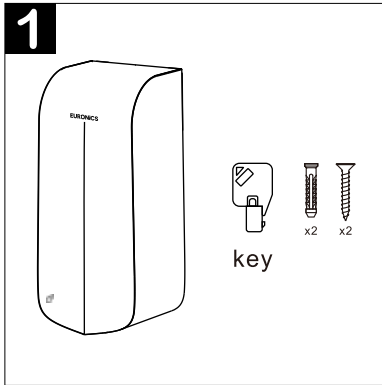


**Dispenser and
Accessory package**

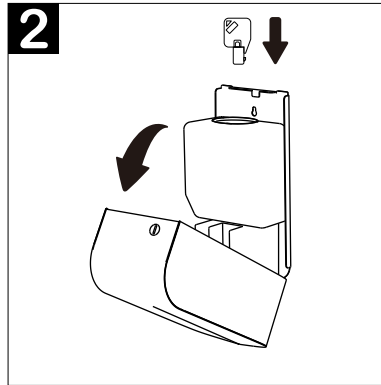


**Insert key on top
Pull to open**

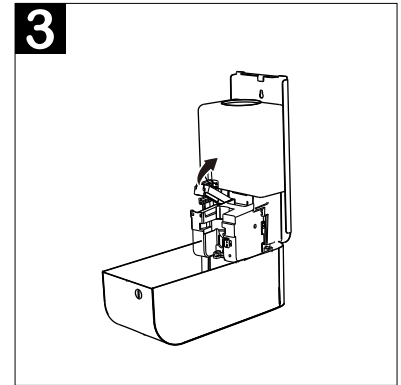


Open the battery cover

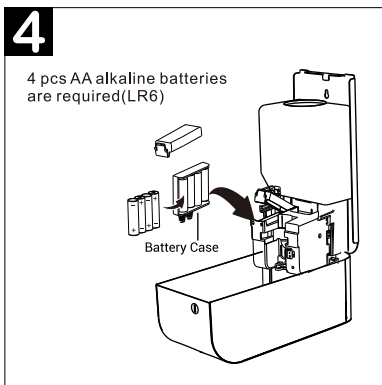


**Put batteries properly in the battery case,
and then load them into the dispenser.**

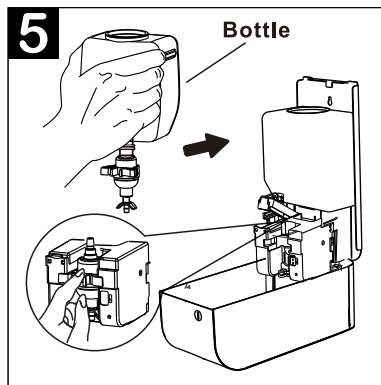


**Make sure the pump is
firmly seated in the holder**

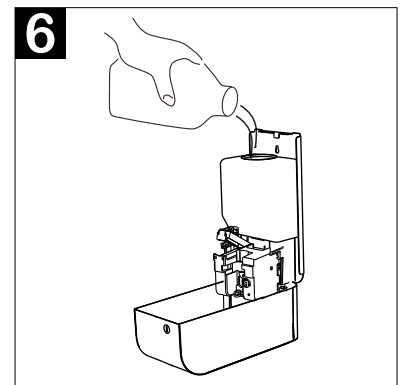


Fill the bottle

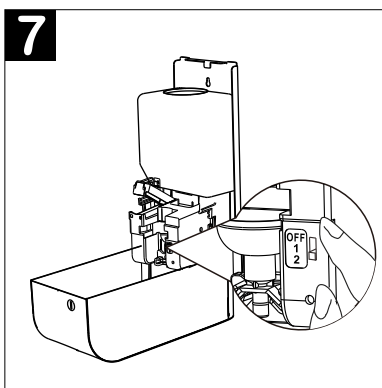

**Adjust to dispense one or
two shots every time**

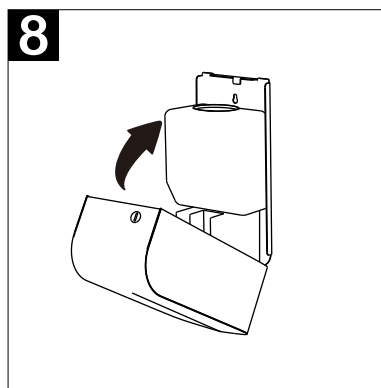


Close to lock

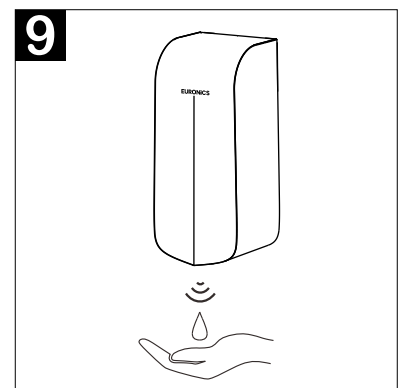


Automatic sensor to dispenser


Tierra Series

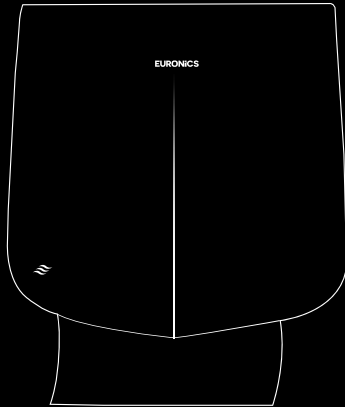

Paper Dispenser

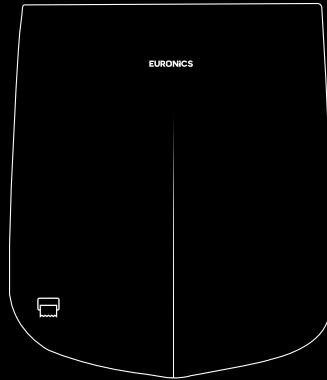

Hand Dryer

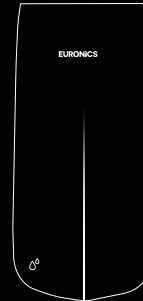

Soap Dispenser



EURONICS INDUSTRIES PVT. LTD.

8010 930 930 | in@euronics.co.in | www.euronics.co.in

Offices : Gurugram | Bangalore | Mumbai | Pune | Hyderabad | Ahmedabad | Surat | Chennai | Kolkata | Kerala | Indore
| Chandigarh | Visakhapatnam | Lucknow | Nagpur | Goa | Hubli | Coimbatore | Trivandrum | Guwahati | Jaipur | Kochi
| Rajkot | Bhopal | Patna | Kanpur | Vadodara | Bhubaneswar | Noida | Jammu | Dehradun | Ranchi | Udaipur